



WIPLINE FLOATS • SKIS • MODIFICATIONS • AIRCRAFT SALES
AVIONICS • INTERIOR • MAINTENANCE • PAINT REFINISHING

SERVICE MANUAL & ICA
for the
AMPHIBIAN GEAR ADVISORY SYSTEM MkII
and
LASER GEAR ADVISORY SYSTEM

Document No.: WLGAS-24-01

Revision C

LOG OF REVISIONS

REVISION	DESCRIPTION	DATE
A	INITIAL RELEASE	7/14/2015
B	Changed 60 sec to 10 secs. Revised weight of laser Removed Limitations chapter.	3/14/2016
C	Added ULS Laser weight. Added battery removal note.	1-11-17

View the most current revision of this ICA at www.wipaire.com

LIST OF EFFECTIVE PAGES

PAGES	REVISION	PAGES	REVISION	PAGES	REVISION
1	C				
2	C				
3	A				
4	A				
5	A				
6	A				
7	A				
8	B				
9	C				
10	A				
11	A				
12	A				
13	C				
14	A				
15	A				
16	A				
17	A				
18	A				

TABLE OF CONTENTS

CHAPTER 1 INTRODUCTION AND GENERAL INFORMATION.....	7
1.0 INTRODUCTION.....	7
1.1 GENERAL INFORMATION ON AGAS MKII/ LGAS INSTALLATION.....	8
1.2 REFERENCES.....	9
1.3 SPECIFICATIONS.....	9
CHAPTER 2 SERVICING AND MAINTENANCE.....	11
2.0 SERVICING AND MAINTENANCE.....	12
2.1 CHANGING BATTERY.....	12
CHAPTER 3 RECOMMENDED PROCESSES, PRODUCTS AND INSPECTION CHECKLIST	14
3.0 SERVICING INSTRUCTIONS.....	15
3.1 MAINTENANCE CHECKLIST.....	16

THIS PAGE INTENTIONALLY LEFT BLANK



NEW CUSTOMER INFORMATION

Customer Name	
Billing Address	
Shipping Address	
Phone Number	Fax Number
Purchasing Contact	Phone Number
E-Mail	Fax Number
Accounts Payable Contact	Phone Number
E-Mail	Fax Number
Type(s) of Aircraft Owned or Maintained	
Model(s) of Floats and Skis Owned or Maintained	
FedEx and/or UPS account number (if applicable)	

Please return to Wipaire Customer Service:

Fax 651-306-0666

Phone 651-306-0459

CustomerService@wipaire.com

CHAPTER 1

INTRODUCTION AND

GENERAL INFORMATION

1.0 INTRODUCTION

This manual is provided for the owners of an AGAS MkII / LGAS systems installed on amphibious float equipped aircraft. It has two main priorities:

To inform owners of the level and amount of servicing required to properly maintain their airplane, and to provide technical data and servicing as specified to maintenance professionals charged with servicing airplanes modified by this STC.

The service products referred to throughout this manual are described by their trade names and may be purchased from Wipaire Parts.

Department:

We, at Wipaire, welcome your purchase and look forward to years of satisfying exchanges with you. Our customer service department, WipCaire, is available for your questions 24 hours a day, 7 days a week, where ever you are in the world.

Parts Sales and Technical Support Dept:

Wipaire, Inc.
1700 Henry Avenue – Fleming Field
South St. Paul, MN 55075
Telephone: (651) 306-0459
Fax: (651)-306-0666
Website: www.wipaire.com
Email: CustomerService@wipaire.com

When a part of this installation is significantly changed or an additional inspection is recommended or required, often a service letter and/or kit is issued. If a warranty is issued, most commonly it is for an 18 month time period, so it is crucial to check for service letters specific to your float model at each periodic inspection to be eligible.

Service Manuals and the installation documents included are also revised periodically and also to be kept updated. Service letters, Service Kits and Service Manuals are available on our web site at no charge, www.wipaire.com.


NOTE:

**IT IS CRITICAL TO CHECK FOR
MANUAL UPDATES EACH TIME AN
INSPECTION IS EXECUTED.**

1.1 GENERAL INFORMATION ON AGAS MKII/ LGAS INSTALLATION

The Amphibian Landing Gear Position Advisory System provides the pilot with supplementary gear position information not normally found in amphibious aircraft. The system is available in three versions:

1. The original system, referred to in this document as the AGAS.
2. The 2016 upgraded system, referred to as the AGAS MKII.
 - a) This system provides the same base functionality as the AGAS, but employs modernized hardware components.
 - b) Additional functionality in the form of a 10 second alert after takeoff if the landing gear has not been retracted.
3. The LGAS system, which uses the same hardware components as the AGAS MKII.,
 - a) Adds a wing mounted laser array to determine if the aircraft is directly over land or water.
 - b) If below 400' agl, the LGAS compares the surface directly below aircraft with the gear position switches to determine if the gear is properly configured, and will only issue an alert if the gear position and laser indications are not in agreement with each other.
 - c) The LGAS also provides an alert if the gear has not been retracted approximately 10 seconds after takeoff.

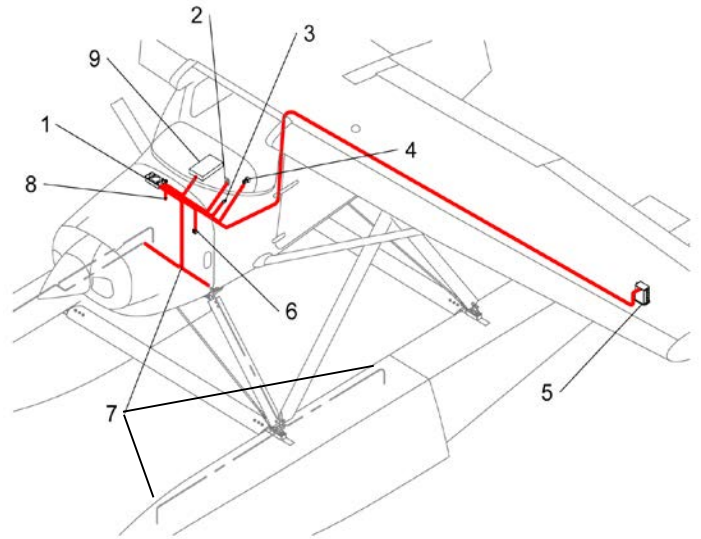

- | | |
|-------------------------------------|-----------------------------------|
| 1. LGAS Controller | 6. Pitot A/S Switch |
| 2. IN from gear selector assembly | 7. Landing Gear Position Switches |
| 3. IN from 2 amp CB | 8. Ground |
| 4. Illuminated Switch (LGAS only) | 9. Audio Out |
| 5. Laser Array Assembly (LGAS only) | |

(typical single engine, high wing installation shown)

1.2 REFERENCES

A list of important references is given below. In addition to this document, these will aid in the maintenance and continued airworthiness of this Amphibian Gear Advisory System and Laser Gear Advisory System installation.

1. POHSA39CH – Aircraft Flight Manual Supplement for Amphibian Landing Gear Advisory System.

1.3 SPECIFICATIONS

System specifications are shown below.

AGAS MKII/ LGAS Controller

(AGAS MKII/LGASv-01 thru v-03):

Wt: 0.45 lbs. (Arm to be determined upon installation).

LGAS ULS Laser Array

(AGASMKII/LGASv-01 and v-02):

Weight: 1.65 lbs. (Arm to be determined upon installation).

LGAS S200 Laser Array

(AGAS MKII/LGASv-03 only):


Weight: .30 lbs. (Arm to be determined upon installation).

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER 2
SERVICING AND MAINTENANCE

2.0 SERVICING AND MAINTENANCE

The AGAS MkII / LGAS system is maintenance free and requires little servicing, once installed in the aircraft according to the approved documentation.

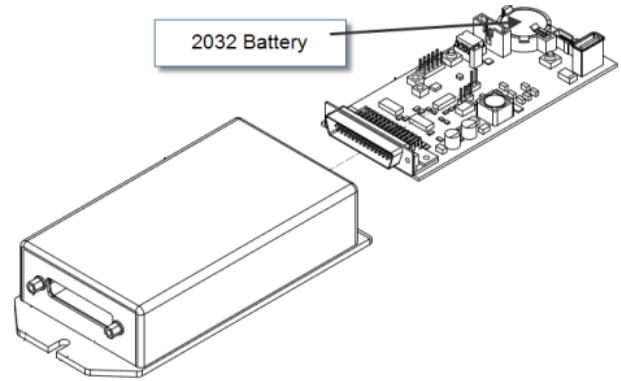

2.1 CHANGING BATTERY

The AGAS MKII and LGAS (shown) computers maintain date and time information during periods of non-operation by means of a single 2032 button cell battery installed on the printed circuit board. The battery has a minimum life of one year with reserves, but should be changed at annual inspection. If the battery should fall below minimum acceptable voltage, the gear advisory power up test will announce “CHANGE GEAR ADVISORY BATTERY”, instead of the typical “GEAR ADVISORY BATTERY OK” announcement. The system may continue to function normally for several days after the battery change announcement, but should be changed as soon as practicable.

To replace the gear advisory battery:

1. Locate the Gear Advisory Controller, generally under the co-pilot’s panel.
2. Loosen the thumbscrews on each side of 44-pin connector and disconnect from the Controller.
3. Loosen the single knurled nut retaining the Controller in the Mounting Tray and remove the Controller from the Tray.
4. With the Controller on a work bench, remove the two screw-lock standoffs retaining the 44-pin connector on the end of the Controller enclosure. Remove the four machine screws securing the end cap, from the opposite end of the enclosure.
5. While observing standard static grounding procedures, remove the circuit board from the enclosure by pressing on the 44 pin connector, being very careful so as not to bend any of the pins. The end of the circuit board will sometimes dislodge the end cap and allow the board to slide out of the enclosure. If not, a small stiff wire or screw-driver in the upper most holes may be used to lift the cover off.

6. The board is equipped with a small capacitor that will maintain the internal clock for 60-90 seconds during battery replacement. Carefully remove and replace the 2032 button cell, observing proper polarity of the battery.

Note: To save time, have the replacement battery unpackaged and standing by before removing old battery.

7. Re-assemble and re-install the gear advisory Controller, being careful to re-install the 44 pin connector gasket and end cap gaskets.
8. Functionally test the gear advisory battery after reinstallation by applying power to the system (including avionics bus) and confirming the “GEAR ADVISORY BATTERY OK” audio message.
9. Make appropriate logbook entries for the service performed.

CHAPTER 3
RECOMMENDED PROCESSES, PRODUCTS
AND INSPECTION CHECKLIST

3.0 SERVICING INSTRUCTIONS

No specific servicing required.

3.1 MAINTENANCE CHECKLIST

INSTRUCTIONS / PROCEDURES		HOURLY LIMITS					MECHANIC	INSP
		25	50	100	200	Annual		
AGAS/LGAS System	General Check installed placards against the AFM/POH Supplement Section 2, and installation drawings.					X		
Controller	Inspect security			X		X		
Controller	Change Battery					X		
Laser Assembly (LGAS only)	Inspect security			X		X		
Wiring Harnesses	Inspect			X		X		

END