




WIPLINE FLOATS • SKIS • MODIFICATIONS • AIRCRAFT SALES
AVIONICS • INTERIOR • MAINTENANCE • PAINT REFINISHING

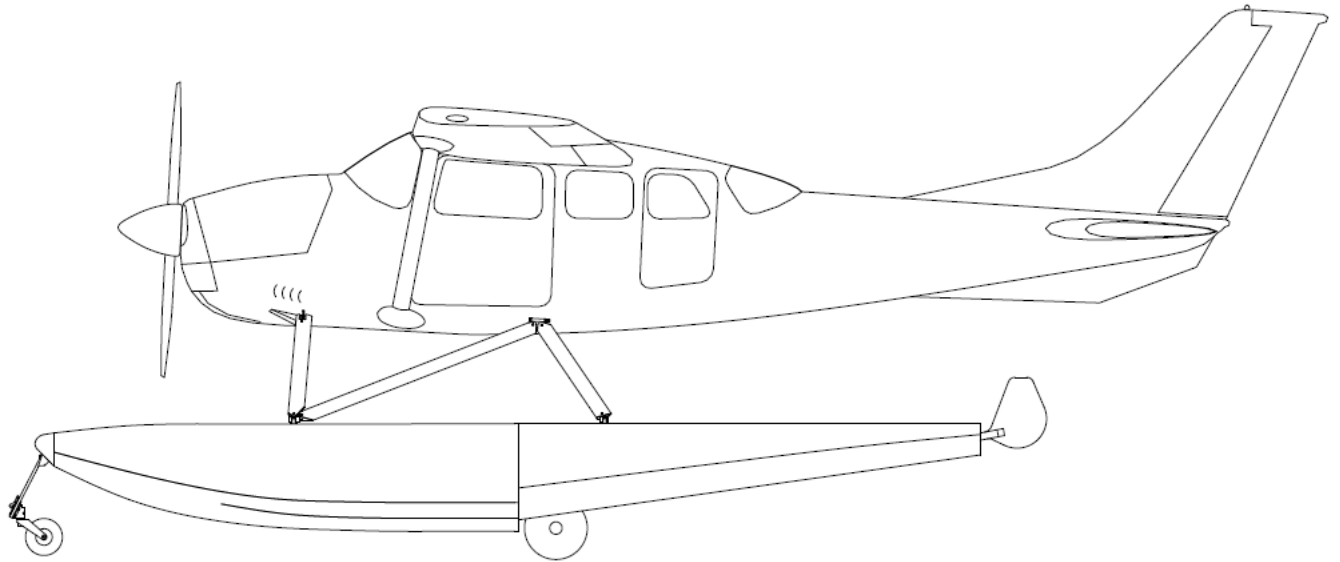

**SERVICE MANUAL AND
INSTRUCTIONS FOR CONTINUED AIRWORTHINESS
FOR WIPLINE MODEL 3730/3900
AMPHIBIOUS AND SEAPLANE FLOATS**

Revision N

THIS PAGE INTENTIONALLY LEFT BLANK

LOG OF REVISIONS

Rev	Pages	Description	Date
A	12	Added an inspection time limit and tolerances for the Nose Block Track wear.	4/1/2006
B	4, 14-16	Updated TOC, added new inspection checklist.	2/23/2007
C&D	TOC, 6-8, 16-18	Table of contents updates, expanded corrosion prevention, added steps to insp. checklist.	10/31/2008
E	All	Reformat of entire document, add green grease as approved grease.	4/16/2013
F	20-21	Added Shear Torque Chart, PR 1440 C Sealant and Tef-Gel, removed Warranty Claim Form.	5/26/2015
G	5, 11, 20-21	Added Dow Corning DC4, Corrosion X, and Mobil Aviation Grease SHC 100 to approved product list. Modified torque limits section.	12/4/2015
H	8	Added reference for Structural Repair Manual part number 1008274 in introduction.	5/1/2019
J	11, 13, 21, 23-25	Added information about corrosion limits. Added note about STA-Lube. Added STA-Lube to Brake Caliper Grease. Removed inspection column from Maintenance Checklist.	8/3/2020
K	All	Reformatted manual in new software. Removed Comet Industries GP-730A. Removed content in Chapter 8 and replaced with note about SRM. Removed Figures 6 through 14 as content is found in SRM. Added note about nose box sealant and Service Letter 224. Added sections 2.6 through 2.9	2/3/2021
L	7	Added note to introduction about parts manuals.	7/11/2023
M	40-41	Updated note about Bolts in Critical Areas and torque limit tables in section 8.4 Service Schedule.	1/2/2024
N	40, 49-50	Updated bolt torque information in Section 8.4. Added section 10. Moved Standard Torque Value tables to section 10.0.	7/11/2024

View most current revision of this ICA at www.wipaire.com.

THIS PAGE INTENTIONALLY LEFT BLANK

TABLE OF CONTENTS

INTRODUCTION	7
CHAPTER 1 GENERAL INFORMATION	9
CHAPTER 2 FLOAT HULL MAINTENANCE	11
CHAPTER 3 CORROSION	17
CHAPTER 4 HYDRAULIC SYSTEM	19
CHAPTER 5 MAIN LANDING GEAR AND RETRACTOR	23
CHAPTER 6 NOSE GEAR AND RETRACTOR	29
CHAPTER 7 ELECTRICAL SYSTEM	33
CHAPTER 8 REPAIRS AND MAINTENANCE	37
CHAPTER 9 TROUBLE SHOOTING	45
CHAPTER 10 BOLT TORQUES	49

LIST OF FIGURES

FIGURE 2-1 JACK CRADLE RECOMMENDED MODIFICATION	14
FIGURE 2-2 JACKING LOCATION	14
FIGURE 2-3 FLOAT SECURING LOCATIONS	15
FIGURE 2-4 FLOAT SECURING LOCATIONS OVERVIEW	16
FIGURE 4-1 HYDRAULIC SYSTEM 185	21
FIGURE 4-2 HYDRAULIC SYSTEM 206	22
FIGURE 5-1 LUBRICATION CHART MAIN GEAR 3730.....	25
FIGURE 7-1 SCHEMATIC, LANDING GEAR ELECTRICAL SYSTEM	34
FIGURE 7-2 SCHEMATIC, LANDING GEAR ELECTRICAL SYSTEM	35

INTRODUCTION

This manual describes the general servicing and maintenance for the model 3730/3900 float, including hull and landing gear. For services and repairs not covered by this manual contact Wipaire Customer Service.

When performing standard repairs for Wipline Aluminum Floats, please refer to the “Structural Repair Manual For Wipline Aluminum Floats” part number 1008274. It is available free of charge online at www.wipaire.com.

The service products referred to throughout this manual are described by their trade name and may be purchased from Wipaire Parts Department.

Note: For approved design data parts, reference 3730 & 3900 floats parts manual 1002175 for Cessna 185 & 206.

To contact Wipaire for technical support or parts sales, call or email:

Wipaire, Inc.
Customer Service
1700 Henry Avenue – Fleming Field
South St. Paul, MN 55075
Phone: (651) 306-0459
Fax: (651) 306-0666
Website: www.wipaire.com
Email: CustomerService@wipaire.com

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER 1 GENERAL INFORMATION

CONTENTS

1.0 GENERAL.....	10
------------------	----

1.0 GENERAL

The model 3730/3900 seaplane or amphibious float is an all aluminum constructed float with watertight compartments. The actual displacement in fresh water for each float is 3453 pounds buoyancy for the amphibian. The amphibian float is geometrically the same as the seaplane except for the addition of landing gear and internal structure for the gear.

The water rudder system is cable operated with ball bearing pulleys. Water rudder cables tie into the existing aircraft rudder system.

The main landing gear has a 5.00 x 5 6-ply tires and the nose landing gear has a 3.50 x 10 4-ply tire. The gear system is hydraulically actuated and driven by two hydraulic pumps. Brakes are hydraulic and have a caliper on each main wheel.

Steering on land is accomplished by differential braking. The nose wheels are full castering.

Access to the float interior is accomplished by removing covers on the top deck and covers inside the wheel well. When necessary, water inside the float hulls may be removed through pump out cups located on the outboard edge of each float top skin.

CHAPTER 2 FLOAT HULL MAINTENANCE

CONTENTS

2.1 GENERAL.....	12
2.2 HARD LANDING AND DAMAGE INVESTIGATION.....	12
2.3 CLEANING	12
2.4 SEALING	12
2.5 TOWING	13
2.6 HOISTING	13
2.7 LEVELING	13
2.8 JACKING PROCEDURES	13
2.9 JACK REMOVAL.....	16

2.1 GENERAL

The float structure is manufactured entirely of 6061-T6 corrosion resistant aluminum sheet and extrusions. Skins on the inside are primed with a 3M SCOTCHWELD primer after being cleaned and acid-etched. Exterior surfaces are cleaned and alodined. Surfaces are then primed with an epoxy-based primer and finished with enamel color paint.

2.2 HARD LANDING AND DAMAGE INVESTIGATION

After a thorough cleaning of the suspected damaged area, all structural parts should be carefully examined to determine the extent of damage. Frequently the force causing the initial damage is transmitted from one member to the next causing strains and distortions. Abnormal stresses incurred by shock or impact forces on a rib, bulkhead or similar structure may be transmitted to the extremity of the structural member, resulting in secondary damage, such as sheared or stretched rivets, elongated bolt holes or canned skins or bulkheads. Points of attachment should be examined carefully for distortion and security of fastenings in the primary and secondary damaged areas at locations beyond the local damage. Inspect aircraft skins in area of float fitting attach for sign of bending, or any other signs of damage.

2.3 CLEANING

The entire outside of the float should be kept clean by washing with soap and water. Special care should be taken to remove engine exhaust trail, water-line marks and barnacle type deposits. After saltwater operation, washing with fresh water should be done daily with special attention to hard to reach places such as seams, wheel wells, areas underneath strut covers etc. Float interior should be flushed if evidence of saltwater in compartments is noted. The float interior should be flushed if salt water enters the compartments; it's easy to tell by the smell inside the float lockers. At night or when the floatplane is in storage, the inspection and/or baggage covers should be opened so the interior has a chance to dry out.

**THE ABOVE CLEANING TECHNIQUES ARE VITAL
FOR KEEPING CORROSION TO A MINIMUM. SALTWATER
OPERATIONS ARE STRONGLY LINKED TO
CORROSION AND MUST BE ADDRESSED PROACTIVELY.**

2.4 SEALING

The float hull has eight sealed compartments. Each compartment is equipped with a pump-out cup and inspection cover. These compartments must be pumped out before flight and after prolonged periods of sitting in water. Each compartment is individually sealed, as is wheel well halves and nose box. Water from one should not contaminate the other. If leaks are found, check by filling only one compartment at a time, water will appear on outside of hull, in adjacent compartment, nose box or wheel well. Float hull must also be inspected for leaks from damage and sealed around nose box, nose box access cover, spreader bar, fairings, water rudder boot, baggage and inspection covers. Refer to Products List for recommended sealants and caulk.

Note: Special attention should be taken on nose box sealant inspection. See Wipaire Service Letter 224 on the Wipaire website for details.

2.5 TOWING

When towing the amphibian aircraft, 2 lugs are provided on the lower forward side of the nose spring.

On land, a rigid "V" frame can be fabricated to attach to these lugs for towing the aircraft with a tractor. Lake & Air Training and Pilot Shop has this tow bar available for purchase.



On water, a rope bridle arrangement can be used to tow the aircraft from the lugs described above.

2.6 HOISTING

Hoisting the aircraft can be performed using a lifting rig that attaches to the aircraft with lifting rings that are installed at the wing attach points. If the lifting rings are not installed, reference applicable aircraft maintenance/service manual for additional hoisting specifications. Lake & Air Training and Pilot Shop has this hoisting rig available for purchase. Contact Wipaire Customer Service for additional guidance in removal or installation of floats.

CAUTION!

Make sure nothing is under or above the airplane or floats when hoisting the aircraft

1. Raise aircraft high enough to place float cradle under floats as shown in Figure 2-4.
2. Lower aircraft onto float cradle as shown in Figure 2-4.
3. Place fore and aft supports as shown in Figure 2-3 and Figure 2-4.

2.7 LEVELING

See applicable aircraft maintenance/service manual

2.8 JACKING PROCEDURES


CAUTION!

Make sure nothing is under or above the airplane or floats when jacking the aircraft.

CAUTION!

Make sure nothing is under or above the airplane or floats when jacking the aircraft.

1. Turn off fuel.
2. Place weighted bags above the nose gear (approximately 100 lbs. on each float to start, more may be added as needed).
3. Position 1 person at each fore and aft of each float, and 3 people at the jacking location of one float.
4. Modify jack saddle of a 3 ton minimum jack by welding as shown in Figure 2-1.

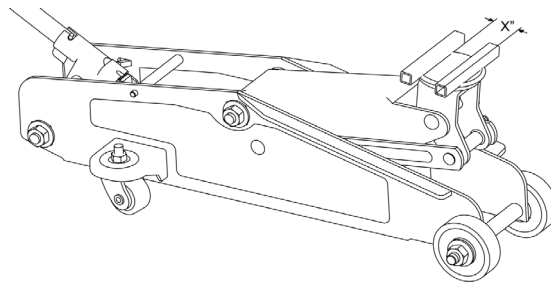

(X = WIDTH OF CRADLE)

FIGURE 2-1 JACK CRADLE RECOMMENDED MODIFICATION

NOTE: This is not required and Wipaire does not have the parts for modification. It is recommended a similar modification be performed to the jack saddle to prevent the slippage of the cradle.

1. Center cradle on saddle and position so cradle is as far aft on the main keel as possible without interfering with main gear as it decompresses as shown in Figure 2-2.

NOTE: If desired to prevent possible cosmetic damage to float, use material to separate cradle and float.



FIGURE 2-2 JACKING LOCATION

1. Jack one side at a time, taking care to check the balance of the aircraft and adding more weight to the front if needed.
2. Two people, both outboard, lift the fore and aft cradle stands up to the cradle as a 3rd person release the pressure slowly, allowing the cradle and stands to gently contact the ground.
3. Repeat previous procedure to the other float.

NOTE: A smaller jack may be needed to slightly lift the float into a high enough position for the main jack.

1. Secure floats with fore and aft supports as shown in Figure 2-3 and Figure 2-4.



FIGURE 2-3 FLOAT SECURING LOCATIONS



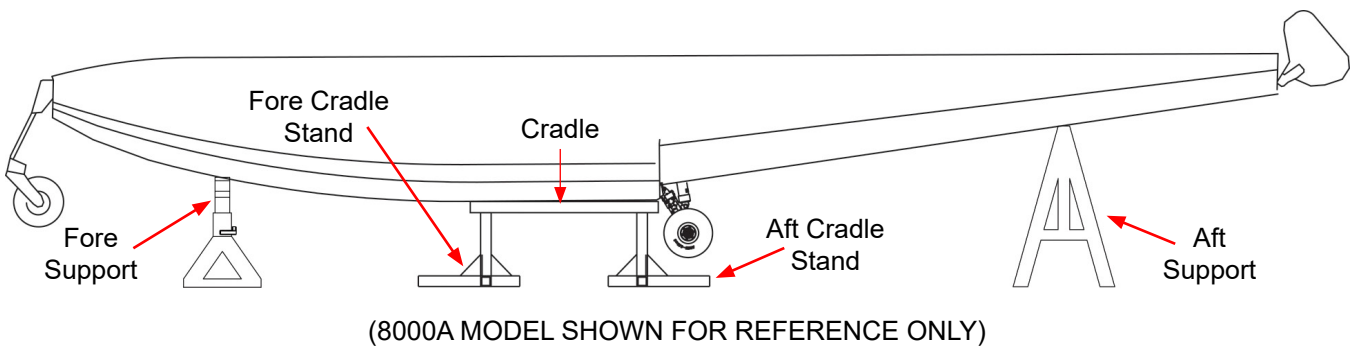


FIGURE 2-4 FLOAT SECURING LOCATIONS OVERVIEW

2.9 JACK REMOVAL

Make sure nothing is under or above the airplane or floats when removing the jacks from the aircraft

1. Turn off fuel.
2. Verify landing gear is in the down and locked position.
3. Verify weighted bags are still located above the nose gear.
4. Position 1 person at each fore and aft of each float, and 1 person at the jacking location of one float.
5. Remove all fore and aft supports as shown in Figure 2-3 and Figure 2-4.
6. Using modified jack saddle as shown in Figure 2-1, center jack saddle in center of cradle on 1 of the floats,
7. Lift aircraft to clear fore and aft cradle stands and remove fore and aft cradle stands of lifted float.
8. Slowly lower float to the ground, remove jack from under float, and remove cradle from jack saddle.
9. Repeat previous procedure to the other float.
10. Remove weighted bags from floats.

CHAPTER 3 CORROSION

CONTENTS

3.0 CORROSION	18
---------------------	----

3.0 CORROSION

Reference the Wipaire Structural Repair Manual (SRM) for allowable corrosion/material loss limits. Corrosion is a reaction that destroys metal by an electrochemical action that converts metal to oxide. Corrosion is accelerated when in contact with dissimilar metals such as aluminum and steel, or any material which absorbs moisture like wood, rubber, or dirt.



The primary means of detection of corrosion is visual. The most obvious sign is a corrosive deposit of white powder. Other signs are discoloration of the metal surface or bubbles and blisters under the painted surface. Light corrosion may be removed by light hand sanding or chromic acid. Moderate and severe corrosion (blistering, flaking, and pitting) may be removed by heavy sanding or grinding, and applying chromic acid. No more than 1/3rd the thickness of skin material should be removed before complete replacement or reinforcement of an area is necessary.

After removing the corroded area, restore area to original finish (prime and enamel). BOESHIELD T9, Corrosion X, or ACF-50 may also be applied to stop corrosion. Refer to manufacturer's instructions for application instructions.

Maintaining the float inside and outside finishes by washing after saltwater operations will help protect the float from corrosion. Periodically, all hardware should be covered with a waterproof grease, or paralketone. Under saltwater conditions, bolts should be removed at least once a year and grease reapplied to the shafts, heads and nuts.

**THE ABOVE TECHNIQUES ARE VITAL
FOR KEEPING CORROSION TO A MINIMUM. SALTWATER
OPERATIONS ARE STRONGLY LINKED TO
CORROSION AND MUST BE ADDRESSED PROACTIVELY.**

CHAPTER 4 HYDRAULIC SYSTEM

CONTENTS

4.1 OPERATION	20
4.2 MAINTENANCE	20
4.3 BLEEDING THE SYSTEM	20

4.1 OPERATION

The hydraulic system consists of an electro-hydraulic power pack with a non-reversing type pump and a hand pump backup tied in between the return and pressure lines (see hydraulic schematic in figures 3 & 4). The pump and reservoir assembly is mounted in the left float.

A pressure of between 500 psi and 1000 psi is maintained in the supply line. When the pressure falls below 500 psi, a pressure switch will activate the pump solenoid, providing power to the pump. When the pressure reaches 1000 psi, the pressure switch deactivates the solenoid and the pump motor is stopped. Figures 1 & 2 show the electrical schematic of the system. A check valve on the output side of the pump retains pressure in the system while the pump is off. The pump has an internal relief valve which directs oil back to the pump reservoir when the line pressure exceeds 1200 psi. The system also has an external relief valve to protect against thermal expansion when line pressure exceeds 1900 psi.

The selection of gear-up or gear-down is accomplished by a cockpit mounted control valve. Each float gear has individual indicator lights on the control valve allowing the pilot to confirm that each gear has fully retracted or extended.

4.2 MAINTENANCE

Maintenance of the hydraulic system is very easy; keep the proper amount of oil in the reservoir. A sight glass is provided for this and the level should be kept in the upper 1/3 of the range. A screen is located in the reservoir tank around the fluid pick up pipe and can be cleaned or checked at annual inspection or every 100-hour. Check and replace if oil is dirty or if moisture is found (MIL-H-5601 Hydraulic Fluid, RED).

4.3 BLEEDING THE SYSTEM

Simply fill the reservoir with hydraulic oil and start a gear cycle. If the reservoir empties (i.e. fluid goes out of sight in the sight glass), stop the cycle and add oil and complete the cycle. Continue with approximately four more gear cycles after the fluid level in the reservoir normalizes (it will vary in level between up and down positions) and check for leaks.

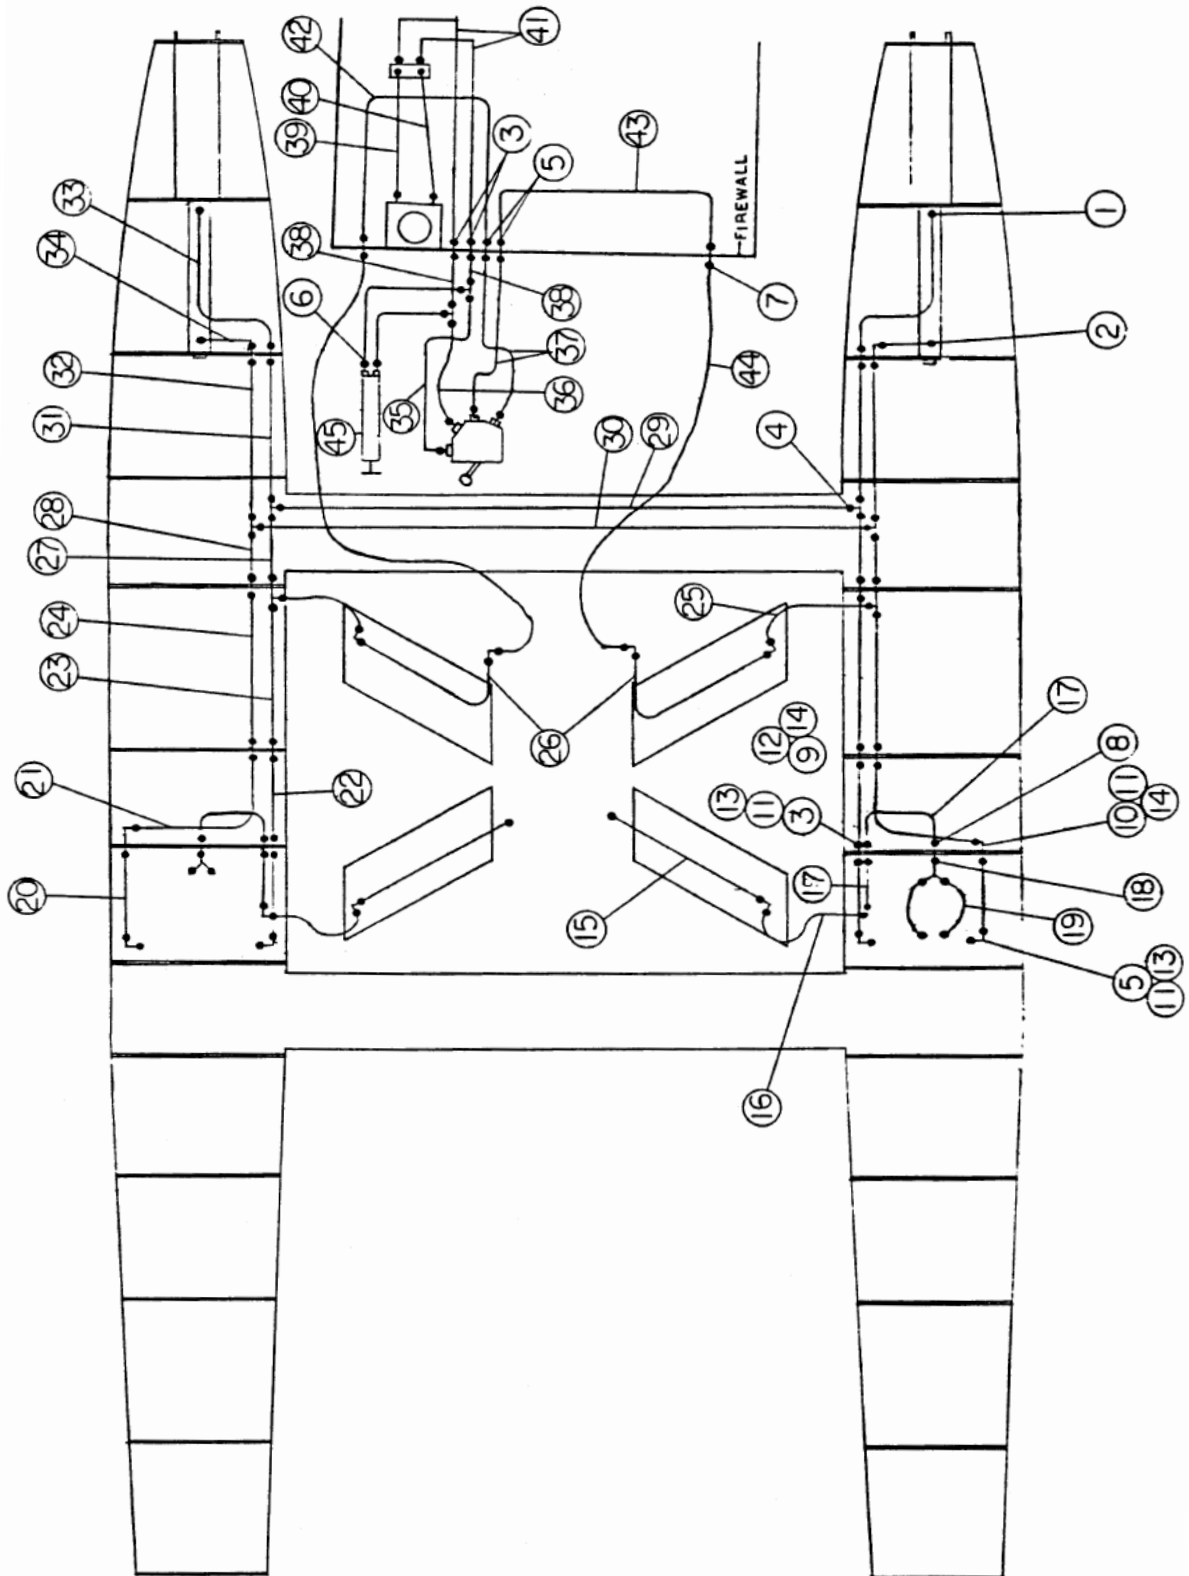


FIGURE 4-1 HYDRAULIC SYSTEM 185

(Numbers refer to Parts Manual only)

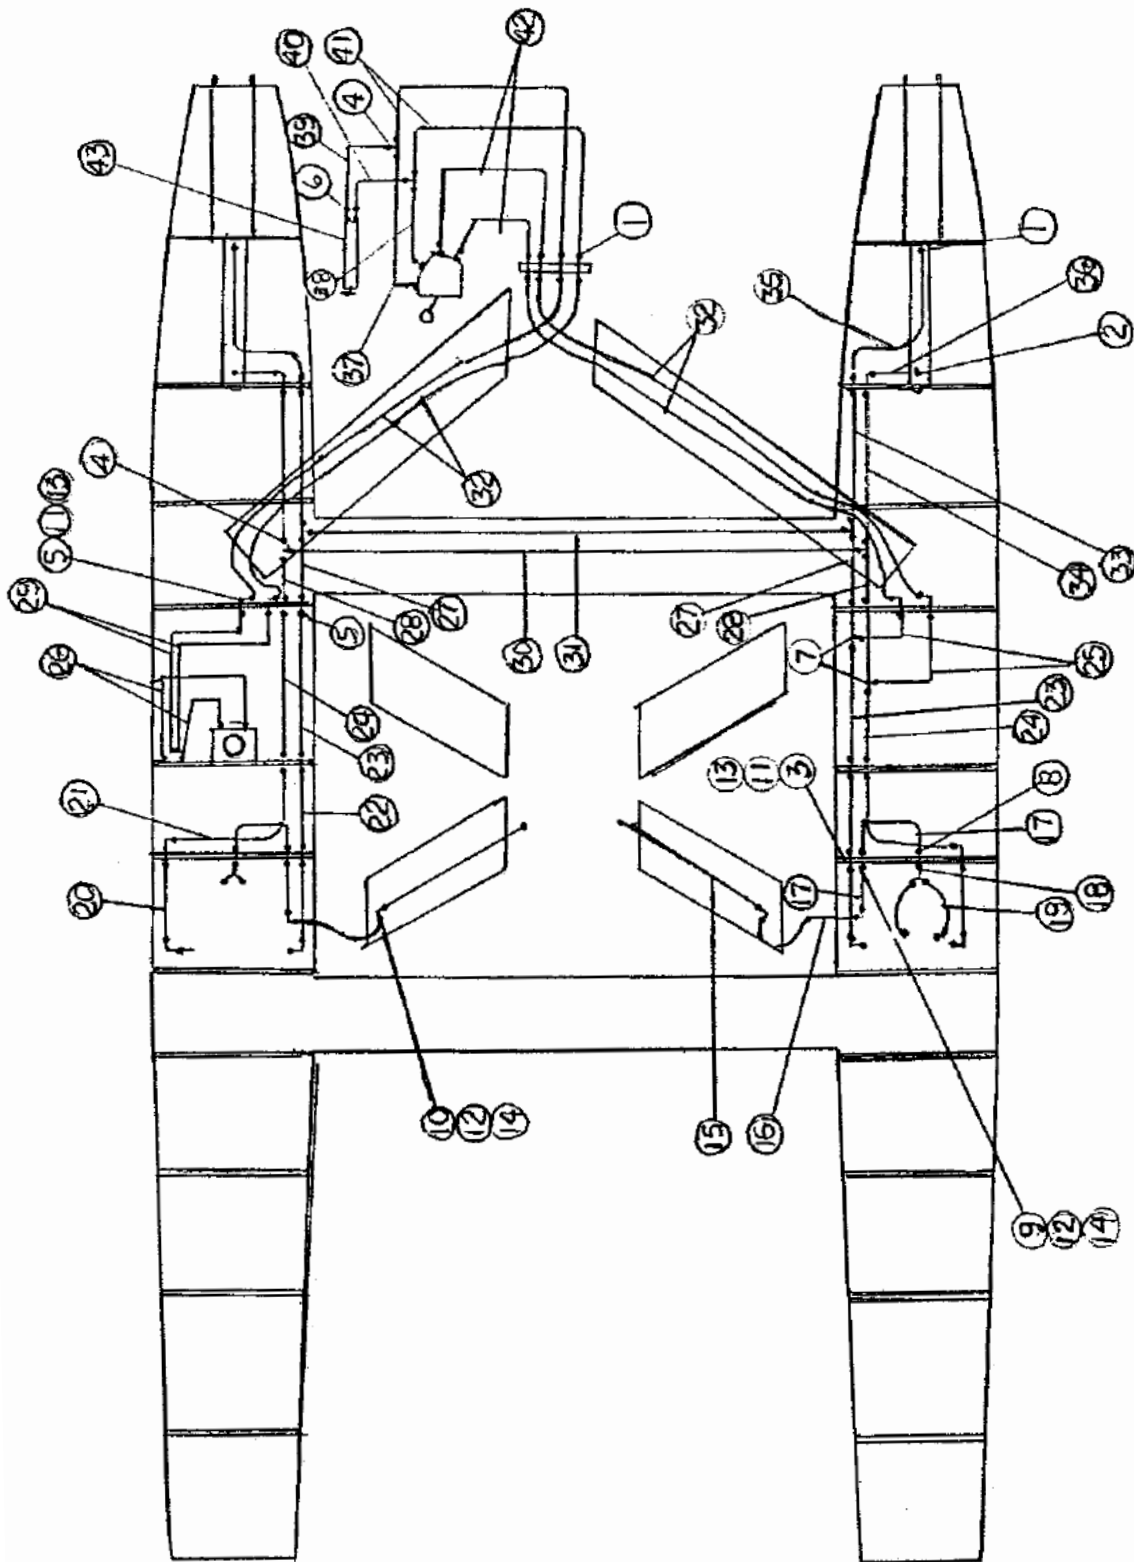


FIGURE 4-2 HYDRAULIC SYSTEM 206

(Numbers refer to Parts Manual only)

CHAPTER 5 MAIN LANDING GEAR AND RETRACTOR

CONTENTS

5.1 OPERATION	24
5.2 LUBRICATION	24
5.3 REMOVAL OF MAIN GEAR AND RETRACTOR.....	26
5.4 ADJUSTMENT – MAIN GEAR	26
5.5 INSERTION.....	26
5.6 SERVICING OLEO STRUT.....	27
5.7 TIRE SIZE	27

5.1 OPERATION

The main landing gear retractor is merely a hydraulic cylinder which pushes and pulls a drag brace. The locking is accomplished using a small amount of lost motion of the hydraulic cylinder to pivot a hook on the drag brace. The first part of travel of the cylinder unlocks the lock and the last part locks it. There is a proximity switch that activates the gear panel indicator lights.

The main truss is an aluminum alloy and is connected to the drag brace through an air-oil oleo strut. The main wheels and brakes and standard Cleveland parts. Aluminum brakes are used for saltwater resistance. Interchangeable stainless steel brake discs are also available.

5.2 LUBRICATION


Reference Figure 5-1. A periodic cleaning and lubrication schedule is the best service there is for smooth and trouble free operation. Lubrication is also a must for saltwater operation or where steel hardware and aluminum come in contact with each other.

A lubrication chart is provided to show places of grease access and type of zerk to use. Use only waterproof grease recommended in Products Chart.

At brake installation, apply STA-Lube synthetic brake and caliper grease or equivalent to brake caliper pins.

On Lubrication Chart, note 1 is a standard grease zerk. One is located on lower hook where actuating cylinder is attached, and one on end of each wheel axle. The grease zerks on axle ends allow grease to be forced into wheels. Use these to periodically add grease as it is lost and not as an alternate for repacking wheel bearings. If, on some older models, lower hook does not have grease zerk, apply grease to all mating and hinged areas and also to end of hook. Note 2 is a needle point grease hole where grease may be forced in with a needle point zerk end. Note 3 is where grease is applied by hand to lubricate other moving or hinged surfaces. These areas should include gear-up hook tip, push-rod to up-hook, down-lock hook tip, uplock hook push-rod, and any other moving surface not mentioned above.

Greasing intervals matched to the usage of aircraft will provide a long service life. Even in minimal usage it is recommended that the unit be cleaned and greased once at start of season, mid-season and end of season.

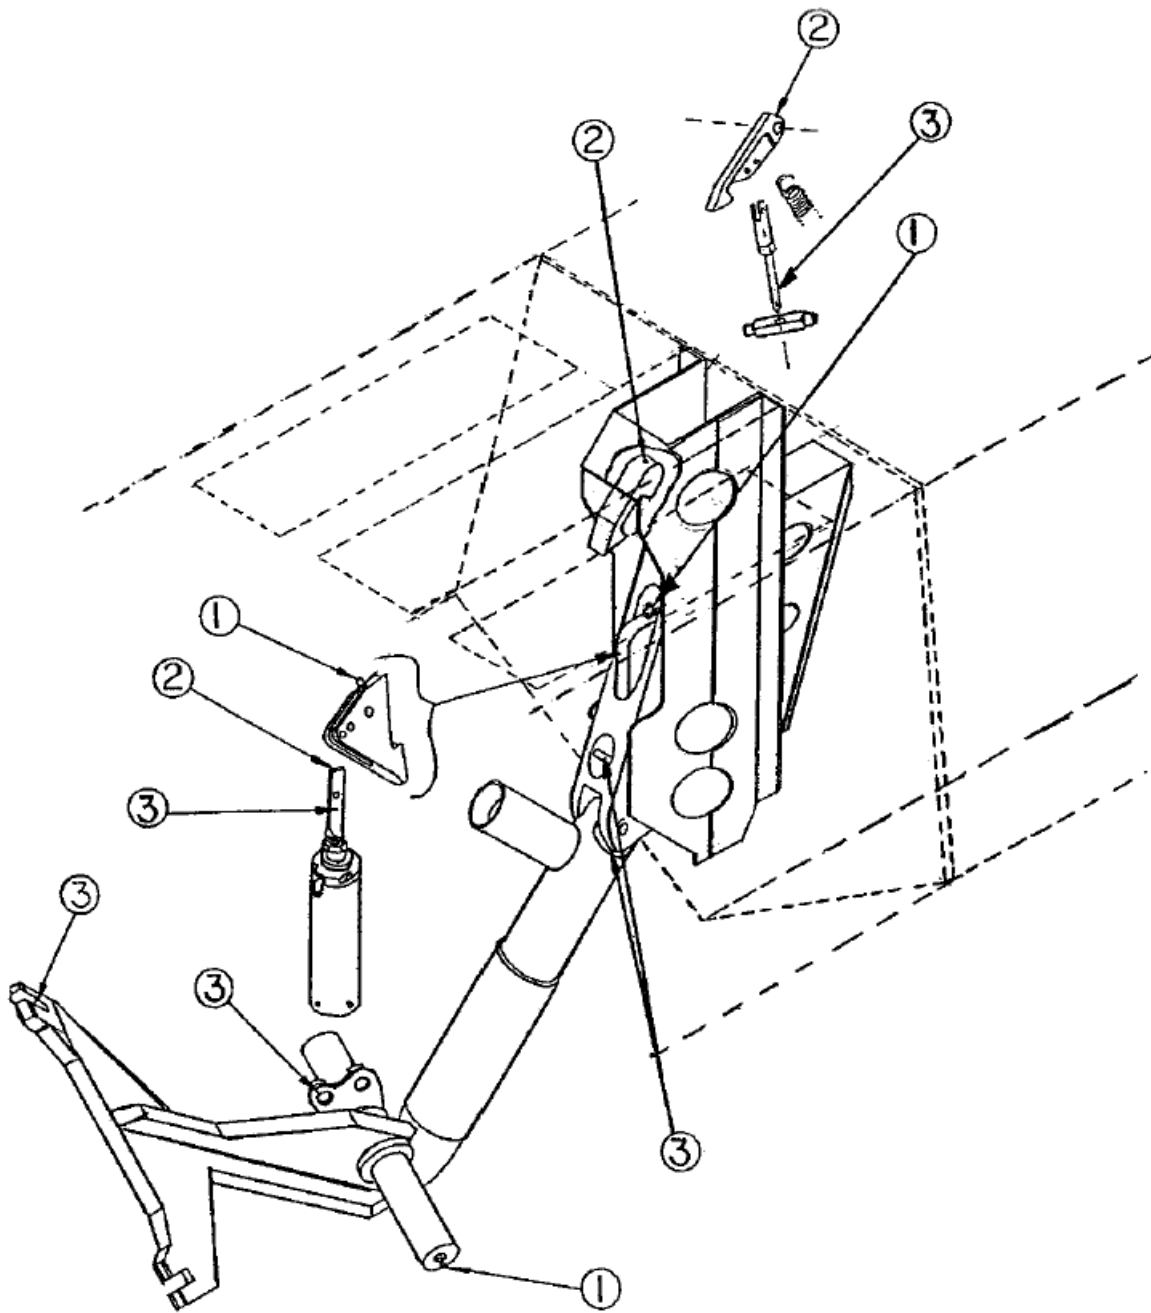

- 1. STANDARD GREASE ZERK
- 2. NEEDLE POINT GREASE HOLE
- 3. APPLY GREASE THESE SURFACES

FIGURE 5-1 LUBRICATION CHART MAIN GEAR 3730

5.3 REMOVAL OF MAIN GEAR AND RETRACTOR

The landing gear is simple to remove, as there are only two pinion bolts, a drag link bolt and two brake lines holding it in. To remove the retracting mechanism, disconnect the gear light wires in the inner gear well side compartment and the two hydraulic lines. All that remains are twelve allen head cap screws which are easily accessible from the compartment behind the gear well. Occasionally the RTV sealant around the cap screw holes holds the actuator solid but is easily loosened when pried from the top.

5.4 ADJUSTMENT – MAIN GEAR

If for any reason the main gear retractor must be disassembled or need replacement of the hydraulic cylinder, it may be accomplished as follows:

With entire unit assembled except for the bolt securing the lower end of the retracting cylinder, put the drag brace in the retracted position (against stops) with up lock hooked. We now set the travel of the cylinder by extending it until it is bottomed and observing through the anchor bolt hole on its base and retractor body. The lock nut on the ram should be loosened and the ram turned (thus adjusting total length) until it is about 1/32" too long. This will allow the drag brace to bottom on its up stops before the hydraulic ram bottoms out when gear is retracted. Retighten lock nut and install the cylinder bolt. There should be enough travel left on the other end to amply hook the down lock—this can now be checked.

The next item to be adjusted is the up-lock release rod. When the gear is in the up position and starts down the pivot should push against the release rod to raise the hook just high enough to let it snap over the bar (in the drag brace) and need not be adjusted to raise so high as to miss the rod completely, as this can cause the pivot to hit the rod while the gear is being retracted. Usually if a gear has been retracted while the aircraft was on the ground, this rod will be bent because the pivot is in the wrong position (pull instead of push) when the drag brace comes up.

With this done, the only thing left is to adjust the down micro switch (the up can be adjusted in the float) and this is accomplished by bending the probe. On newer models this switch is a magnetic proximity type and is located in the compartment behind the wheel well and can be adjusted after actuator installation. It can be noted that the down lock hook contacts an aluminum spring containing the magnet and positions it near the bulkhead where the proximity switch senses it through the bulkhead. It is a good idea to attach an ohmmeter to the switch to see that it functions and use a hand hydraulic system to operate the unit as they have been known to "click" without an actual contact or to "click" and get a contact and to lose it again when the hydraulic pressure is built up against the lock. Before installing the unit, a dab of waterproof grease should be put on all contacting surfaces such as lock hooks, pivot, etc.

5.5 INSERTION

Installing the actuator is almost as simple as removing it. Before installing, a small dab of sealant such as RTV silicone rubber or chromate paste should be applied around each hole on the mounting flange. The unit is then inserted and held in place while a second person starts a couple of the allen head cap screws. The procedure is then just the opposite of the removal. Be careful to draw up the pivot bolts on the main gear casting only lightly as the tab can be easily broken or cracked. This also applies to oleo and drag link bolts.

5.6 SERVICING OLEO STRUT

The oleo is easy to service if the following steps are followed:

1. If the oleo is removed from the float, hold in an upright position similar to when mounted in float.
2. Release air pressure and extend oleo.
3. Remove entire plug from top of air chamber and fill with Mil-H-5606 red hydraulic oil using pump can. Get air to come out as you pump in oil.
4. Completely compress oleo and let excess oil run out.
5. Reinstall plug and let aircraft weight down on gear.
6. Inflate cylinder 1 7/8 inches of exposed piston with empty aircraft.

5.7 TIRE SIZE

1. 5:00 – 5 6ply
2. PSI 38 lbs.

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER 6 NOSE GEAR AND RETRACTOR

CONTENTS

6.1 OPERATION	30
6.2 WHEEL AND CASTOR.....	30
6.3 LUBRICATION	30
6.4 REMOVAL	30
6.5 ADJUSTMENT	30
6.6 TIRE SIZE	31
6.7 INSERTION.....	31
6.8 NOSE BOX TRACK WEAR.....	31

6.1 OPERATION

The nose gear uses a spring leaf leg very similar to a Cessna style with a hydraulic driven truck-track retracting mechanism. A hydraulic ram is connected directly to the truck to which the spring leaf is mounted. The rear two rollers on the truck assembly which make up the over-center lock section follow a deeper groove in the track casting and for this reason do not go around the corner but straight ahead to make the over-center down lock. The upside has no mechanical lock and uses only friction and air pressure and the hydraulic lock to hold the gear in. Magnetic proximity switches located on the right side of the actuating cylinder sense a magnet mounted in the hydraulic ram. These can easily be adjusted from the front compartment access covers, as per Figure 6 in the appendix. On older floats (Serial Numbers 37390 and under) the magnetic proximity switches are located on top at the front and rear of the gear well housing and sense a magnet mounted on the hydraulic ram. These can be easily adjusted from the front compartment access covers.

6.2 WHEEL AND CASTOR

The nose wheel and fork pivot 360 degrees around the fork shaft and use no shimmy damping devices. A spring loaded cam rides in a groove in the fork shaft and serves the purpose of holding the shaft in the housing and centering the wheel during flight by means of a "flat" in the circumference of the groove. A nylon thrust washer is located on top of the castoring pin.

6.3 LUBRICATION

Needle type grease fittings are also used in the nose gear and retracting mechanism. There are two-needle style and two normal styles in each nose gear. The needle styles are on the truck pivots and the standard fittings are on the nose wheel pivot shaft housing and wheel axle.

The nose wheel main bearings should be greased using the same procedure as the main gear. A long greasing stick or brush should be made and used to spread grease along each track in addition to the gun greasing.

6.4 REMOVAL

The whole nose gear and retracting assembly is removed by removing the nose bumper and both hydraulic lines. There are then six ¼ inch bolts through the nose bulkhead and two ¼ inch allen head cap screws through the #2 bulkhead into the track castings that must be removed and the end unit should slide out. Sealant must be cut between nose box and bulkheads.

6.5 ADJUSTMENT

The nose gear retractor travel is preset and does not require adjustment. Side play in the gear leg can be taken up by slightly tightening the side-play take-up bolt. Caution: be careful not to over-tighten. It is recommended that a gear check on the ground be accomplished afterwards to make sure gear operates smoothly. The switches are the magnetic proximity type and their adjustment is self explanatory and can be done with the unit installed in the float.

6.6 TIRE SIZE

1. 4:10 NHS 4 ply
2. PSI 38 lbs

6.7 INSERTION

Insertion of the nose gear retractor is simply the reverse of the removal. When reinstalling the nose box, be sure to remove all old deposits of RTV. Apply new RTV sealant between bulkheads and nose box. Note: Be sure access hole on top of nose box is covered and sealed before installation.

6.8 NOSE BOX TRACK WEAR

Due the wear over time the roller/slide block places on the track as the gear are retracted, the block needs to be measured for the amount of wear. The tolerance for wear is .050 inches. If the wear is, or is less than the limit, it can still be used. If the wear in the track is greater than .020 inches, the block must be replaced. This check is to be done every 200 hours.

3730 Series Floats Gear Track P/N 3A07349 (-001 LT -002 RT)

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER 7 ELECTRICAL SYSTEM

CONTENTS

7.0 ELECTRICAL SYSTEM.....	34
----------------------------	----

7.0 ELECTRICAL SYSTEM

The electrical system consists of the following components:

Pump motor, pressure switch, solenoid contractor, 20 amp circuit breaker and the separate system of indicating lights and switches as per the electrical schematic of Figure 7-1 and Figure 7-2.


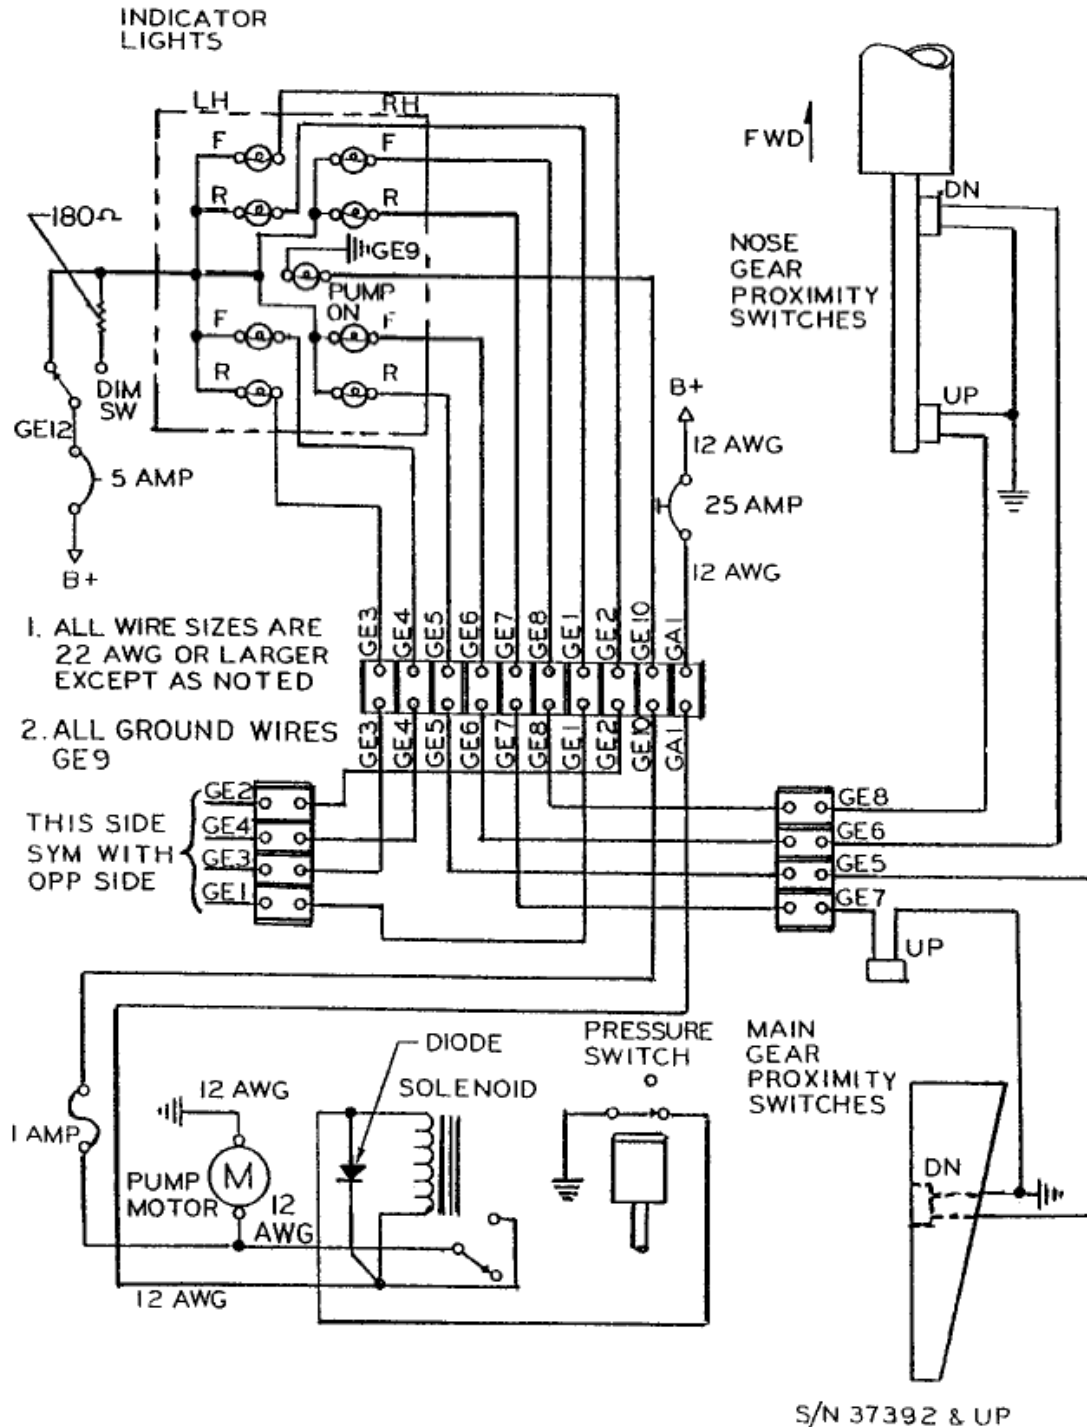


FIGURE 7-1 SCHEMATIC, LANDING GEAR ELECTRICAL SYSTEM

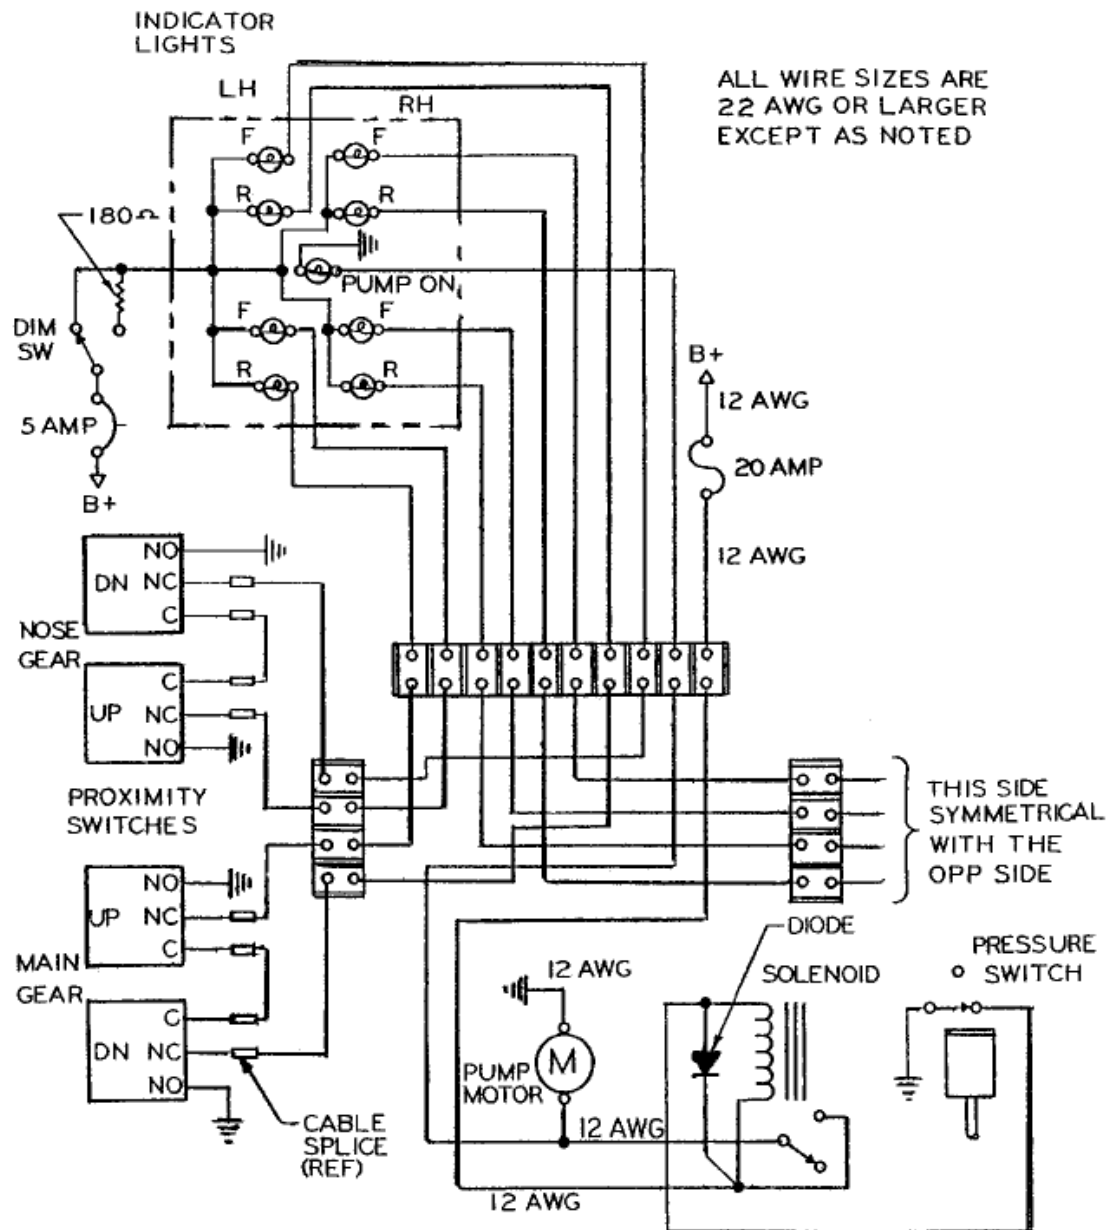

S/N 37390 & DOWN

FIGURE 7-2 SCHEMATIC, LANDING GEAR ELECTRICAL SYSTEM

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER 8 REPAIRS AND MAINTENANCE

CONTENTS

8.1 FLOAT HULL MAINTENANCE – GENERAL.....	38
8.2 REPAIRING FLOAT HULL SKINS.....	38
8.3 REPAIRING FLOAT HULL EXTRUSIONS.....	38
8.4 SERVICE SCHEDULE.....	38
8.5 INSPECTION CHECKLIST.....	41

8.1 FLOAT HULL MAINTENANCE – GENERAL

The float structure is manufactured entirely of corrosion resistant aluminum sheet and extrusion material. Skins on the inside are primed with a 3M Scotchweld primer after being cleaned and acid etched. Exterior surfaces are cleaned and alodined then primed with an epoxy-based primer and painted with enamel.

8.2 REPAIRING FLOAT HULL SKINS

For all float skin structural repairs, refer to Wipaire's Structural Repair Manual (SRM) part number 1008274.

8.3 REPAIRING FLOAT HULL EXTRUSIONS

For all float extrusion structural repairs, refer to Wipaire's Structural Repair Manual (SRM) part number 1008274.

8.4 SERVICE SCHEDULE

As coded in the Inspection Time Limits chart in this section, there are items to be checked each 25, 50, 100, and 200 hours. Also, there are notes on special items which may require servicing at more frequent intervals.

- When conducting an inspection at 25 hours, all items marked for 25 hours would be accomplished.
- When conducting an inspection at 50 hours, the 25 and 50-hour items would be accomplished.
- When conducting an inspection at 100 hours, the 25, 50, and 100-hour items would be accomplished.
- When conducting an inspection at 200 hours, the 25, 50, 100, and 200-hour items would be accomplished.
- A complete inspection (Annual Inspection) would include all 25, 50, 100, and 200-hour items.

When servicing float hull and amphibian components, below is list of recommended lubricants and “protection” products. This lists products used by Wipaire during assembly of the floats.

There may be equivalent products that are just as satisfactory for protection. It is recommended if trying different products, to inspect them frequently so as to determine their effectiveness.

Protection of nuts, bolts, hydraulic lines or metal surfaces

Zip D-5029NS Corrosion Inhibiting Compound
Zip Chemical Company

CRC – SP400 Soft Seal
CRC Industries

General Lubricants

LPS 1, LPS 2 and LPS 3
LPS Industries

Wheel Bearings

*HCF Grease, P/N 605
HCF Industries

*Aeroshell 22
Shell Global Solutions

*Green Grease, Multi-Purpose
Green Grease Inc.

Rust Protection

Boeshield T9 Rust Protection
Boeing Company

ACF-50 Rust Protection

Corrosion X
Corrosion Technologies Corporation

Tef-Gel
Ultra Safety Systems, Inc.

Electrical Insulating Compound

Dow Corning 4 (DC4)
Dow Corning Corporation

Float Sealant

890 B2 or B4
Pro Seal Company

PR 1440 C
PPG Aerospace

1422 B2, B4 or B6
Pro Seal Company

RTV Silicones
General Electric

SIKAFLEX 201 or 252
Sika Manufacturing

* If existing grease cannot be identified you must lubri-flush all float grease fittings until visibly exhausting all old grease and new grease is coming out. Additionally, if you cannot determine existing grease in wheel bearings, completely clean and repack bearings with new grease.

Hydraulic Fluid

Mil-H-5606

Brake Caliper Grease

STA-Lube

As general inspection guidelines, each of the following areas should be inspected for their own unique attributes:

Movable Parts

For lubrication, servicing, security of attachment, binding, excessive wear, safetying, proper operation, proper adjustment, correct travel, cracked fittings, security of hinges, defective bearings, cleanliness, corrosion, deformation, sealing, and tension.

Fluid Lines and Hoses

For leaks, cracks, dents, kinks, chafing, security, corrosion, and deterioration.

Metal Parts

For security of attachment, cracks, metal distortion, broken welds, corrosion, condition of paint, and any other apparent damage.

Wiring

For security, chafing, burning, defective insulation, loose or broken terminals, corroded terminals.

Bolt Torque

Bolts in Critical Areas - For common, correct torque when installed, or when visual inspection indicates a need for a torque check.

Bolt and nut torque should be applied per the specified manufacturer recommended torques (see non-standard bolt torques table in Section 10). If no bolt torques are specified, use AC43 standard torques (see standard bolt torque table in Section 10).

Some additional general maintenance areas are as follows:

Nose and Main Gear Tracks

Clean and lubricate with a dry teflon coating spray.

Joints

Spray all joints with light penetrating oil such as LPS 3 to ensure lubrication at all times.

Electrical Connections

Apply SP-400 SOFT SEAL or LPS 500 to all electrical connections to prevent corrosion.

Hydraulic Fluid

For use in all hydraulic systems, including brakes: MIL-H-5606.

8.5 INSPECTION CHECKLIST

INSPECTION TIME LIMITS		HOURS					MECH INITIALS	
		25	50	100	200	RT	LT	
General	Placards: Check the AFM, POH, and /or drawings for correct placard			X				
Hulls and Struts	Float Installation		X					
	Float exterior - inspect for damage, wrinkled metal, corrosion, paint loss, etc.							
	Struts and attach fittings			X				
	Spreader bars			X				
	Float structure (interior)				X			
	Baggage compartment covers and seals - inspect for condition, security operation, and excessive wear.			X				
	Pumper Tube Installation - inspect for condition, security, routing of hoses				X			
Water Rudder System	Water Rudder Boots - inspect for cuts, tears, and condition.				X			
	Water Rudder Steering and retract systems - inspect the following: cables for broken wire; cable fittings for cable slippage, cracks and distortion; cable pulleys for freedom of rotation and cable guard pins for presence; rigging. Check cable tensions.			X				
	Water Rudder blades and posts - inspect for damage, security of attachment, corrosion, paint, rigging.			X				
Electrical System	Pump and indicator light wiring - inspect for chafing, broken or loose terminals and general condition.			X				

INSPECTION TIME LIMITS		HOURS					MECH INITIALS	
		25	50	100	200	RT	LT	
	Solenoids - inspect wiring, mounting and general condition.			X				
	Pump motors - inspect wiring, mounting and general condition.			X				
	Pressure switches - inspect wiring, mounting and general condition.			X				
Landing Gear Systems	Lubricate nose gear tracks and pivot.	X						
	Nose Gear Box/Block Tracks measured at slide route for wear, .050 inches or less wear tolerance.				X			
	Nose gear pivot blocks and forks - inspect for condition, lubrication, corrosion, paint.	X						
	Nose and main wheel bearing - grease Zerk fittings.	X						
	Hydraulic Fluid Level		X					
	Wheels and tire - inspect for wear, pressure, condition.		X					
	Brake Assemblies - inspect for wear, corrosion, leakage.		X					

INSPECTION TIME LIMITS		HOURS					MECH INITIALS	
		25	50	100	200	RT	LT	
	Hydraulic Fluid Screen - clean and inspect. NOTE: if floats sit for extended periods of time (i.e. if removed during winter months), screen should be cleaned before putting floats back into service. Hydraulic fluid in reservoir should be checked for moisture or other contaminants and changed if necessary.			X				
	Main and nose gear actuator, assemblies - inspect for condition, lubrication, leakage, corrosion and cleanliness.			X				
	Nose gear springs - scotch-ply springs, inspect for cracks, delamination and paint.			X				
	Main gear drag link garlock bushings - inspect for condition, lubrication, corrosion.			X				
	Main gear oleos - inspect for evidence of leakage, proper extension, check cylinder for corrosion, pitting, cleanliness and security.		X					
	Hydraulic lines and fittings - inspect for leaks, condition and security.				X			
	Hydraulic manifolds (if equipped) - inspect for condition, security and leaks.				X			
	Brake system plumbing - inspect for leaks, condition and security.				X			
	Main gear oleos - service (fluid-pressure)			X				

INSPECTION TIME LIMITS		HOURS				MECH INITIALS	
		25	50	100	200	RT	LT
Landing Gear Systems	Perform retraction test:				X		
		Inspect main gear up and down hooks for proper engagement					
		Inspect nose gear trolley for proper travel.				X	
		Inspect nose gear for excessive side play in the down position.				X	
		Perform emergency gear extension (if equipped)				X	
	Nose and main wheel bearings - disassemble and inspect				X		

CHAPTER 9 TROUBLE SHOOTING

CONTENTS

9.0 TROUBLE SHOOTING.....	46
---------------------------	----

9.0 TROUBLE SHOOTING

1. **PROBLEM** – Powerpack does not run after gear selection.

Probable cause:

- a. Circuit breaker out.
- b. Pressure switch not pulling in at low cut-in.
- c. Solenoid switch not pulling in.
- d. Faulty pump motor or motor ground.

Verification and Remedy:

- a. Reset Circuit Breaker
- b. Short across pressure switch leads and see if motor runs.
- c. Short across main solenoid leads and see if motor operates. If it operates—replace pressure switch.
- d. If c above does not produce results, and it is verified that voltage was actually applied to the motor, it can be assumed that the motor is bad.

2. **PROBLEM** – Powerpack does not shut off after gear reaches position.

Probable cause:

- a. Faulty pressure switch
- b. Faulty or dirty pressure relief valve allowing insufficient pressure buildup.

Remedy:

- a. Replace pressure switch
- b. Clean and check relief valve.

3. **PROBLEM** – Powerpack shuts off before gear reaches position.

Probable cause:

- a. Binding or jammed gear retractor which causes pressure to build up (and stay up), and pressure switch shuts off powerpack.

Remedy:

- a. Repair retractor.

4. **PROBLEM** – Powerpack cycles on and off after gear is in position.

Probable cause:

- a. Internal hydraulic leak.
- b. External hydraulic leak.

Remedy:

- a. Verify leak is not external by checking fluid level in reservoir and looking at couplings for oil leaks—then disconnect and cap off hydraulic actuators one at a time, and find the leaky one by process of elimination. If isolating entire system still indicates internal leak, powerpack check valve (located in pressure part of pump) is bad and needs replacement
- b. Visually inspect lines, cylinders and hoses and replace as necessary.

PROBLEM – Powerpack cycles on and off during gear cycle.

Probable cause:

- a. Binding retraction unit.
- b. Pressure switch cut off limit too low.

Remedy:

- a. Investigate for free operation gear that retracts last.
- b. Replace pressure switch.

6. PROBLEM – Slow gear operation cycle (considerably longer than 23 seconds).

Probable cause:

- a. Plugged oil screen.
- b. Poor electrical connection to motor.
- c. Poor motor.
- d. Worn pump gears.

Remedy:

- a. Clean intake screen located inside reservoir tank.
- b. Connect motor direct to 24-volt source and note its operation—if good, wire connection is bad---if operation poor, motor needs overhaul.

7. PROBLEM – Circuit breaker pops during cycle.

Probable cause:

- b. Wire connections bad or corroded.
- c. Motor brushes are bad.

Remedy:

- a. Clean and protect terminals with insulating grease.
- b. Overhaul motor.

THIS PAGE INTENTIONALLY LEFT BLANK

CHAPTER 10 BOLT TORQUES

CONTENTS

10.0 BOLT TORQUES	50
-------------------------	----

10.0 BOLT TORQUES

In the absence of any preempting data such as that found on installation drawings, use the NON-STANDARD table below for the listed fasteners. If the nut and bolt torque is not included in the NON-STANDARD TORQUES table and has no torque value provided on an associated installation drawing or service letter, use AC43.13-1B standard torque value tables shown below.

Use caution when tightening bolts in shear that are subject to rotational movement. The nut should be run down to washer or bearing surface snugly and must NOT be over torqued. Over torquing may cause deformation of the connection to a degree likely to result in binding or unnecessary wear.

NON-STANDARD TORQUES

ASSEMBLY P/N	DESCRIPTION	FASTENER P/N	TORQUE (IN-LBS)
3A04000-060 (40-78A)	Main Wheel Assembly (Cleveland)	AN4-22A	75
30-9C	Brake Assembly (Cleveland)	AN4H-15A	75-80
30A06000-025 (D-30380)	Nose Wheel Assembly (Cleveland)	AN4-7A	95
49-12AF-001	Nose Wheel Assembly (Cleveland)	AN4-23A	90

STANDARD TORQUES PER AC43.13-1B

**TENSION APPLICATION—FINE THREAD		
NUT-BOLT SIZE	TORQUE LIMITS IN-LBS	
	MIN.	MAX.
8-36	12	15
10-32	20	25
1/4-28	50	70
5/16-24	100	140
3/8-24	160	190
7/16-20	450	500
1/2-20	480	690
9/16-18	800	1000
5/8-18	1100	1300
3/4-16	2300	2500
7/8-14	2500	3000
1-14	3700	5500
1 1/8-12	5000	7000
1 1/4-12	9000	11000

**SHEAR APPLICATION—FINE THREAD		
NUT-BOLT SIZE	TORQUE LIMITS IN-LBS	
	MIN.	MAX.
8-36	7	9
10-32	12	15
1/4-28	30	40
5/16-24	60	85
3/8-24	95	110
7/16-20	270	300
1/2-20	290	410
9/16-18	480	600
5/8-18	600	780
3/4-16	1300	1500
7/8-14	1500	1800
1-14	2200	3300
1 1/8-12	3000	4200
1 1/4-12	5400	6600

** A Torque of 80% should be used when Tef-Gel is applied to the bolt.