



WIPLINE FLOATS | MODIFICATIONS | AIRCRAFT SALES
AVIONICS | INTERIORS | MAINTENANCE | PAINT



**PARTS MANUAL
FOR
WIPLINE MODEL 3000 FLOATS ON
MAULE
M-7-260, M-7-260C, MT-7-260, M-7-235,
M-7-235B, M-7-235C, MT-7-235, M-6-235,
M-7-420A, M-7-420AC**

Revision Y

THIS PAGE INTENTIONALLY LEFT BLANK

LOG OF REVISIONS

Revision	Pages Affected	Description	Date
A-K	All	For previous revision changes, reference Parts Manual for 3000 Floats on Maule Revision K part number 1002172.	3/13/2020
L	34-41, 73	Updated stiffeners and skins. Changed Spring, Nose Gear 21A06653-001 to 30A06655-001.	6/30/2020
M	All	Added note about nose and main gear tire/tube. Changed Bolt NAS6210-52 to 30A05702-020 in Main Gear Installation section. Added sections for Post/Pre Service Letter 222 for Hydraulics and Electrical. 12VDC Hydraulic Pump 1011611 replaced 23A09000-225. 24 VDC Hydraulic Pump 1011612 replaced 23A09000-276. Updated Hydraulic System Installation image and parts list. Updated Hydraulic Pump Assembly image and parts list. Added Hydraulic Pump Support Plate Assembly image and parts list. Updated Electrical Schematic image and parts list.	5/10/2021
N	75, 85	Changed 010-026 Seal to 471570 Seal, Timken. Changed Brake Disc 164-24500 to 164-24501.	2/14/2022
P	All	Updated Water Rudder Installation image and parts list. Updated part 30A05558-001 and added 1005973 in Main Gear Installation and Main Gear Hydraulic Installation sections. Added note for 1002573. Added image and parts list for Main Gear Without Wheel Pivot Assembly For Float Serial Numbers 30307A & 30308A And Later section. Added image and parts list for Main Gear With Wheel Pivot Assembly For Float Serial Numbers 30307A & 30308A And Later section.	9/6/2022
R	58, 71, 85	Updated Pump Out Cup and Valve image and parts. Changed Spring, Nose Gear 34A06656-001 to 30A06655-001 in Nose Gear Retraction Assembly section. Updated parts list in Main Gear Wheel Assembly section.	3/13/2023
T	53, 55	Removed Chines 30A01394-001 and 30A01394-002 and replaced with 1011921 and 1011922 for float serial numbers 30313 and later. Added blank chine 1010119 for float serial numbers 30312 and prior.	9/12/2023
U	79, 83, 98-99, 120-121	Updated description for 30A05558-001 and 1005973. Updated Main Gear Rotary Actuator Assembly image and parts list. Updated Hydraulic Pump Aft Fuselage Schematic image and parts list.	3/12/2024
V	79, 81, 133, 135	Changed Sealing Washer 93783A033 to 93783A035 in Main Gear Installation section. Updated parts list in Main Gear Retraction section. Corrected bulb part numbers in gear control indicator assemblies.	2/5/2025
W	37, 39-42	Removed Bracket, Canoe Paddle Stop, LH 6A01156-059, Bracket, Canoe Paddle Stop, RH 6A01156-058, Canoe Paddle 5 ft Beaver Brand 0238-0050, Canoe Paddle Bracket 3A01158-093, and Paddle Clip 3A01503-001 from Bottom Skins & Doublers section. Added Canoe Paddle section image and parts list. Updated side skin images and part numbers.	4/18/2025
Y	40-41, 79, 83, 88-91, 98-99	Added Grommet MS35489-31 and Grommet MS35489-4 to Right and Left Float Side Skin Sections. Updated Arm Retract Assemblies 30A05000-039 and 30A05000-040 in Main Gear Installation section and Main Gear Hydraulic Installation section. Removed 21A05000-016 Right Arm Retract Weldment. Added note and updated parts 1005369 and 1005370 and descriptions in Main Gear Without Wheel Pivot Assembly. Updated image and parts list in Main Gear Rotary Actuator Assembly.	9/25/2025

View most current version of parts manual at www.wipaire.com.

THIS PAGE INTENTIONALLY LEFT BLANK

TABLE OF CONTENTS

FLOAT PART SALES DEPARTMENT OPERATIONS	6
INTRODUCTION	7
SECTION 1 HULL BULKHEAD ASSEMBLIES	9
SECTION 2 WHEEL WELL ASSEMBLY	27
SECTION 3 SKINS, STIFFENERS, & CANOE PADDLE	33
SECTION 4 TOP DECK ASSEMBLY	43
SECTION 5 EXTRUSIONS	51
SECTION 6 PUMPER TUBE INSTALLATION	57
SECTION 7 WATER RUDDER, STEERING, AND RETRACT CABLES	59
SECTION 8 LANDING GEAR	69
SECTION 9 STRUTS, WIRES, STEPS, AND SPREADER BARS	101
SECTION 10 HYDRAULIC SYSTEM	107
SECTION 11 ELECTRICAL	127

FLOAT PART SALES DEPARTMENT OPERATIONS

Parts Sales:

Wipaire, Inc.

1700 Henry Avenue – Fleming Field

South St. Paul, MN 55075

Telephone: (651) 306-0459

Fax: (651)-306-0666

Website: www.wipaire.com

Email: customerservice@wipaire.com

Note: Any information not found in this manual for strut package parts and other installation items refer to the installation drawing package provided with the STC at the time of float installation. Additional drawing copies are available for purchase through the Wipaire Customer Service Department.

Parts Ordering

Purchase orders should include:

1. Purchase order number
2. Name of person placing order
3. Invoicing information:
 - a. Customer name - company or individual
 - b. Address
 - c. Phone and fax number
4. Shipping information:
 - a. Address (if different from invoice address)
 - b. Method of shipment/preferred carrier
5. Aircraft model, float model, and serial numbers
6. Wipaire part number; name; type, e.g. left or right; quantity
7. Payment method: VISA, MasterCard, C.O.D. (Collect on Delivery) (U.S. customers only), pre-payment by check or wire transfer, open account (see Credit Policy)

INTRODUCTION

All references in this manual to LEFT and RIGHT are from the perspective of the pilot's seat with the floats fully installed and ready for floatplane operation.

The following is a list of abbreviations that may appear in the description nomenclature fields of this manual:

AB	Afterbody	Inbd.	Inboard
Amphib.	Amphibious	Lg.	Large
AR	As Required	Lt.	Left
Assy.	Assembly	Lwr.	Lower
Brkt.	Bracket	Opt.	Optional
Btm.	Bottom	Otbd.	Outboard
Bulk.	Bulkhead	Reinf.	Reinforcement
Ctr.	Center	Rr.	Rear
Cyl.	Cylinder	Rt.	Right
Ft.	Front	Sm.	Small
Ftg.	Fitting	SN	Serial Number
Fus.	Fuselage	Spr.	Spreader
Fwd	Forward	Upr.	Upper
Horiz.	Horizontal	Vert.	Vertical
Hyd.	Hydraulic	W.W.	Wheel Well

USING THIS PARTS MANUAL


COVERAGE

Parts information is provided in this manual for the hulls and all "deck down" parts. For information on strut package parts and other aircraft installation items, refer to the installation drawing package provided with the STC at the time of float installation. Additional drawing copies are available for purchase through Wipaire Customer Service Department.

Name of main part in the section. Example:
This part is showing the components made up in Bulkhead #1.

BULKHEAD #1

Main part image. If the image has numbers associated with it, then those numbers are item numbers shown in the table below.

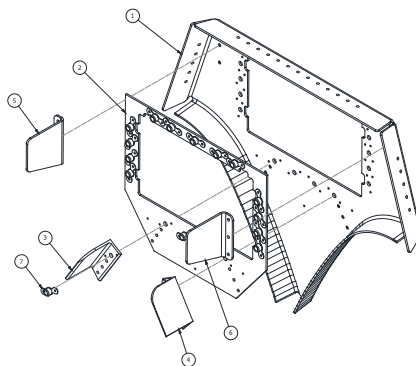

Items with a (-) instead of a number represent the main part as an assembly. Other parts represent the parts included in the assembly.

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1008815	ASSEMBLY BULKHEAD #1, 10000
1	1	1008797	PANEL, BULKHEAD #1
2	1	13A01156-085	DOUBLER #1 BULKHEAD
3	1	13A01357-049	CLEAT, SISTER KEEL ATTACH #1 BULKHEAD
4	1	13A01357-050	CLEAT, SISTER KEEL ATTACH #1 BULKHEAD
5	1	6A01156-054	ANGLE – TOP RAIL
6	1	6A01156-055	ANGLE – TOP RAIL
7	17	MS21047L4	NUT PLATE, SELF LOCKING


To order an individual part, order the part number associated with item number.

SECTION 1 HULL BULKHEAD ASSEMBLIES

CONTENTS

HULL ASSEMBLY	10
BULKHEAD #1	13
BULKHEAD #3	14
BULKHEAD #4	15
BULKHEAD #5	16
BULKHEAD #6	17
BULKHEAD #7	18
BULKHEAD #8	19
BULKHEAD #9 AMPHIBIAN	20
BULKHEAD #9 SEAPLANE	21
BULKHEAD #10	22
BULKHEAD #11	23
BULKHEAD #12	24
BULKHEAD #13	25
BULKHEAD #14	26

HULL ASSEMBLY

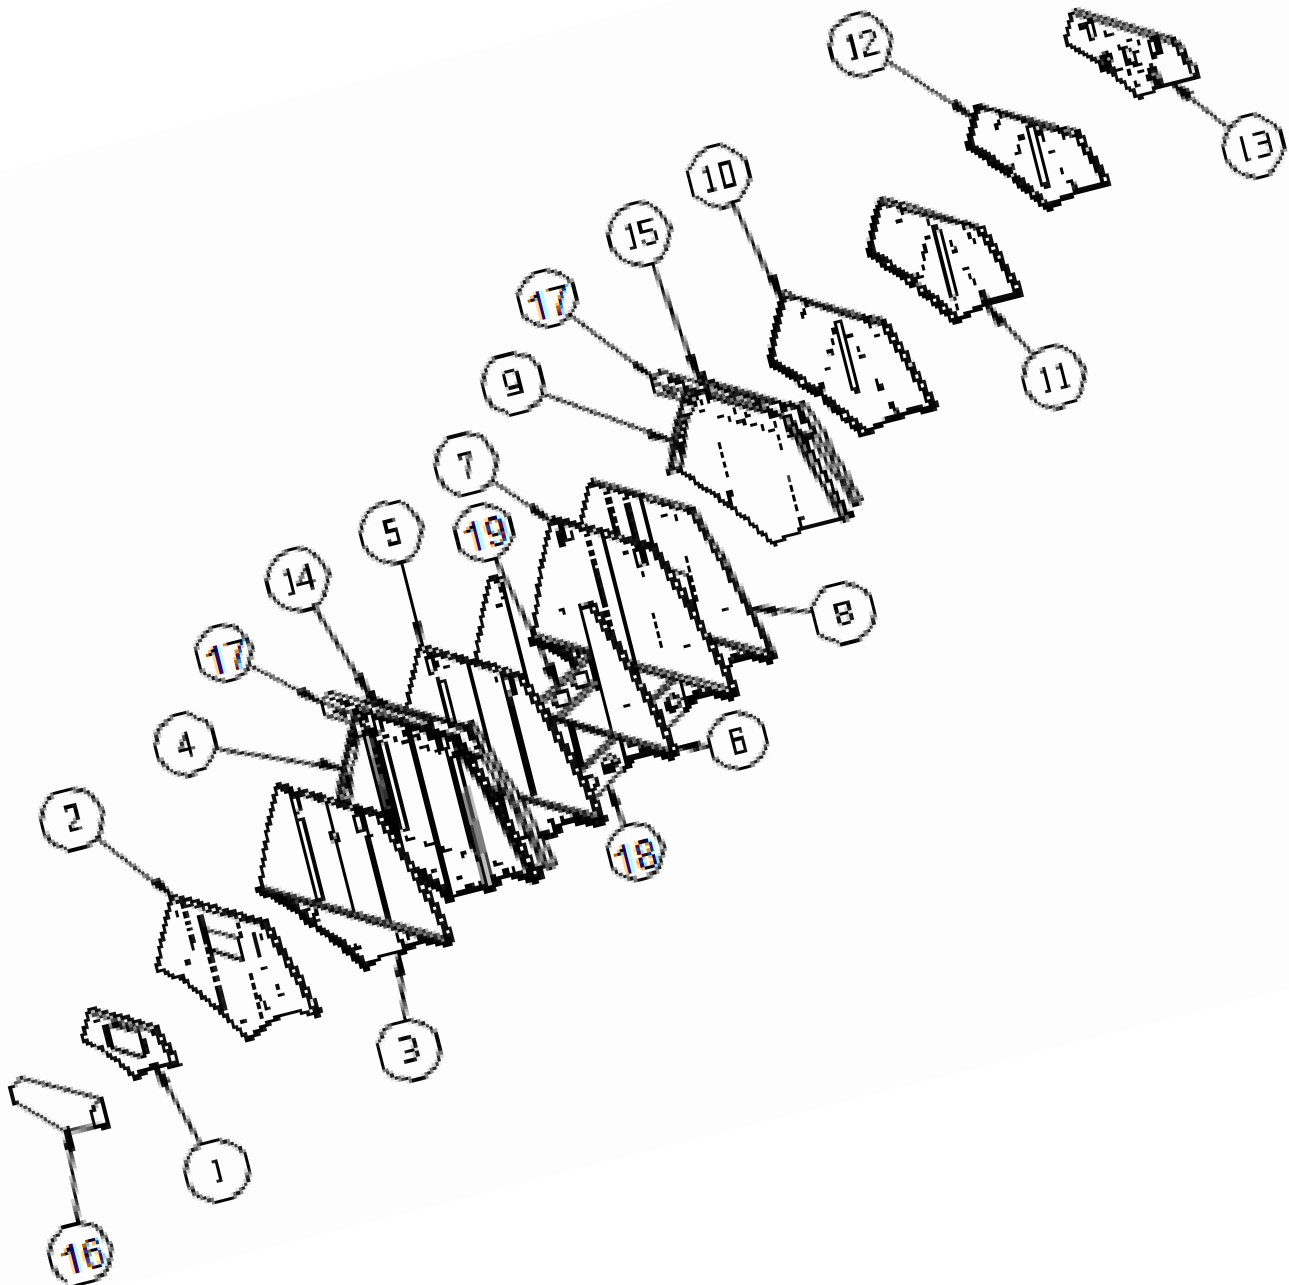


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A01000-329	ASS'Y. BULKHEAD #1
2	1	30A01000-330	ASS'Y. BULKHEAD #3
3	1	30A01000-331	ASS'Y. BULKHEAD #4
4	1	30A01000-336	ASS'Y. BULKHEAD #5
5	1	30A01000-332	ASS'Y. BULKHEAD #6
6	1	30A01000-333	ASS'Y. BULKHEAD #7
7	1	1004914	ASS'Y. BULKHEAD #8
8	1	1004888	ASS'Y. BULKHEAD #9
9	1	30A01000-339	ASS'Y. BULKHEAD #10
10	1	30A01000-340	ASS'Y. BULKHEAD #11
11	1	30A01000-341	ASS'Y. BULKHEAD #12
12	1	30A01000-342	ASS'Y. BULKHEAD #13
13	1	30A01000-343	ASS'Y. BULKHEAD #14
14	1	30A03000-354	ASS'Y SPR. BAR PANEL FWD
	1	30A01155-031	PANEL – SPR. BAR
	1	30A01352-039	ANGLE – SIDE L.
	1	30A01352-040	ANGLE – SIDE R.
	2	6A01359-004	ANGLE
	1	AN4-5A	BOLT
	1	NAS1149F0463P	WASHER
	1	MS21044N4	NUT
15	1	30A01000-353	ASS'Y. SPR. BAR PANEL AFT
	1	30A01155-031	PANEL – SPR. BAR
	1	30A01352-033	ANGLE – SIDE L.
	1	30A01352-034	ANGLE – SIDE R.
	2	30A01156-125	ANGLE
	1	AN4-5A	BOLT
	1	NAS1149F0463P	WASHER
	1	MS21044N4	NUT
16	1	30A01000-365	NOSE BUMPER (AMPHIB)
	1	30S01739-001	NOSE BUMPER (SEAPLANE)
	2	30A01359-225	ANGLE (AMPHIB)
	2	30S01326-034	ANGLE (SEAPLANE)
17	1	30A03319-001	TUBE – SPR. BAR MOUNTING R.
	1	30A03319-002	TUBE – SPR. BAR MOUNTING L.
	6	AN4-22A	BOLT
	12	NAS1149D0416J	WASHER
	12	NAS1149D0463J	WASHER
	6	MS21044N4	NUT
18	2	34A01005-385	BAGGAGE REINFORCEMENT
	4	34A01340-173	ANGLE


ITEM	QTY	PART NO.	PART DESCRIPTION
	4	34A01340-174	ANGLE
19	2	34A01005-384	BAGGAGE REINFORCEMENT
	4	34A01340-173	ANGLE
	4	34A01340-174	ANGLE

BULKHEAD #1

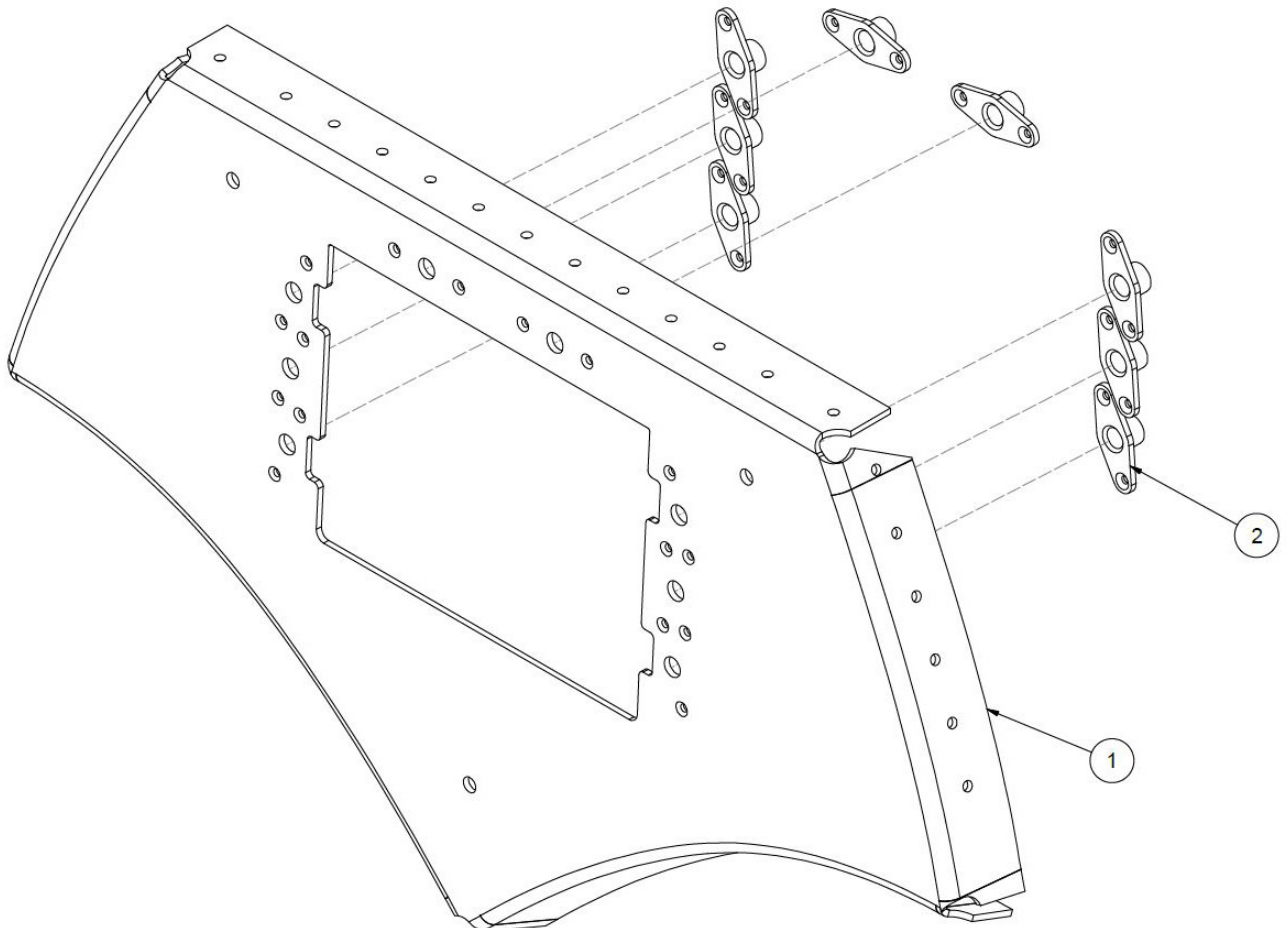


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-329	ASSEMBLY, BULKHEAD, NOSE
1	1	30A01155-029	BULKHEAD #1
2	8	MS21078-4	NUT PLATE
3	1	30S01158-263	COVER – BULKHEAD SEAPLANE (NOT SHOWN)

BULKHEAD #3

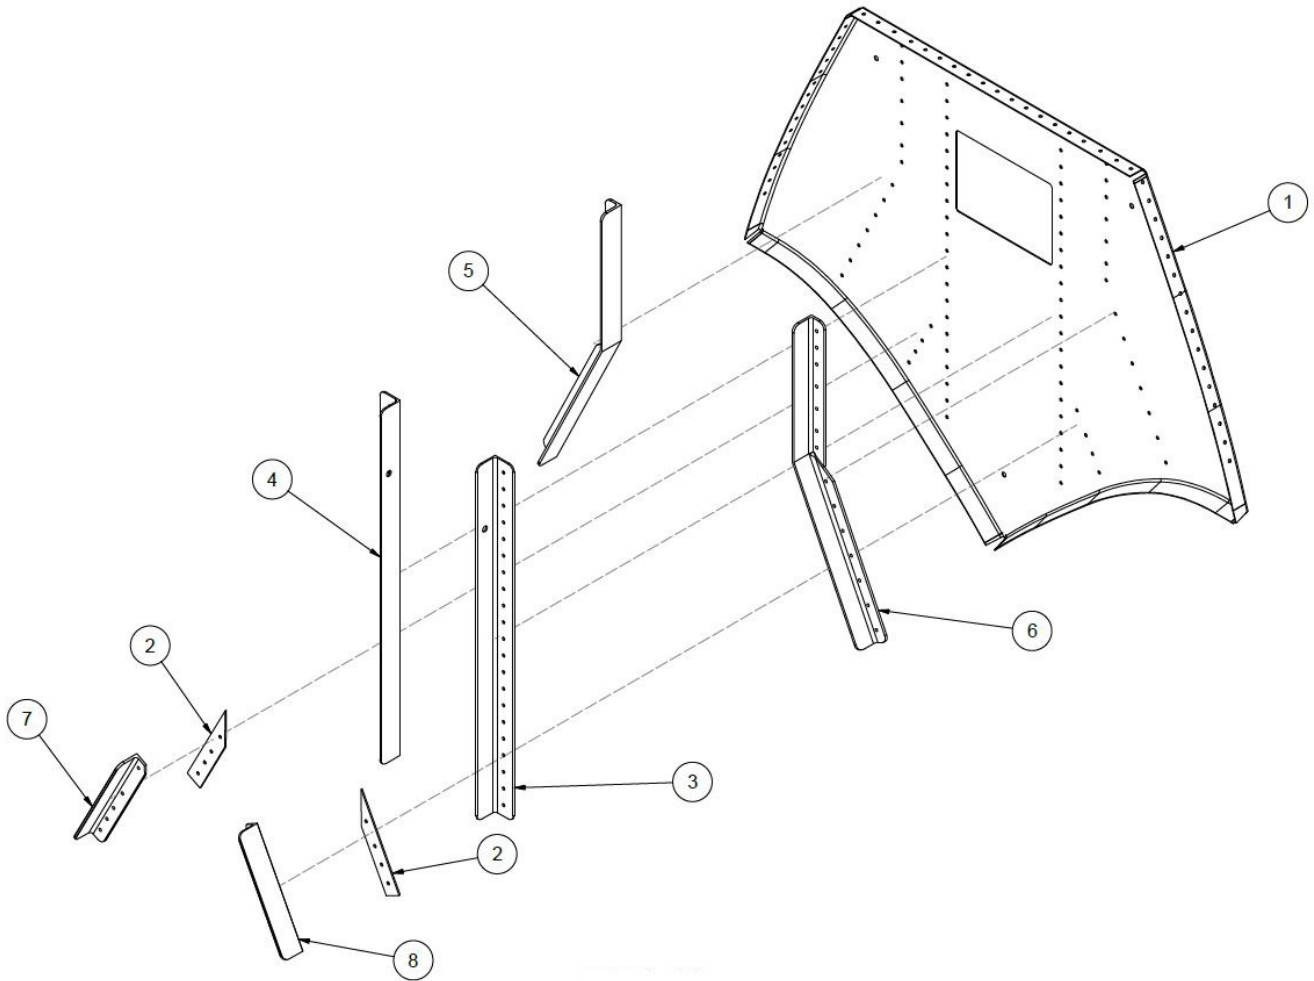


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-330	ASSEMBLY, BULKHEAD 3
1	1	30A01158-208	PANEL, BULKHEAD 3
2	2	30A01163-072	ANGLE, SHIM, BULKHEAD #3
3	1	30A01326-020	ANGLE, NOSE BOX, BULK 3
4	1	30A01326-021	ANGLE NOSE BOX, BULK #3
5	1	30A01359-211	ANGLE, BULKHEAD 3
6	1	30A01359-212	ANGLE, BULKHEAD 3
7	1	30A01359-213	ANGLE, BULKHEAD 3
8	1	30A01359-214	ANGLE, BULKHEAD 3
9	1	30S01158-264	COVER – BULKHEAD SEAPLANE (NOT SHOWN)

BULKHEAD #4

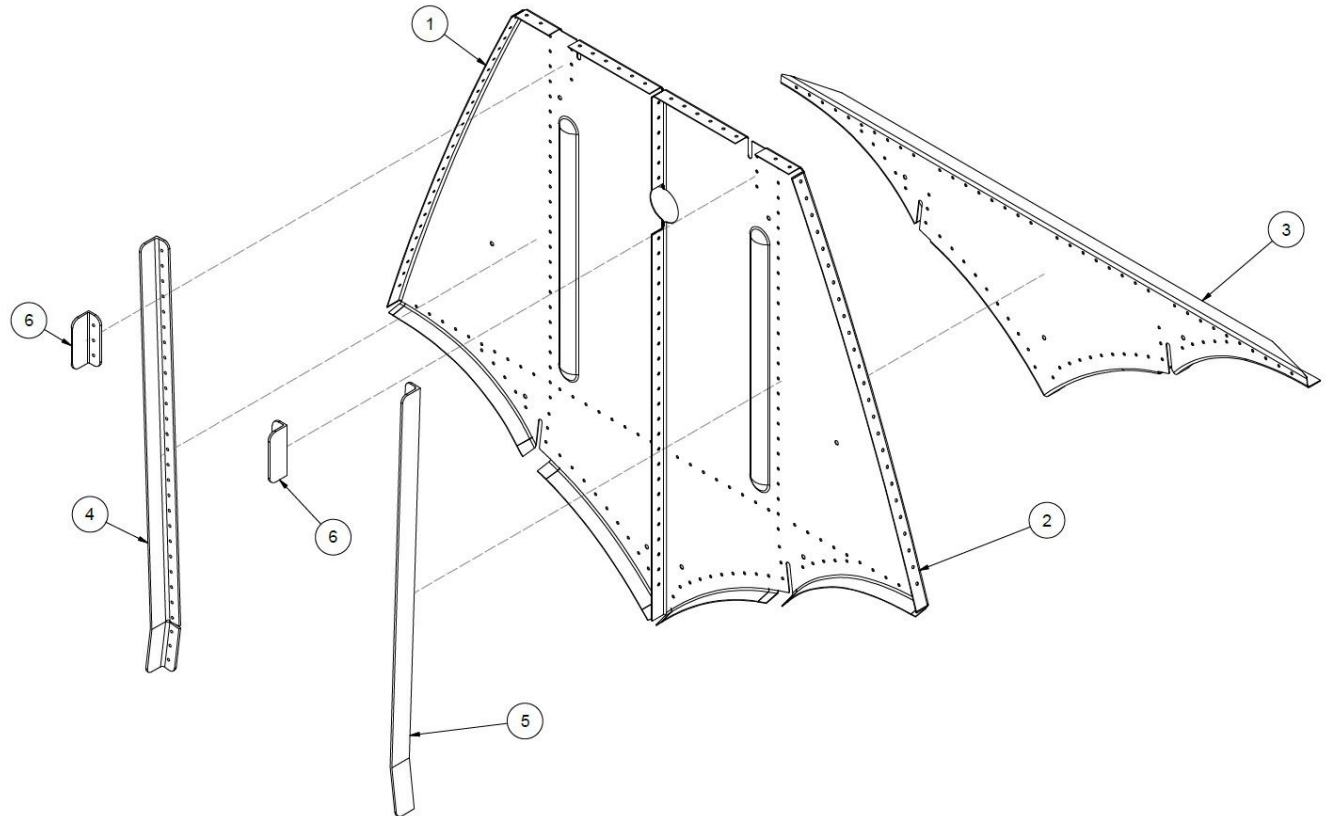


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-331	ASSEMBLY, BULKHEAD 4
1	1	30A01158-209	BULKHEAD #4, LH
2	1	30A01158-210	BULKHEAD #4, RH
3	1	30A01158-222	SUPPORT - BULKHEAD #4
4	1	30A01359-223	ANGLE, BULKHEAD #4, RH
5	1	30A01359-224	ANGLE, BULKHEAD #4, LT
6	2	6A01359-004	ANGLE, ATTACH, TOP RAIL

BULKHEAD #5

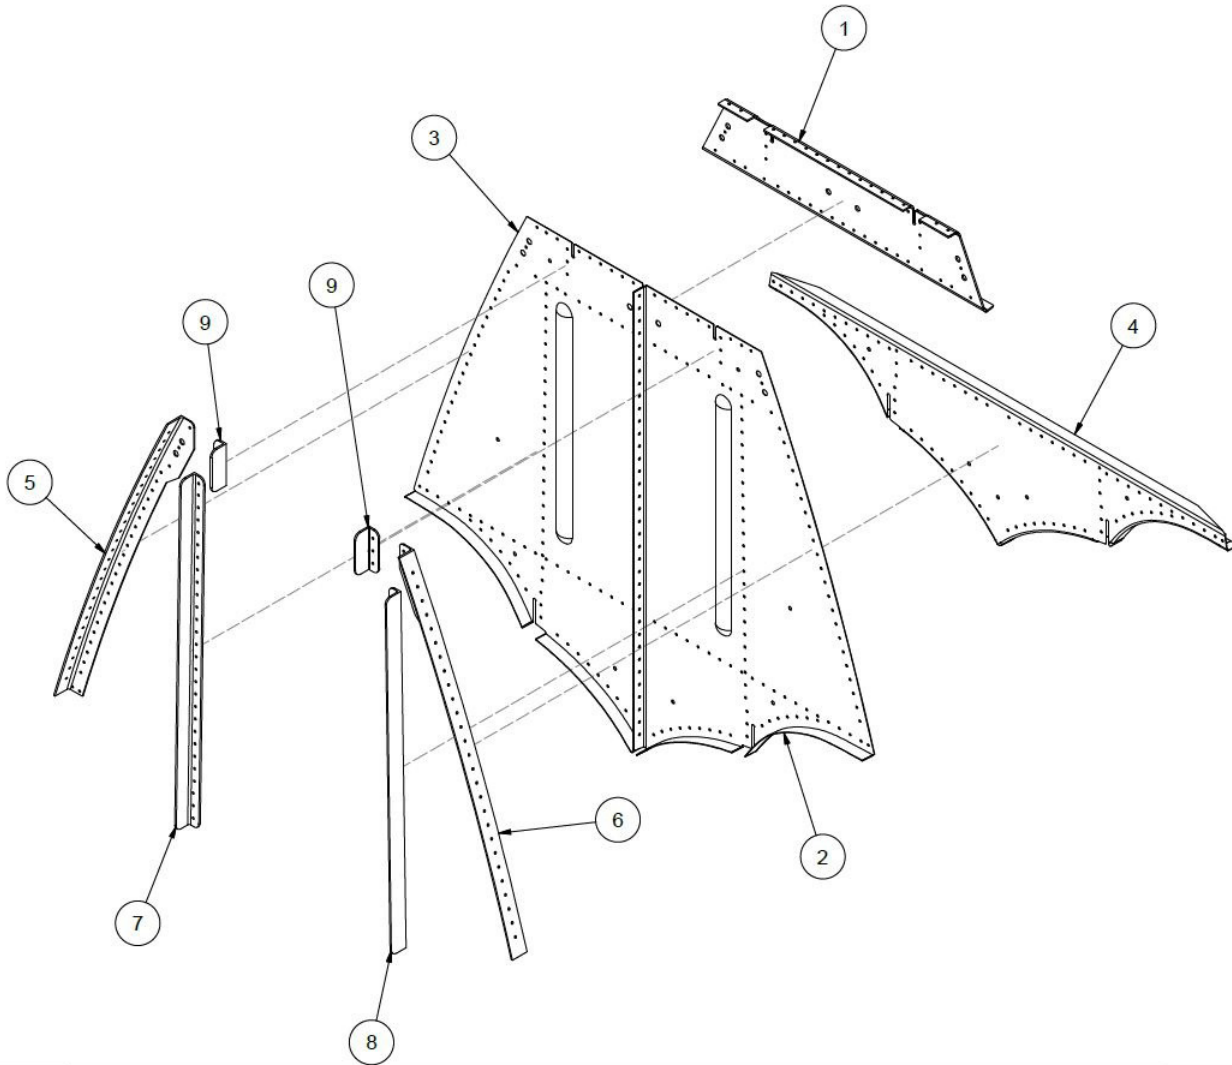


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-336	ASSEMBLY, BULKHEAD 5
1	1	30A01155-032	PANEL, SPREADER BAR, BH 5 & 10
2	1	30A01158-211	BULKHEAD #5 - LH - FORMED
3	1	30A01158-212	BULKHEAD #5 - RH - FORMED
4	1	30A01158-223	SUPPORT - BULKHEAD #5
5	1	30A01352-037	ANGLE, SIDE, BULKHEAD 5
6	1	30A01352-038	ANGLE, SIDE, BULKHEAD 5
7	1	30A01359-221	ANGLE, BULKHEAD STN. #5
8	1	30A01359-222	ANGLE, BULKHEAD STN. #5
9	2	6A01359-004	ANGLE, ATTACH, TOP RAIL

BULKHEAD #6

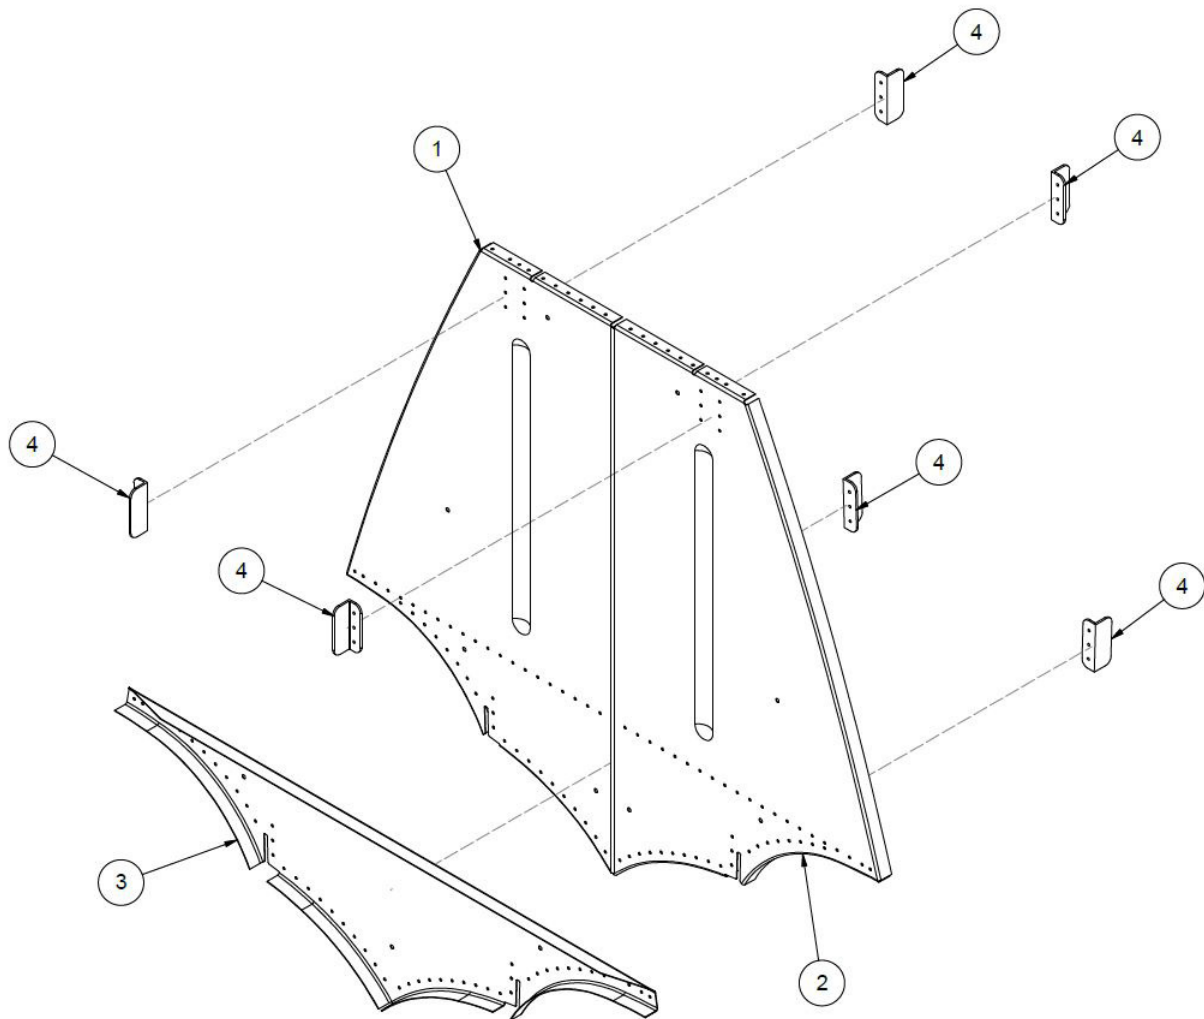


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-332	ASSEMBLY, BULKHEAD 6
1	1	30A01158-213	BULKHEAD #6 - LH - FORMED
2	1	30A01158-214	BULKHEAD #6 - RH - FORMED
3	1	30A01158-224	SUPPORT - BULKHEAD #6
4	6	6A01359-004	ANGLE, ATTACH, TOP RAIL

BULKHEAD #7

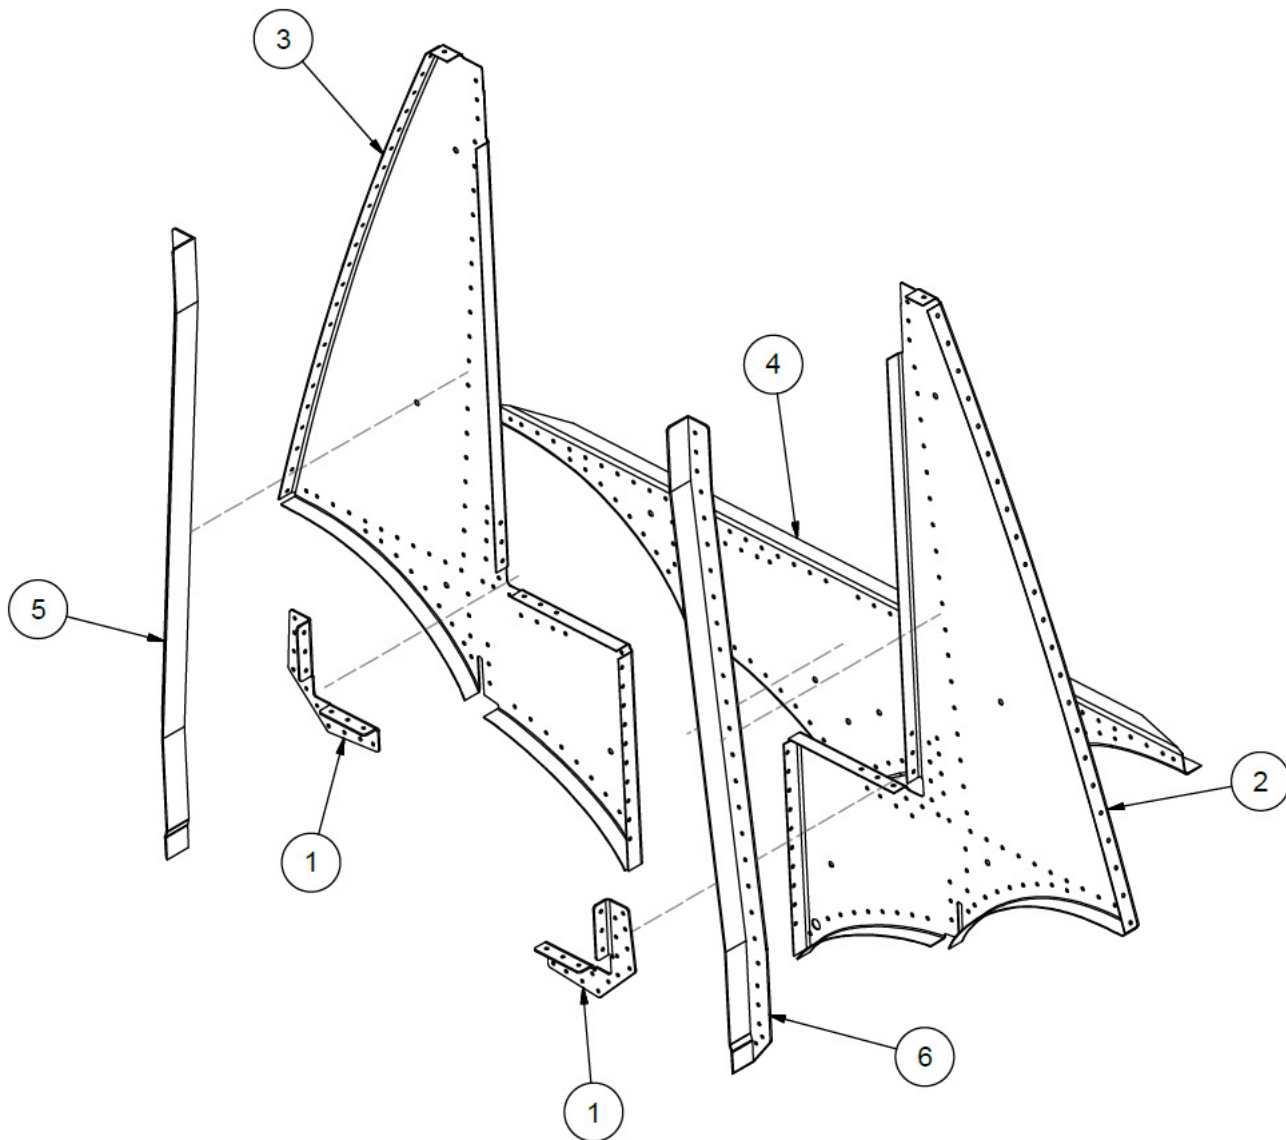


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-333	BULKHEAD ASSEMBLY #7
1	2	1001110	DOUBLER - SUPPORT - LH/RH BULKHEAD #7
2	1	30A01158-215	BULKHEAD - #7, LH
3	1	30A01158-216	BULKHEAD - #7, RH
4	1	30A01158-225	SUPPORT - BULKHEAD #7
5	1	30A01326-036	ANGLE - BULKHEAD #7
6	1	30A01326-037	ANGLE - BULKHEAD #7

BULKHEAD #8

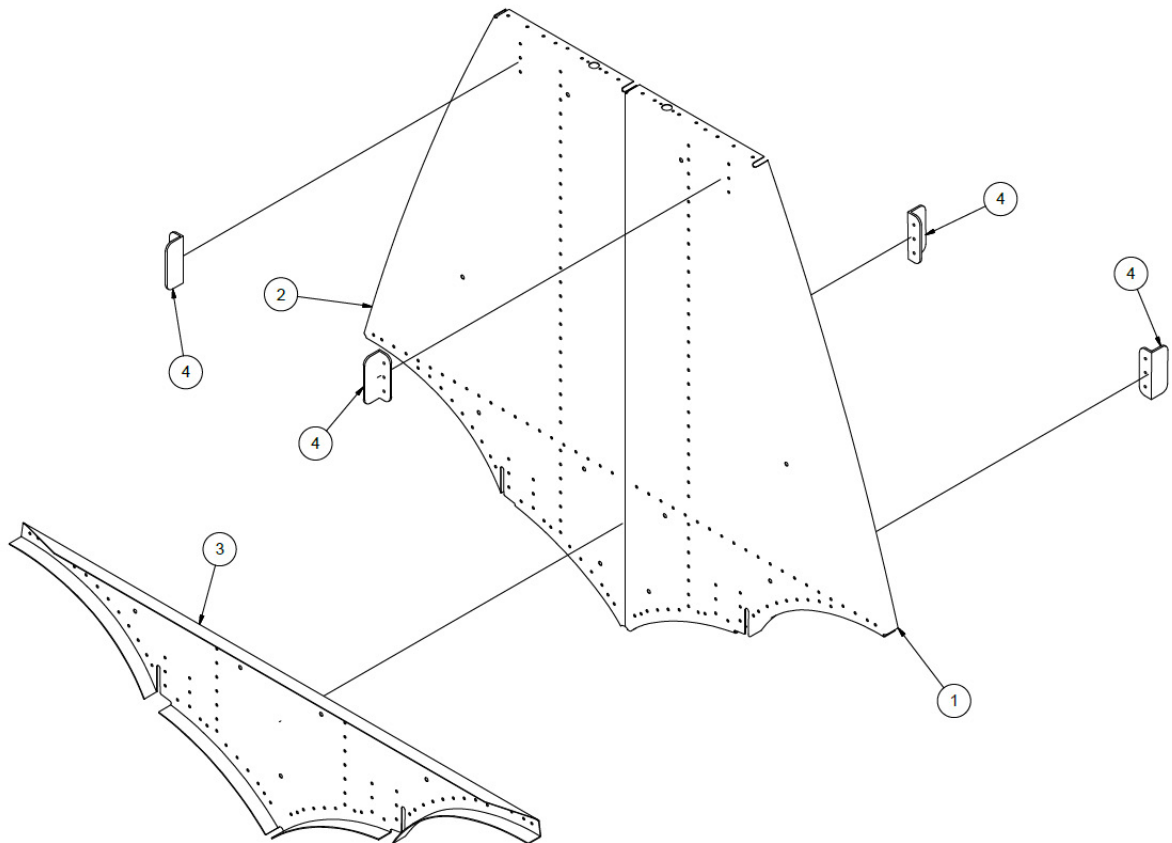


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1004914	ASSEMBLY, BULKHEAD 8, 3000 3450 COMP
1	1	1004912	BULKHEAD, #8, LH, 3000 3450
2	1	1004913	BULKHEAD, #8, RH, 3000 3450
3	1	1004915	SUPPORT, BULKHEAD #8, 3000 3450
4	4	6A01359-004	ANGLE - SUPPORT

BULKHEAD #9 AMPHIBIAN

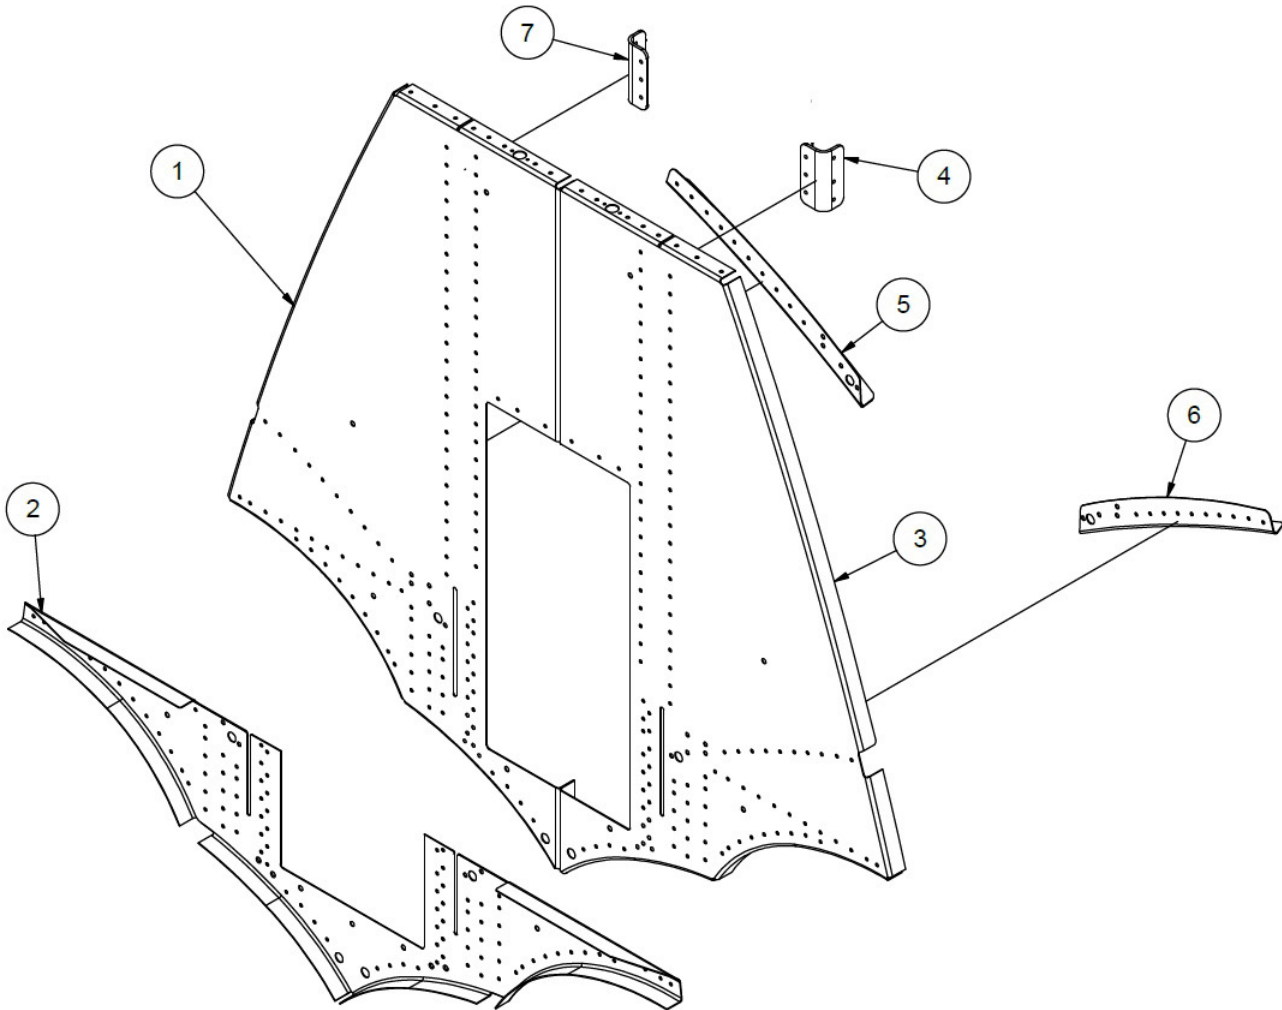


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1004888	ASS'Y BULKHEAD #9
1	1	1004889	BULKHEAD, #9, RIGHT, 3000 3450
2	1	1004890	SUPPORT, RH, BULKHEAD #9
3	1	1004891	BULKHEAD, #9, LEFT, 3000 3450
4	1	1005519	ATTACH, ANGLE, TOP RAIL
5	1	1005581	ANGLE, ATTACH AFT
6	1	1005582	ANGLE, ATTACH AFT
7	1	1005611	ATTACH, ANGLE, TOP RAIL

BULKHEAD #9 SEAPLANE

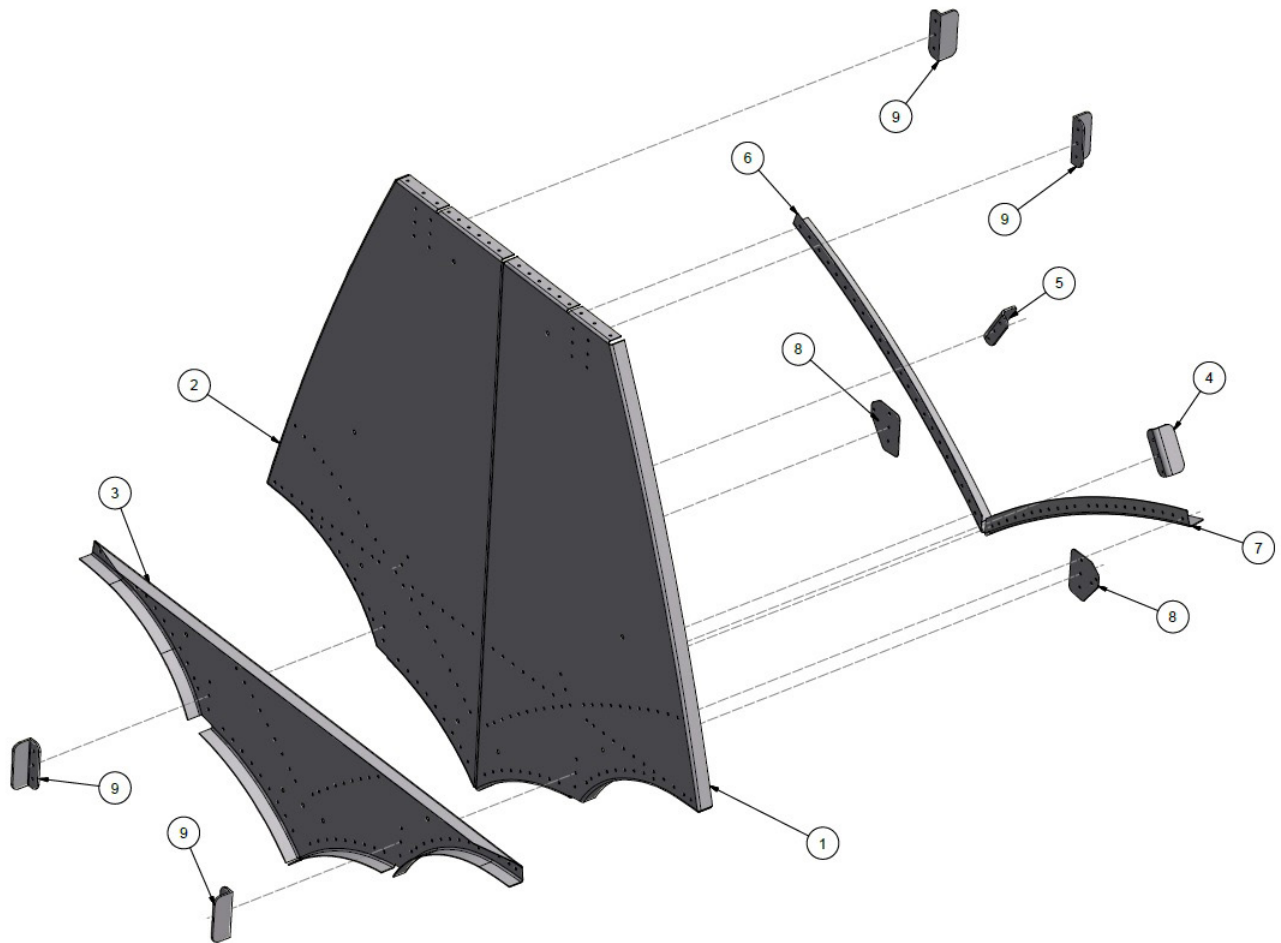


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30S01000-407	ASS'Y BULKHEAD #9 SEAPLANE
1	1	1005792	BULKHEAD # 9, STRAIGHT LEFT
2	1	1005799	BULKHEAD #9, STRAIGHT RIGHT
3	1	1005800	SUPPORT - BULKHEAD, #9
4	1	1005801	ANGLE, ATTACH, AFT, SISTER KEEL
5	1	1005802	ANGLE, ATTACH, AFT, SISTER KEEL
6	1	34S01158-258	ANGLE, SKIN ATTACH, AFT, RT
7	1	34S01158-259	ANGLE, SKIN ATTACH AFT, LT
8	2	4S01158-098	DOUBLER, SISTER KEEL BULKHEAD STN #8
9	4	6A01359-004	ANGLE - SUPPORT

BULKHEAD #10

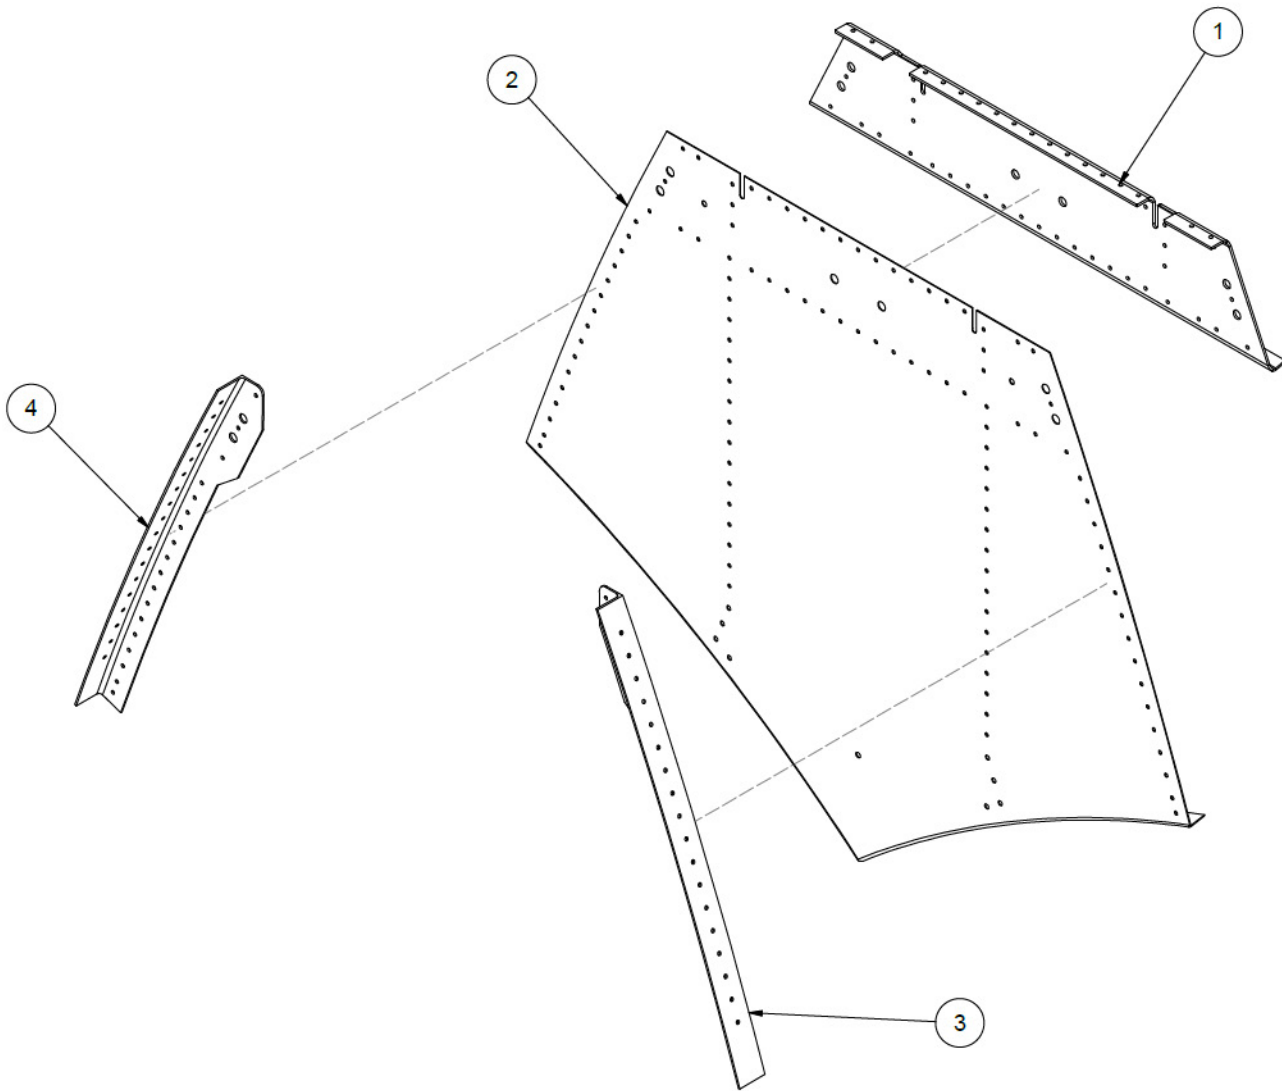


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-339	ASSEMBLY, BULKHEAD 10 (AMPHIB)
-	1	30S01000-408	ASS'Y. BULKHEAD #10 (SEAPLANE ONLY)
1	1	30A01155-032	PANEL, SPREADER BAR, BH 5 & 10
2	1	30A01158-221	BULKHEAD #10
3	1	30A01352-035	ANGLE, SIDE, BULKHEAD 10
4	1	30A01352-036	ANGLE, SIDE, BULKHEAD 10
5	4	6A01359-004	ANGLE (SEAPLANE ONLY NOT SHOWN)
6	2	30S01340-180	ANGLE (SEAPLANE ONLY NOT SHOWN)

BULKHEAD #11

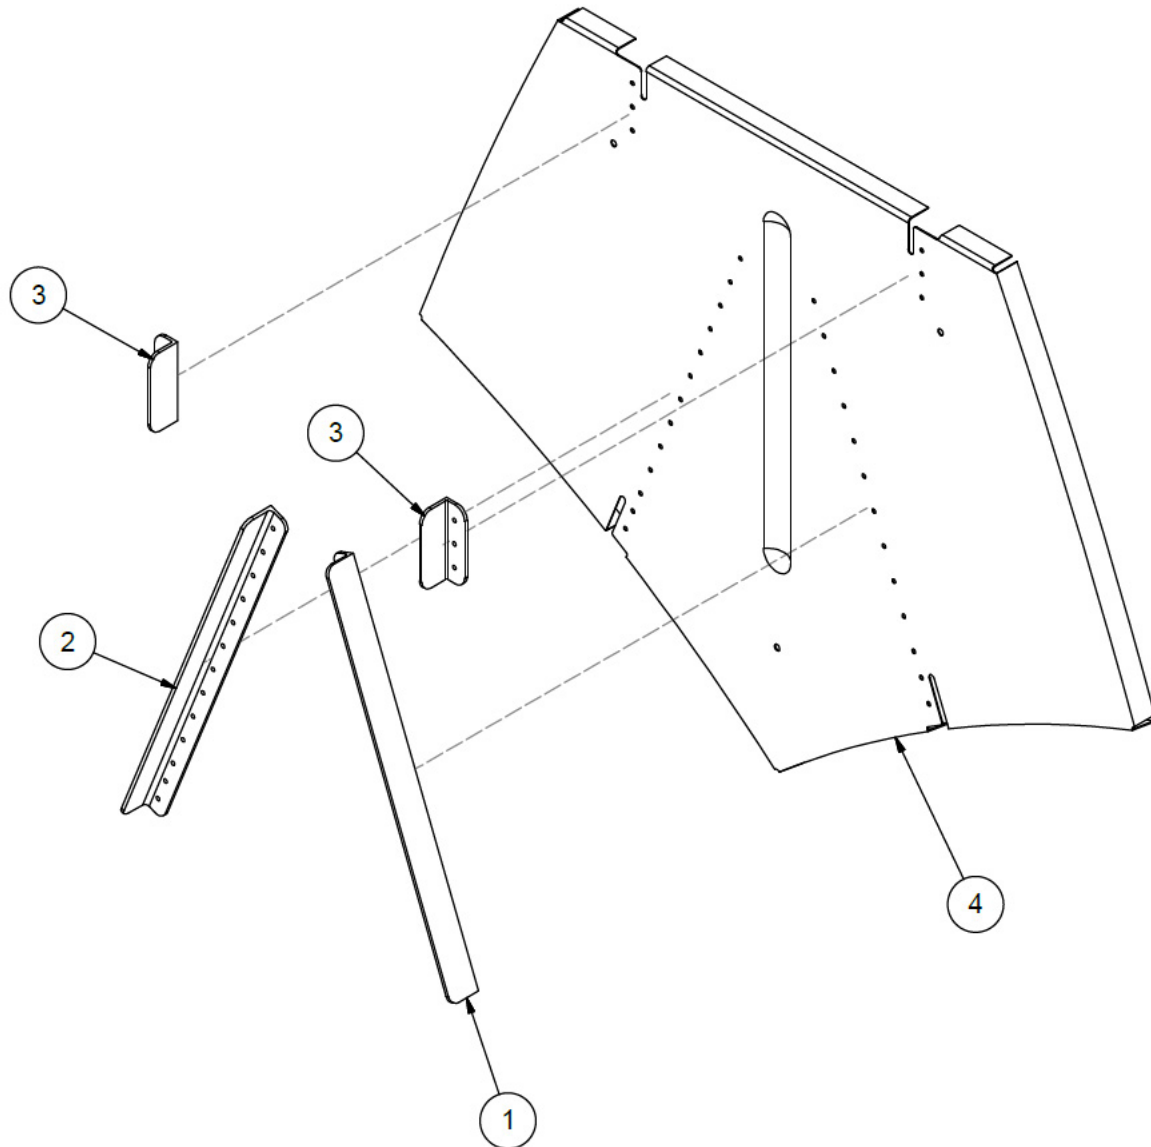


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-340	BULKHEAD STAION #11 ASSY
1	1	30A01359-216	ANGLE - BULKHEAD #11 & #12
2	1	30A01359-217	ANGLE - BULKHEAD #11 & #12
3	2	6A01359-004	ANGLE, ATTACH, TOP RAIL
4	1	30A01158-204	BULKHEAD #11

BULKHEAD #12

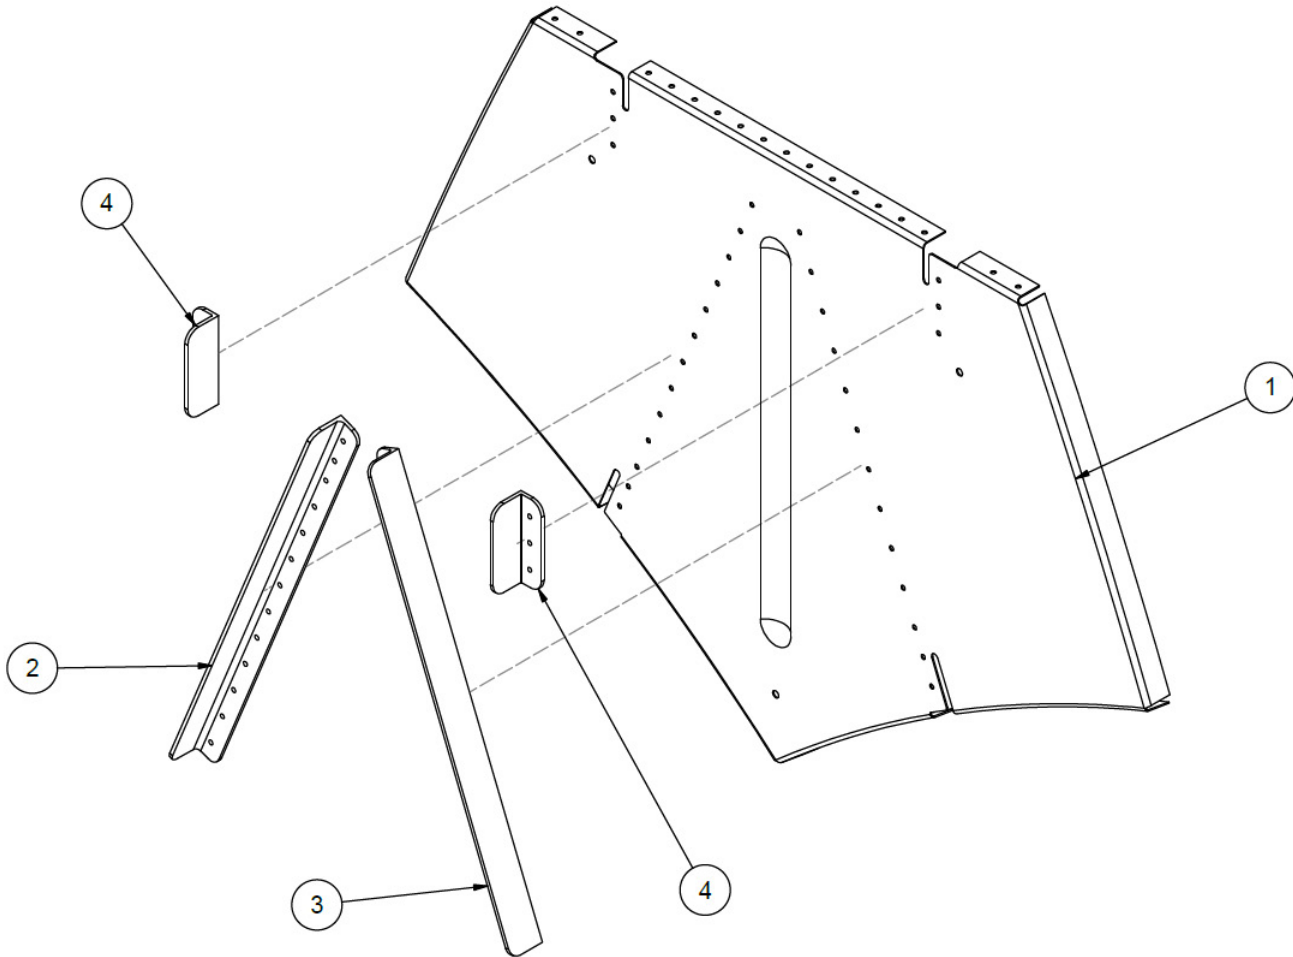


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-341	30A01000-341
1	1	30A01158-205	BULKHEAD #12
2	1	30A01359-216	ANGLE - BULKHEAD #11 & #12
3	1	30A01359-217	ANGLE - BULKHEAD #11 & #12
4	2	6A01359-004	ANGLE, ATTACH, TOP RAIL

BULKHEAD #13

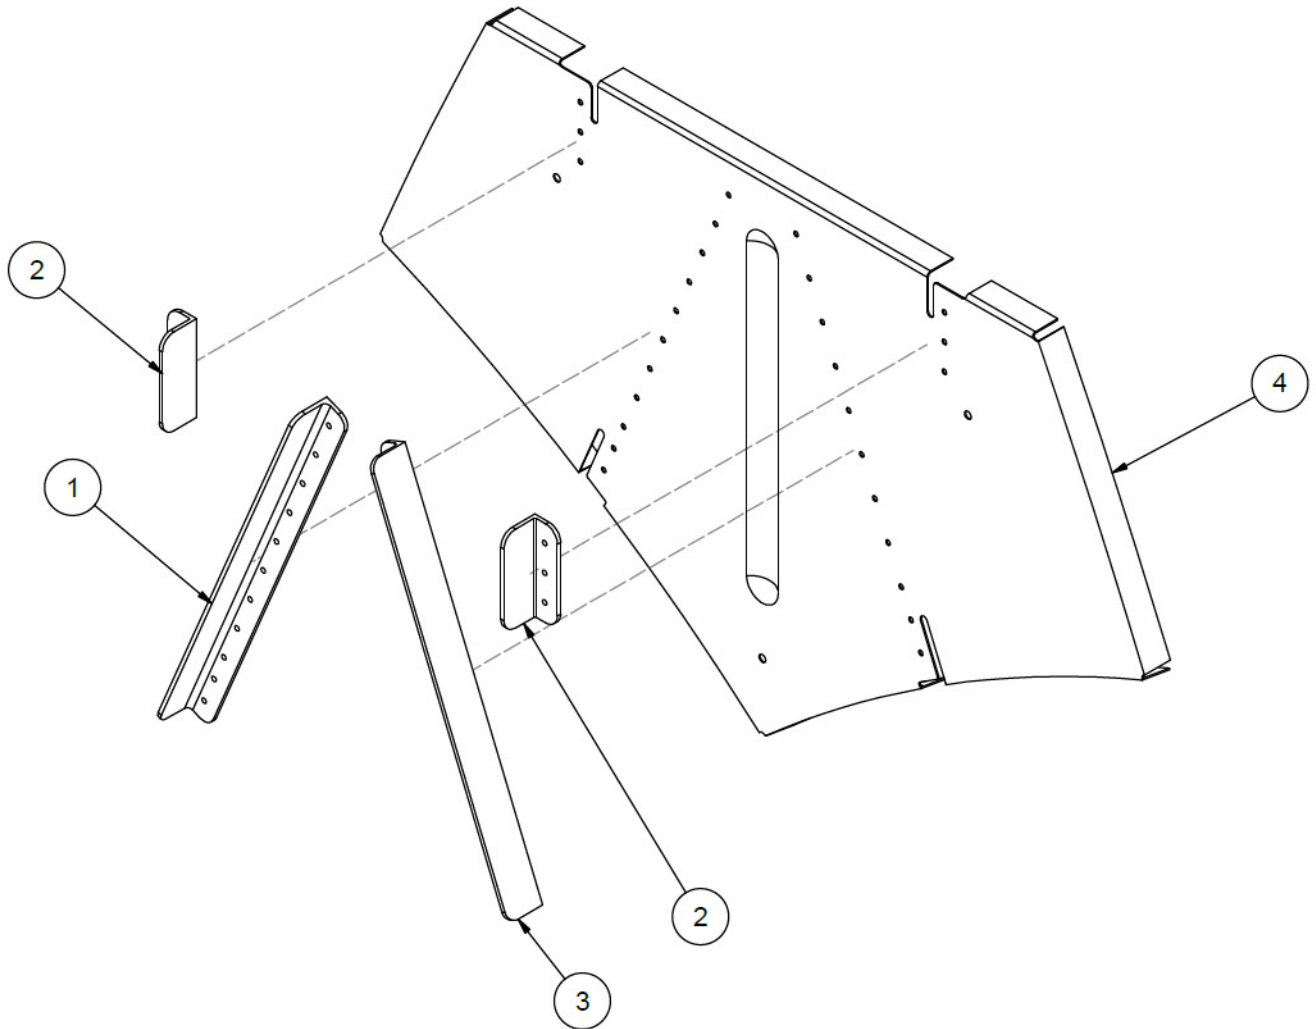

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-342	BULKHEAD STATION #13 ASSY
1	1	30A01359-218	ANGLE - BULKHEAD #13
2	2	6A01359-004	ANGLE, ATTACH, TOP RAIL
3	1	30A01359-219	ANGLE - BULKHEAD #13
4	1	30A01158-206	BULKHEAD #13

BULKHEAD #14

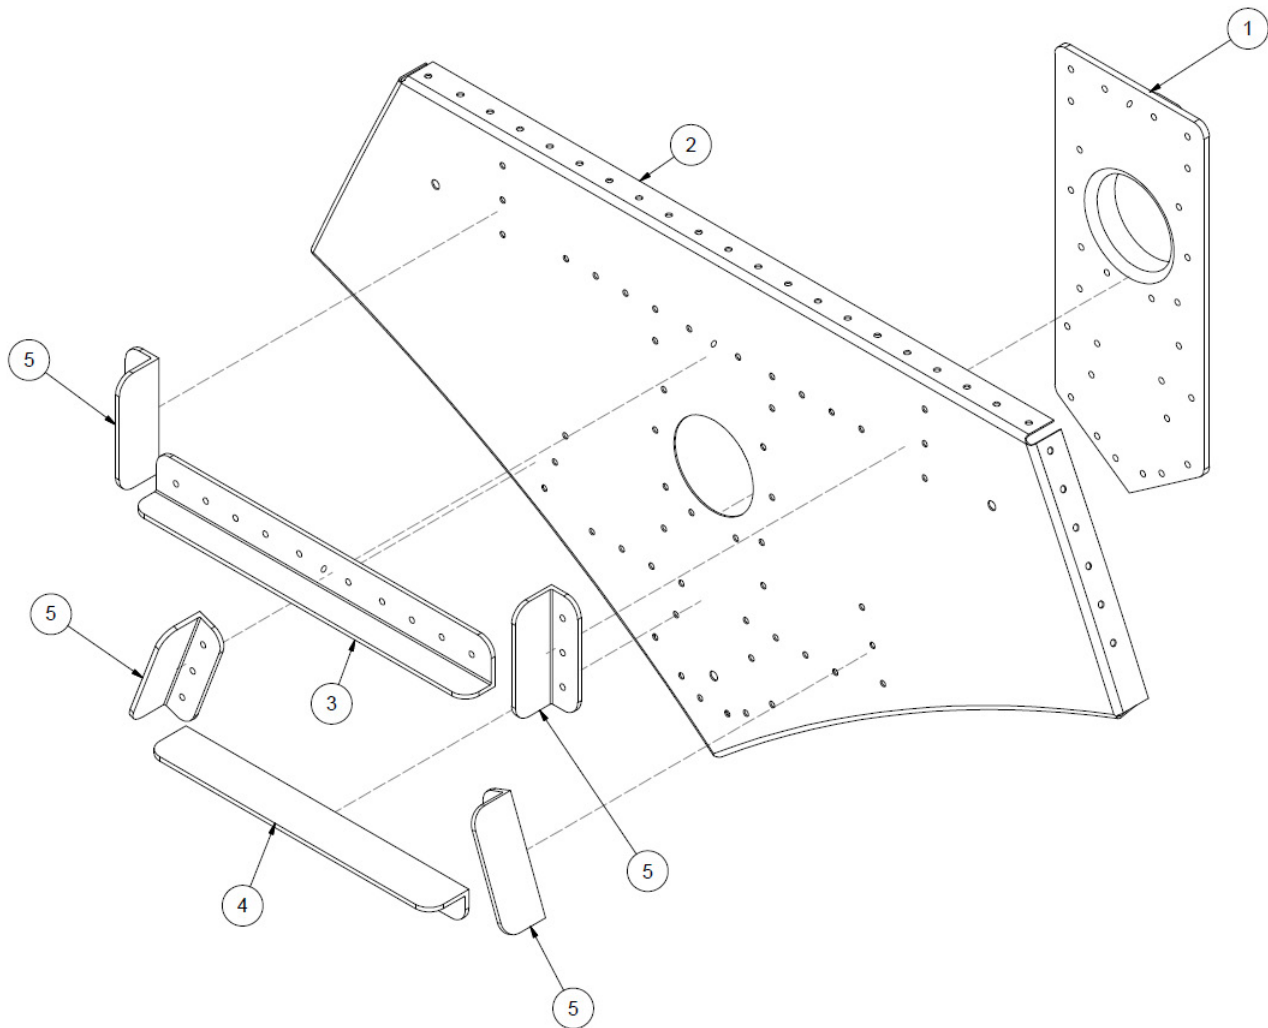

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	30A01000-343	ASSEMBLY, BULKHEAD #14
1	1	1008934	MOUNT, PIVOT, WATER RUDDER
2	1	30A01158-207	BULKHEAD #14
3	1	30A01359-209	ANGLE, BULKHEAD #14, UPPER
4	1	30A01359-210	ANGLE, BULKHEAD #14, LOWER
5	4	6A01359-004	ANGLE - SUPPORT


SECTION 2
WHEEL WELL ASSEMBLY

CONTENTS

WHEEL WELL AREA28

WHEEL WELL ASSEMBLY - AMPHIBIAN30


WHEEL WELL AREA

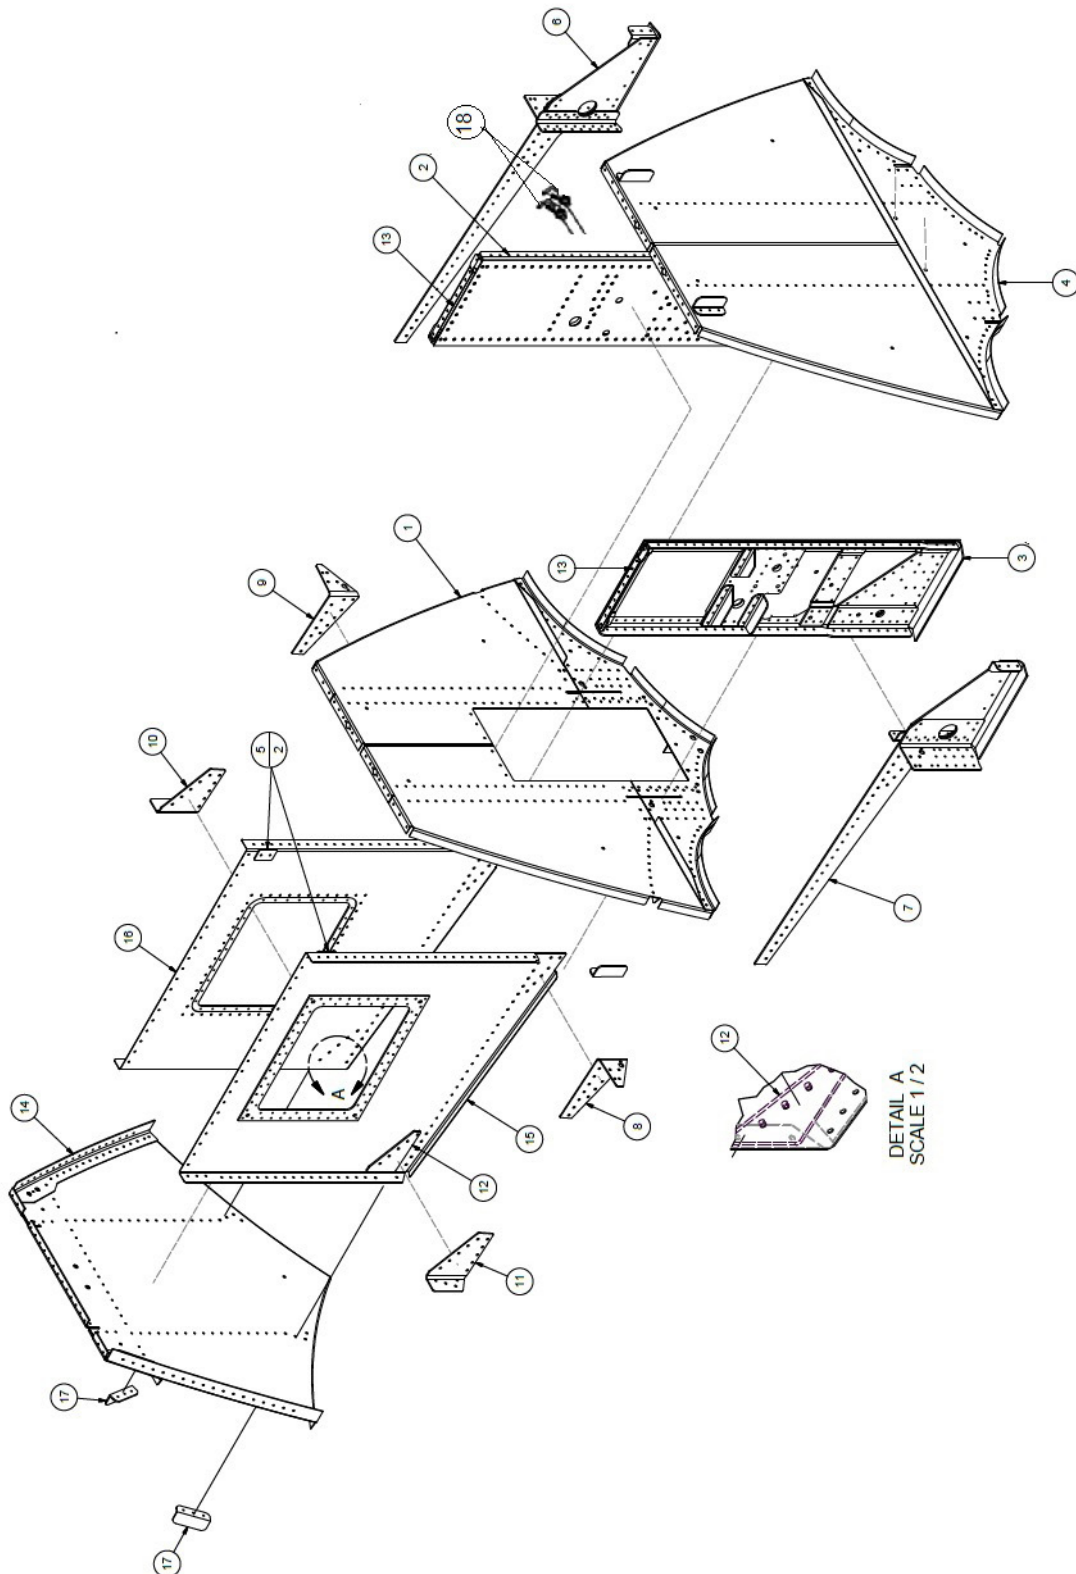

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1005530	ASSEMBLY, WHEEL WELL, CENTERED, 3000
1	1	1004888	ASS'Y BULKHEAD #9
2	1	1004893	ASSEMBLY, PANEL, MAIN GEAR
3	1	1004894	ASSEMBLY, PANEL, MAIN GEAR
4	1	1004914	ASSEMBLY, BULKHEAD 8, 3000 3450 COMP
5	2	1005520	SPACER, ATTACH, ANGLE, TOP RAIL
6	1	1005523	ASSEMBLY, CARRY THRU STRAP, RIGHT
7	1	1005524	ASSEMBLY, CARRY THRU STRAP, LEFT
8	1	1005531	GUSSET, WHEEL WELL
9	1	1005532	GUSSET, WHEEL WELL
10	1	1005542	GUSSET, WHEEL WELL, REAR
11	1	1005543	GUSSET, WHEEL WELL, REAR
12	2	1005550	SPACER, GUSSET, CARRY-THRU
13	2	1005557	SPACER, ANGLE, PANEL, MAIN GEAR
14	1	30A01000-339	ASS'Y BULKHEAD #10
15	1	30A01000-348	ASSEMBLY, PANEL, SIDE, WHEEL WELL, RH
16	1	30A01000-349	ASSEMBLY, PANEL, SIDE, WHEEL WELL, LH
17	4	6A01359-004	ANGLE, ATTACH, TOP RAIL
18	2	1005724	SWITCH, PROXIMITY

WHEEL WELL ASSEMBLY - AMPHIBIAN

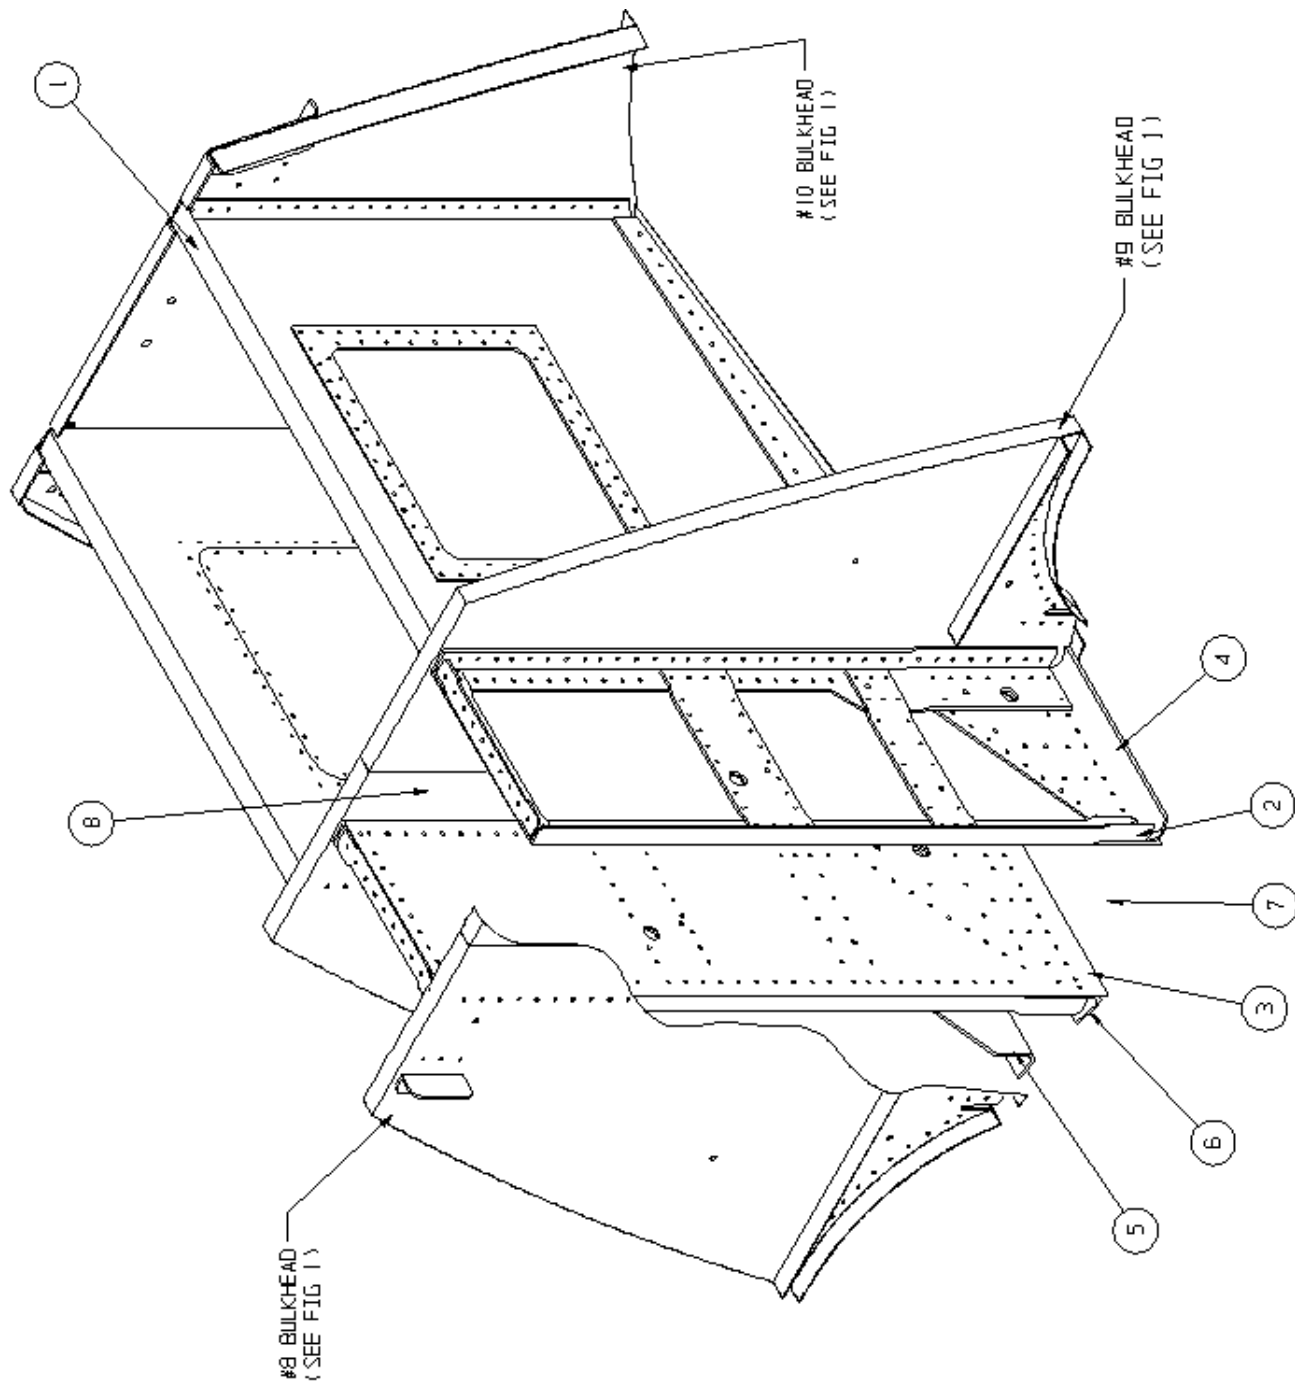

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1 LT.	1	30A01000-349	ASS'Y. WHEELWELL HALF L.
	1	30A01158-235	PANEL – FORMED L.
	1	13A01156-124	RING – COVER REINFORCEMENT
	1	21A01004-101	COVER
	28	AN526-632R6	SCREW
1 RT.	1	30A01000-348	ASS'Y. WHEELWELL HALF R.
	1	30A01158-234	PANEL – FORMED R.
	1	13A01156-124	RING – COVER REINFORCEMENT
	1	21A01004-101	COVER
	28	AN526-632R6	SCREW
2	1	30A01000-345	ASS'Y. WHEELWELL PANEL – OUTBR'D L.
	1	30A01000-350	ASS'Y. WHEELWELL PANEL – OUTBR'D R.
3	1	30A01000-347	ASS'Y. WHEELWELL PANEL – INBR'D L.
	1	30A01000-346	ASS'Y. WHEELWELL PANEL – INBR'D R.
4	1	30A01156-139	CARRY-THRU STRAP OUTBR'D L.
	1	30A01156-142	CARRY-THRU STRAP OUTBR'D R.
5	1	30A01156-141	CARRY-THRU STRAP INBR'D L.
	1	30A01156-140	CARRY-THRU STRAP INBR'D R.
6	1	30A01156-143	CARRY-THRU STRAP INBR'D L.
	1	30A01156-138	CARRY-THRU STRAP INBR'D R.
	1	30A01156-145	ANGLE – ATTACH AFT L.
	1	30A01156-150	ANGLE – ATTACH AFT R.
	1	30A01160-004	SHIM
	2	21A01326-015	ANGLE – ATTACH FWD
7	1	30A01150-139	SAND GUARD (NOT SHOWN) L.
	1	30A01150-140	SAND GUARD (NOT SHOWN) R.
	8	AN526-1032R8	SCREW
8	1	30A01569-002	MUD FLAP (NOT SHOWN)
	1	30A01150-141	REINFORCEMENT

THIS PAGE INTENTIONALLY LEFT BLANK


SECTION 3

SKINS, STIFFENERS, & CANOE PADDLE

CONTENTS

STIFFENERS.....	34
BOTTOM SKINS & DOUBLERS - AMPHIBIAN.....	36
BOTTOM SKINS & DOUBLERS - SEAPLANE.....	38
RIGHT FLOAT SIDE SKINS.....	40
LEFT FLOAT SIDE SKINS	41
CANOE PADDLE	42

STIFFENERS

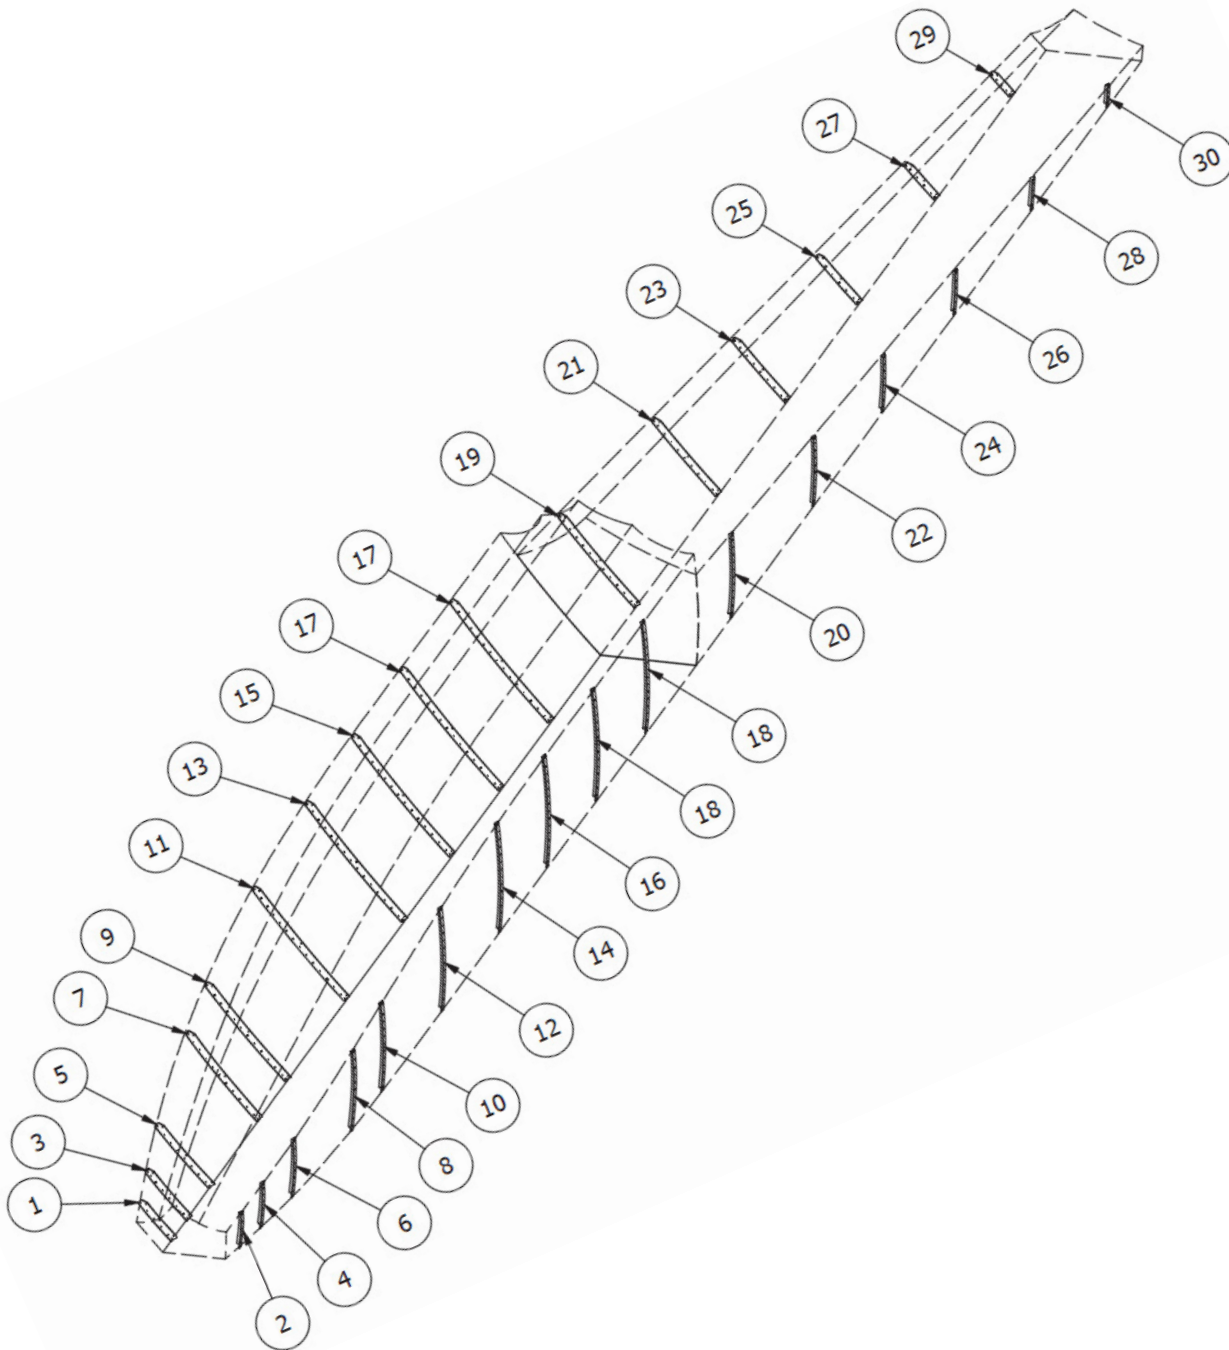


*Glued stiffeners were discontinued after Service Letter 211. Riveted stiffeners are compatible with floats made prior to the service letter.

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1011150	STIFFENER, SIDE SKIN, LH
2	1	1011151	STIFFENER, SIDE SKIN, RH
3	1	1011152	STIFFENER, SIDE SKIN, LH
4	1	1011153	STIFFENER, SIDE SKIN, RH
5	1	1011154	STIFFENER, SIDE SKIN, LH
6	1	1011155	STIFFENER, SIDE SKIN, RH
7	1	1011156	STIFFENER, SIDE SKIN, LH
8	1	1011157	STIFFENER, SIDE SKIN, RH
9	1	1011158	STIFFENER, SIDE SKIN, LH
10	1	1011159	STIFFENER, SIDE SKIN, RH
11	1	1011160	STIFFENER, SIDE SKIN, LH
12	1	1011161	STIFFENER, SIDE SKIN, RH
13	1	1011162	STIFFENER, SIDE SKIN, LH
14	1	1011163	STIFFENER, SIDE SKIN, RH
15	1	1011164	STIFFENER, SIDE SKIN, LH
16	1	1011165	STIFFENER, SIDE SKIN, RH
17	1	1011166	STIFFENER, SIDE SKIN, LH
18	1	1011167	STIFFENER, SIDE SKIN, RH
19	1	1011168	STIFFENER, SIDE SKIN, LH
20	1	1011169	STIFFENER, SIDE SKIN, RH
21	1	1011170	STIFFENER, SIDE SKIN, LH
22	1	1011171	STIFFENER, SIDE SKIN, RH
23	1	1011172	STIFFENER, SIDE SKIN, LH
24	1	1011173	STIFFENER, SIDE SKIN, RH
25	1	1011174	STIFFENER, SIDE SKIN, LH
26	1	1011175	STIFFENER, SIDE SKIN, RH
27	1	1011176	STIFFENER, SIDE SKIN, LH
28	1	1011177	STIFFENER, SIDE SKIN, RH
29	1	1011178	STIFFENER, SIDE SKIN, LH
30	1	1011179	STIFFENER, SIDE SKIN, RH


BOTTOM SKINS & DOUBLERS - AMPHIBIAN

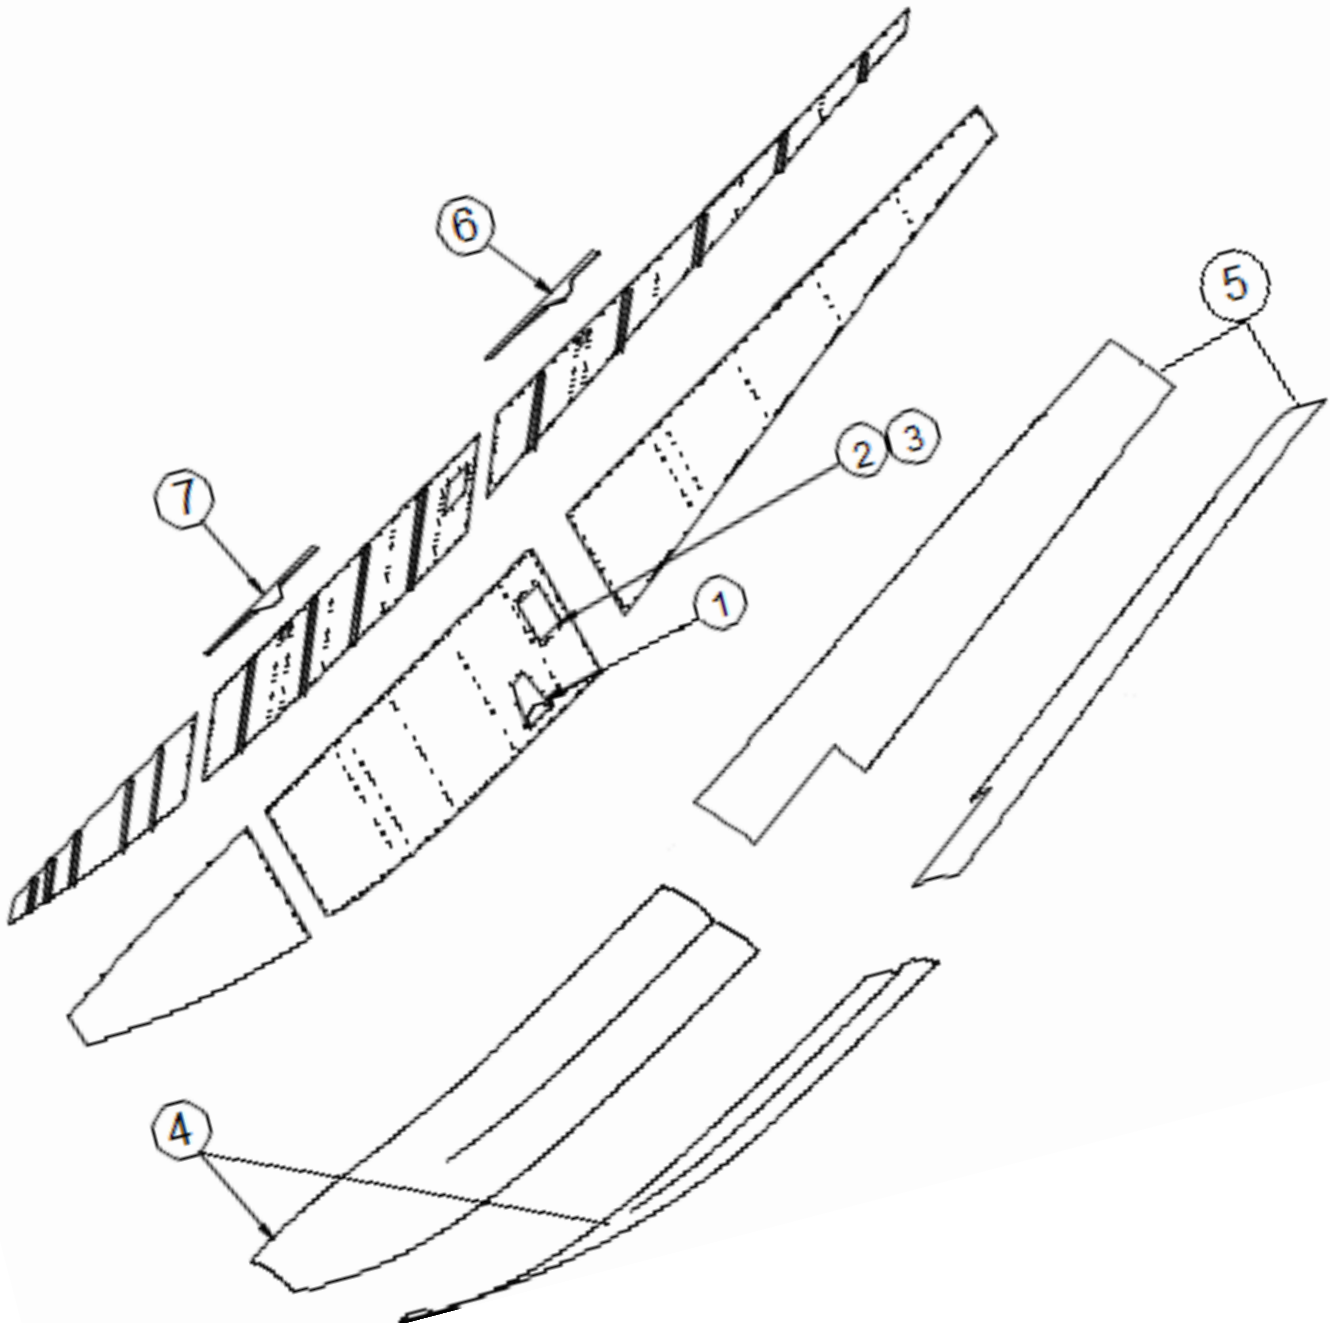

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A01000-358	STEP – BOARDING
2	2	30A01156-144	REINFORCEMENT – COVER
3	2	21A01000-427	COVER SIDE ACCESS ASSY.
	56	AN526-632R6	SCREW – ATTACH
4	1	30A01151-103	BOTTOM SKIN FWD L.
	1	30A01151-102	BOTTOM SKIN FWD R.
5	1	30A01148-037	BOTTOM SKIN AFTERBODY L.
	1	30A01148-038	BOTTOM SKIN AFTERBODY R.
	1	34A01150-147	DOUBLER, AFT, BOTTOM SKIN (NOT SHOWN)
	1	34A01150-148	DOUBLER, AFT, BOTTOM SKIN (NOT SHOWN)
	1	1005715	DOUBLER, WHEEL WELL, AFT, BTM SKN (NOT SHOWN)
	1	1005716	DOUBLER, WHEEL WELL, AFT, BTM SKN (NOT SHOWN)
6	1	30A01162-047	DOUBLER – GUNWALL AFT L.
	1	30A01162-048	DOUBLER – GUNWALL AFT R.
7	1	30A01162-045	DOUBLER – GUNWALL FWD L.
	1	30A01162-046	DOUBLER – GUNWALL FWD R.


BOTTOM SKINS & DOUBLERS - SEAPLANE

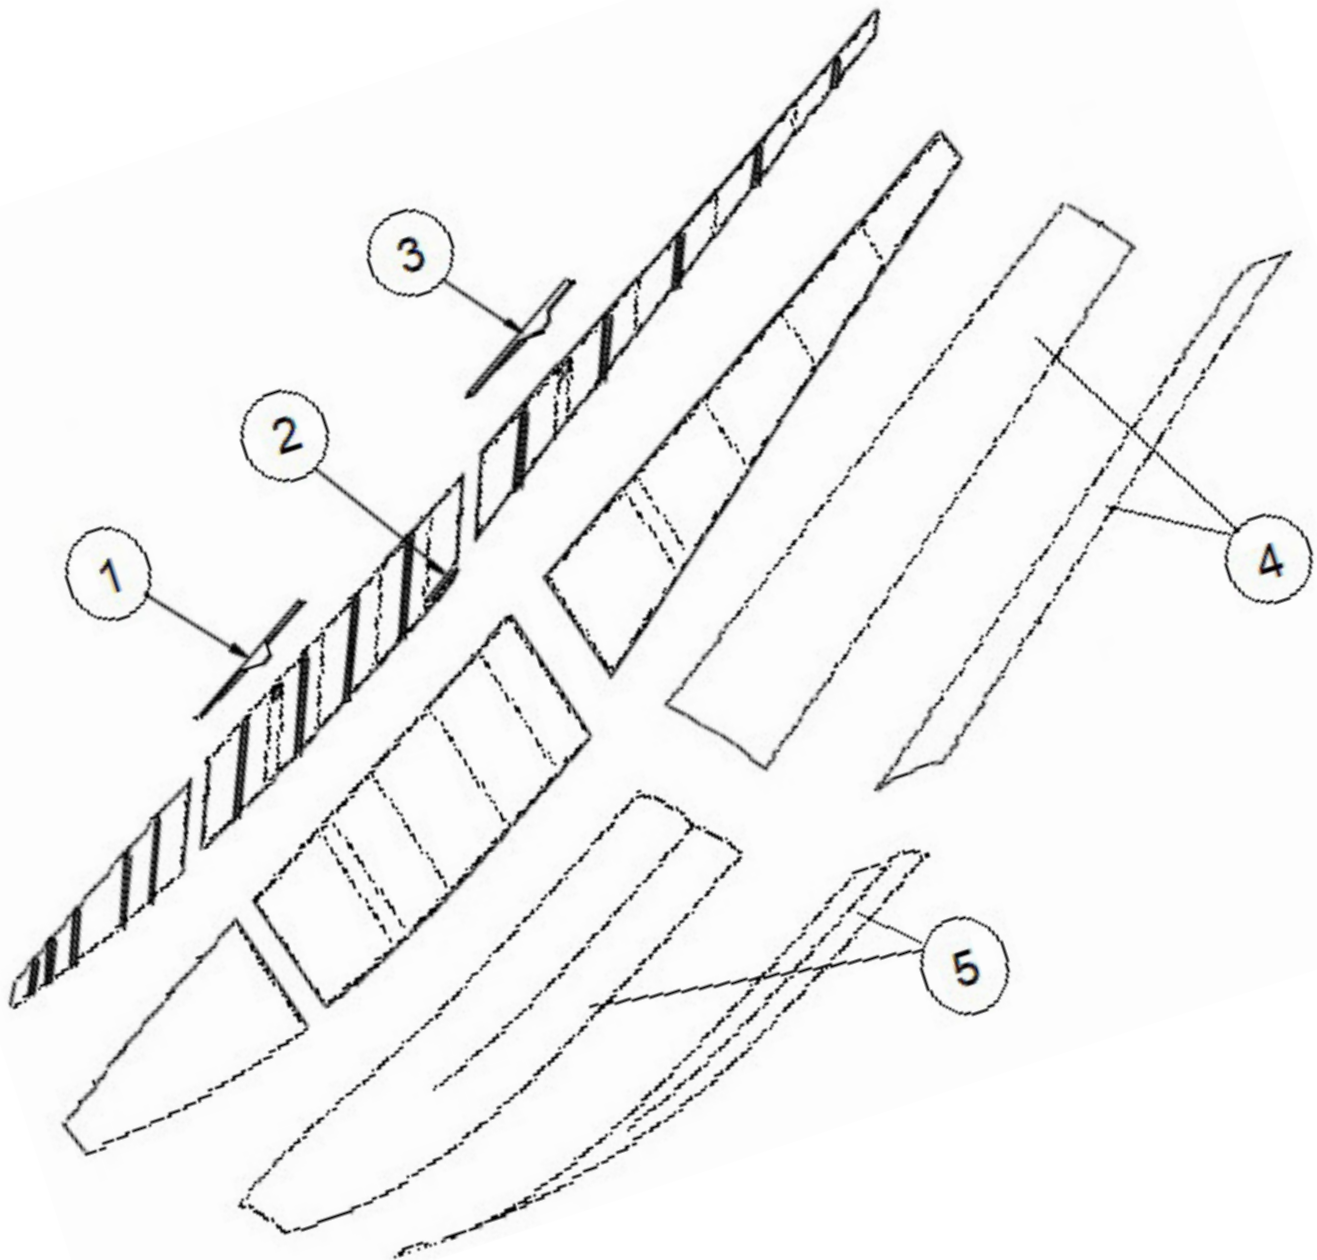

PARTS MANUAL
3000 FLOATS ON MAULE


ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A01162-045	DOUBLER – GUNWALL FWD L.
	1	30A01162-046	DOUBLER – GUNWALL FWD R.
2	2	30A01340-154	DOUBLER – AFT CHINE
3	1	30A01162-047	DOUBLER – GUNWALL AFT L.
	1	30A01162-048	DOUBLER – GUNWALL AFT R.
4	1	30S01148-041	BOTTOM SKIN AFTERBODY L.
	1	30S01148-042	BOTTOM SKIN AFTERBODY R.
5	1	30A01151-103	BOTTOM SKIN FWD L.
	1	30A01151-102	BOTTOM SKIN FWD R.

RIGHT FLOAT SIDE SKINS

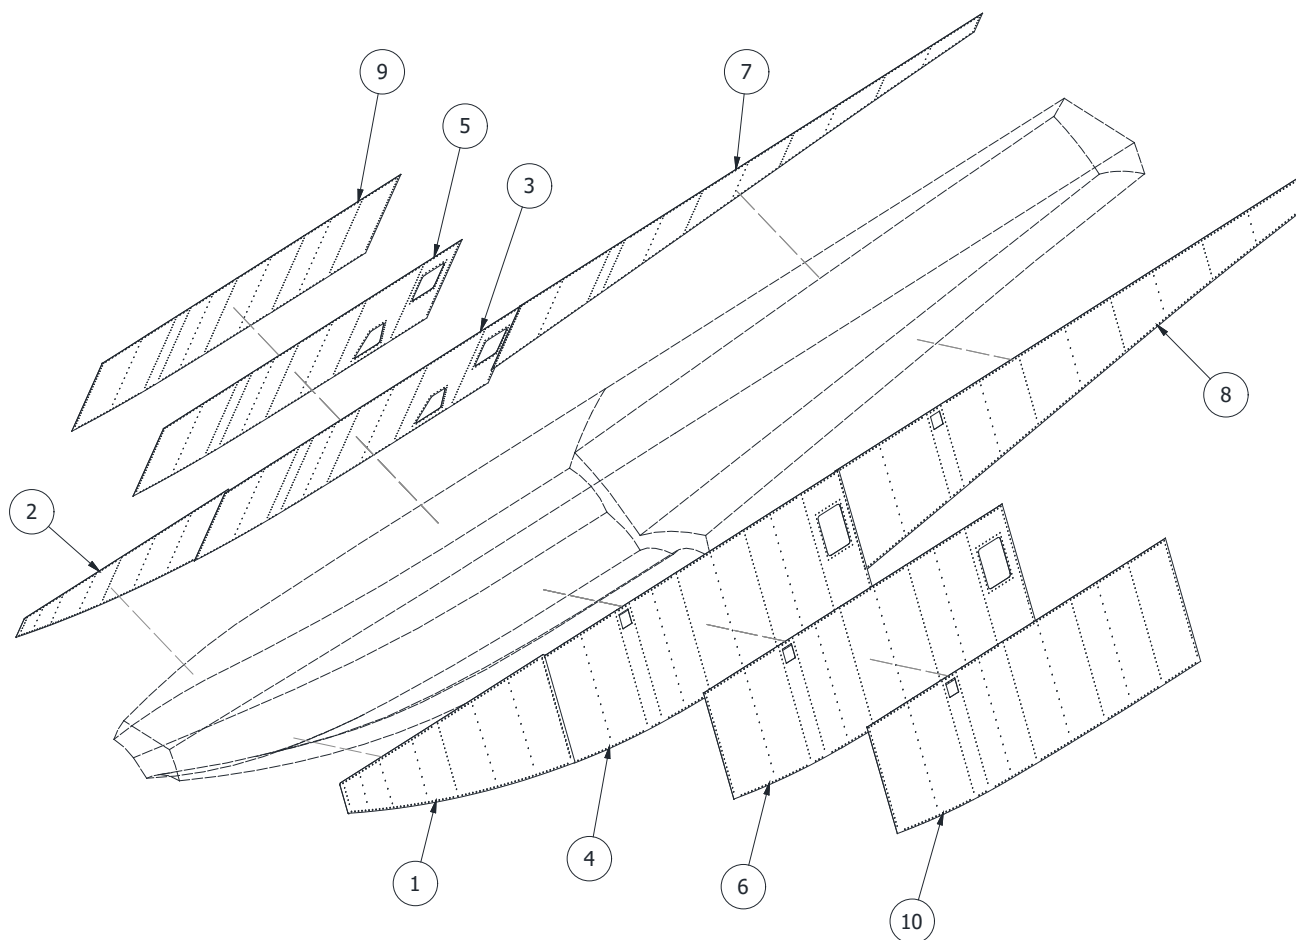



ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1011180	SKIN, SIDE, FWD, LH
2	1	1011181	SKIN, SIDE, FWD, RH
3	1	1011303	SKIN, SIDE, MID, INBRD, RH, ALG, 3000AMP
4	1	1011302	SKIN, SIDE, MID, OUTBRD, RH, ALG, 3000AMP
5	1	1011307	SKIN, SIDE, MID, INBRD, RH, SLG, 3000AMP
6	1	1011306	SKIN, SIDE, MID, OUTBRD, RH, SLG, 3000AMP
7	1	1011311	SKIN, SIDE, AFT, INBRD, RH, 3000
8	1	1011310	SKIN, SIDE, AFT, OUTBRD, RH, 3000
9	1	1011335	SKIN, SIDE, MID, OUTBRD, RH, 3000STR
10	1	1011336	SKIN, SIDE, MID, INBRD, RH, 3000STR
11	3	MS35489-31	GROMMET, 1/8 ID, 9/16 HOLE, .125 PANEL (FOR CABLE, NOT PICTURED)
12	1	MS35489-4	GROMMET, 3/16 ID, 5/16 HOLE, .062 PANEL (FOR HYD LINE, NOT PICTURED)

LEFT FLOAT SIDE SKINS

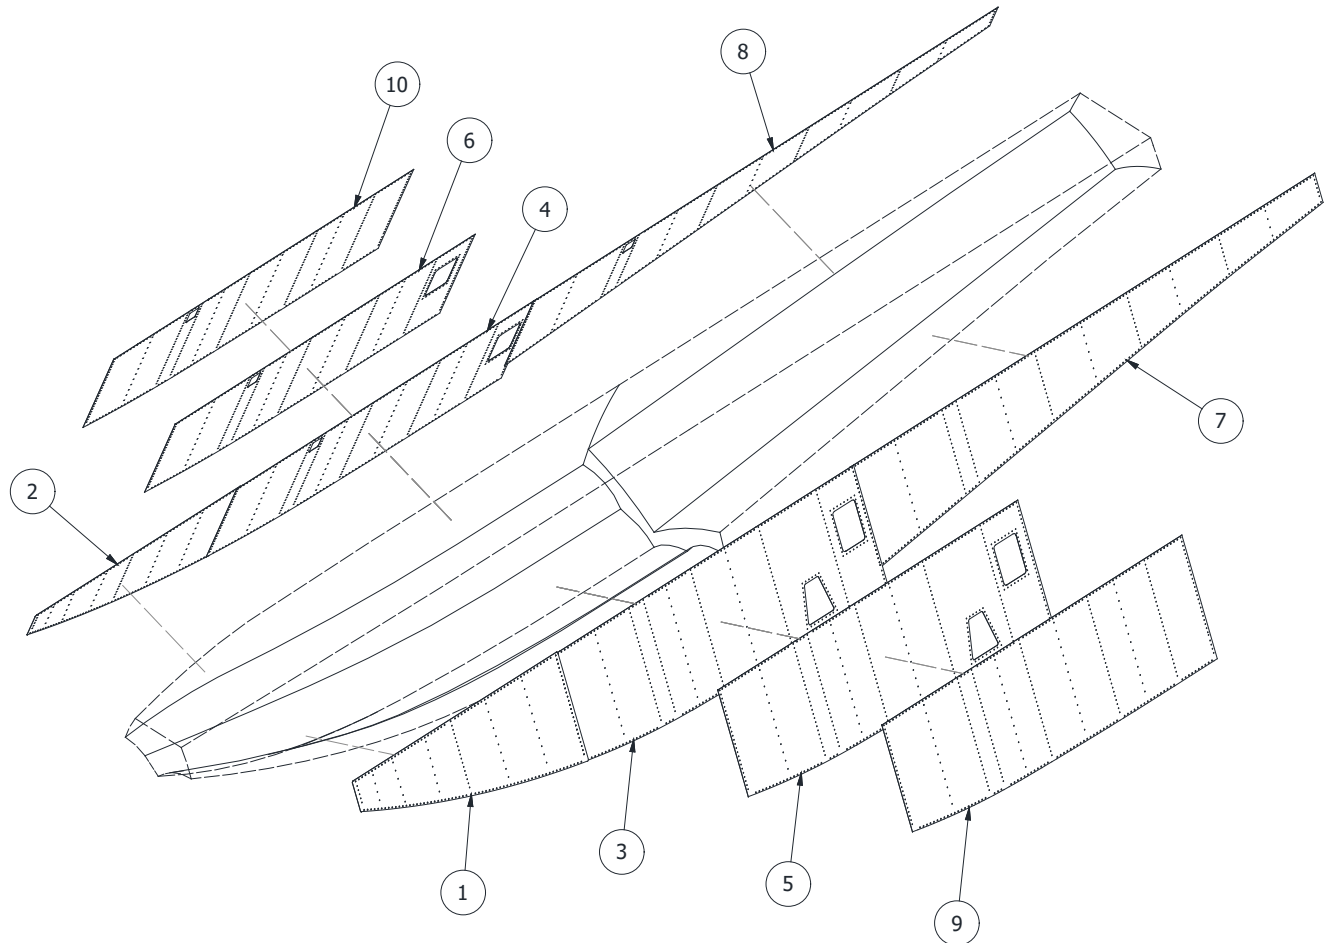

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1011180	SKIN, SIDE, FWD, LH
2	1	1011181	SKIN, SIDE, FWD, RH
3	1	1011304	SKIN, SIDE, MID, INBRD, LH, ALG, 3000AMP
4	1	1011301	SKIN, SIDE, MID, OUTBRD, LH, ALG, 3000AMP
5	1	1011308	SKIN, SIDE, MID, INBRD, LH, SLG, 3000AMP
6	1	1011305	SKIN, SIDE, MID, OUTBRD, LH, SLG, 3000AMP
7	1	1011312	SKIN, SIDE, AFT, INBRD, LH, 3000
8	1	1011309	SKIN, SIDE, AFT, OUTBRD, LH, 3000
9	1	1011334	SKIN, SIDE, MID, OUTBRD, LH, 3000STR
10	1	1011337	SKIN, SIDE, MID, INBRD, LH, 3000STR
11	3	MS35489-31	GROMMET, 1/8 ID, 9/16 HOLE, .125 PANEL (FOR CABLE, NOT PICTURED)
12	1	MS35489-4	GROMMET, 3/16 ID, 5/16 HOLE, .062 PANEL (FOR HYD LINE, NOT PICTURED)

CANOE PADDLE

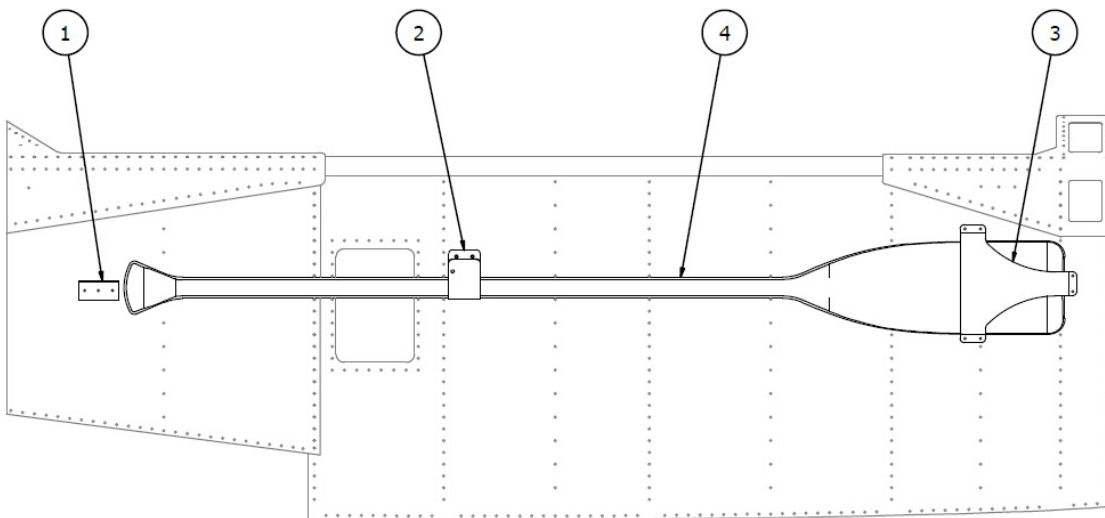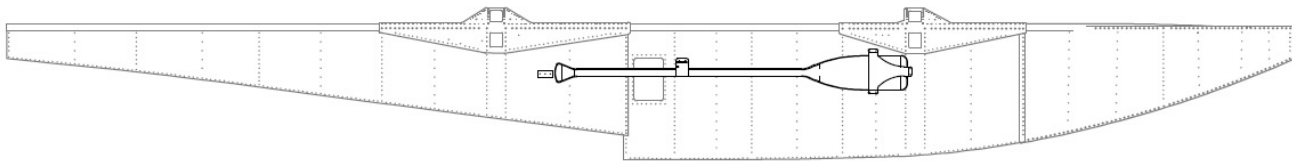

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1005676	BRACKET, CANOE PADDLE STOP
2	1	1005677	CLIP, MOUNTING, CANOE PADDLE
3	1	1005678	BRACKET, CANOE PADDLE
4	1	1012327	CANOE PADDLE, 5.0 FT


SECTION 4
TOP DECK ASSEMBLY

CONTENTS

TOP DECK - AMPHIBIAN44

TOP DECK - SEAPLANE47

TOP DECK - AMPHIBIAN

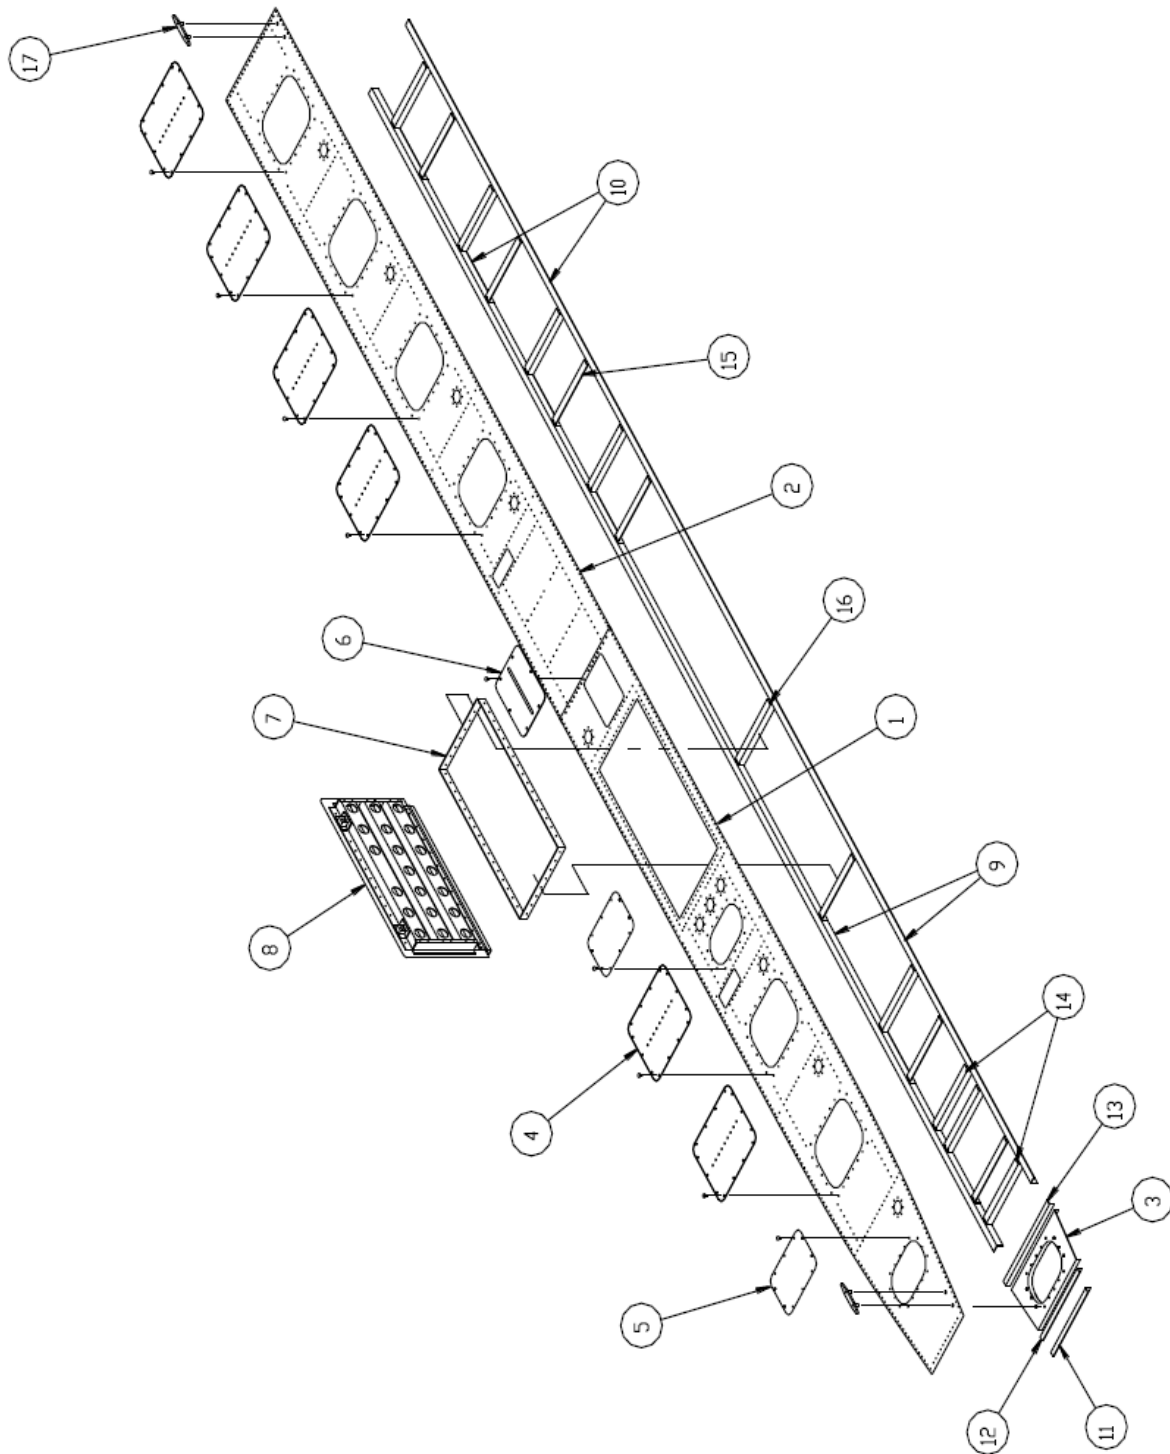


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A01148-001	SKIN – FWD SECTION L.
	1	1005565	SKIN – FWD SECTION L. (ALUM. GEAR)
	1	30A01148-002	SKIN – FWD SECTION R.
	1	1005566	SKIN – FWD SECTION R. (ALUM. GEAR)
2	1	30A01148-003	SKIN – AFT SECTION L.
	1	30A01148-004	SKIN – AFT SECTION R.
3	1	21A01002-131	SUPPORT – INSP. COVER – SMALL
	A/R	1002481	NUT – TINNEMAN TAPE
4	6	21A01000-258	INSP. COVER – LARGE - W/ ANGLE & GASKETS
	A/R	#8 X 5/8	SCREW – ATTACH
	6	1001437	SEAL – GASKET ONLY
5	2	21A01000-284	INSP. COVER – SMALL & GASKETS
	A/R	8/32 X 5/8IN	SCREW – ATTACH
	2	1001437	SEAL – GASKET ONLY
6	1	30A01002-203	COVER – GEAR INDICATOR L.
	1	1005561	COVER – GEAR INDICATOR L. (ALUM. GEAR)
	1	30A01002-202	COVER – GEAR INDICATOR R.
	1	1005560	COVER – GEAR INDICATOR R. (ALUM. GEAR)
	1	10A3-6338-1	PLACARD – DOWN - LAND
	1	10A3-6338-2	PLACARD – UP - WATER
	2	2600-4	SCREW – CAM - LOK
	4	2600-5	SCREW – CAM – LOK
	6	212-12N	RECEPTACLE – CAM – LOK
7	1	30A01162-042	JAMB – BAGGAGE DOOR
	1	1001573	JAMB – BAGGAGE DOOR, HINGE SIDE
8	1	30A01000-324	ASS'Y. BAGGAGE DOOR
	1	30A01162-041	COVER - SKIN
	1	1002186	PIN, HINGE
	1	30A01004-145	STIFFENER – DOOR
	2	30A01004-144	STIFFENER - DOOR
	2	4A01004-049	STIFFENER ENDS
	2	3A01206-001	RETAINER - LOCK
	2	3A01273-004	LOCK PIN
	2	3A01702-001	CATCH – LATCH
	2	3A01525-003	LOCK SPRING
	2	1001838	RING – OPENING
	1	1001499	SEAL – GASKET (NOT SHOWN)
	2	1002663	RING, BAGGAGE LOCK
	1	30A01740-007	HINGE, BAGGAGE COVER 3/4"
	1	30A01741-006	HINGE, BAGGAGE COVER 1 1/2 "
	2	3A01702-004	BOLT, BAGGAGE BAY COVER (MODIFIED)

ITEM	QTY	PART NO.	PART DESCRIPTION
9	1	30A01326-025	TOP RAIL – FWD L.
	1	30A01326-024	TOP RAIL – FWD R.
10	1	30A01326-029	TOP RAIL – AFT L.
	1	30A01326-028	TOP RAIL – AFT R.
11	1	30A01340-175	STIFFENER
12	1	30A01340-176	STIFFENER
13	1	30A01340-177	STIFFENER
14	2	30A01326-032	STIFFENER
15	A/R	30A01326-022	STIFFENER
16	2	30A01326-030	STIFFENER – BAGGAGE DOOR
17	2	30A01213-007	CLEAT – TIE DOWN
	4	AN4-7A	BOLT
	4	NAS1149D0463J	WASHER
	4	MS21083N4	NUT

TOP DECK - SEAPLANE

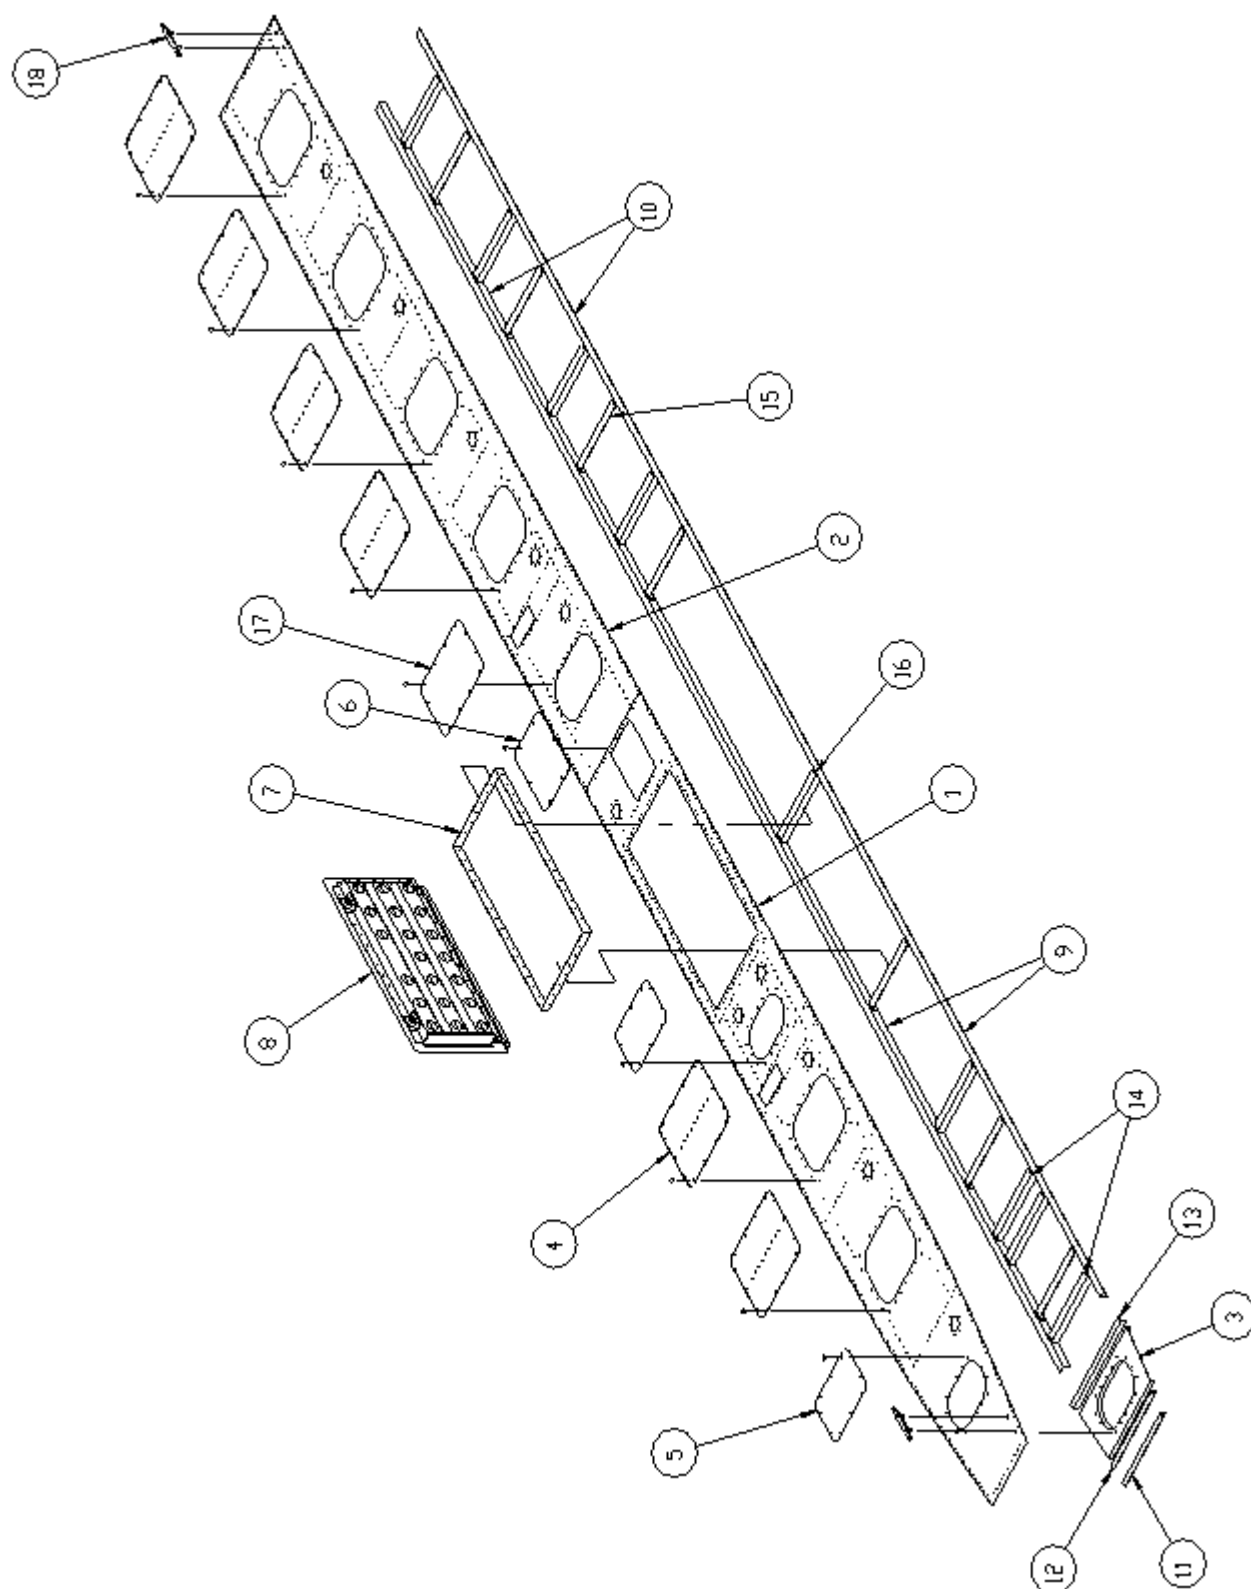

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A01148-001	SKIN – FWD SECTION L.
	1	30A01148-002	SKIN – FWD SECTION R.
2	1	30A01148-003	SKIN – AFT SECTION L.
	1	30A01148-004	SKIN – AFT SECTION R.
3	1	21A01002-131	SUPPORT – INSP. COVER – SMALL
	A/R	1002481	NUT – TINNERMAN
4	6	21A01000-258	INSP. COVER – LARGE - W/ ANGLE & GASKETS
	A/R	8/32 X 5/8IN	SCREW – ATTACH
	6	1001437	SEAL – GASKET ONLY
5	2	21A01000-284	INSP. COVER – SMALL & GASKETS
	A/R	8/32 X 5/8IN	SCREW – ATTACH
	2	1001728	SEAL – GASKET ONLY
6	1	21S01000-399	ASS'Y. ACCESS COVER
	1	21S01008-171	COVER, ACCESS
	1	1002110	RETRACT COVER (GASKET ONLY)
7	1	30A01162-042	JAMB – BAGGAGE DOOR
	1	1001573	JAMB - BAGGAGE DOOR HINGE SIDE
8	1	30A01000-324	ASS'Y. BAGGAGE DOOR
	1	30A01162-041	COVER - SKIN
	1	1002186	PIN, HINGE
	1	30A01004-145	STIFFENER – DOOR
	2	30A01004-144	STIFFENER - DOOR
	2	4A01004-049	STIFFENER ENDS
	2	3A01206-001	RETAINER - LOCK
	2	3A01273-004	LOCK PIN
	2	3A01702-001	CATCH – LATCH
	2	3A01525-003	LOCK SPRING
	2	1001838	RING – OPENING
	1	1001499	SEAL – GASKET (NOT SHOWN)
	2	1002663	RING, BAGGAGE LOCK
	1	30A01740-007	HINGE, BAGGAGE COVER 3/4"
	1	30A01741-006	HINGE, BAGGAGE COVER 1 ½ "
	2	3A01702-004	BOLT, BAGGAGE BAY COVER(MODIFIED)
9	1	30A01326-025	TOP RAIL – FWD L.
	1	30A01326-024	TOP RAIL – FWD R.
10	1	30A01326-029	TOP RAIL – AFT L.
	1	30A01326-028	TOP RAIL – AFT R.
11	1	30A01340-175	STIFFENER
12	1	30A01340-176	STIFFENER
13	1	30A01340-177	STIFFENER

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
14	2	30A01326-032	STIFFENER
15	A/R	30A01326-022	STIFFENER
16	1	30A01326-030	STIFFENER – BAGGAGE DOOR
17	1	30S01000-409	ASS'Y. COVER, ACCESS
	1	30S01005-392	COVER, ACCESS
	1	#8 X 5/8	SCREW – ATTACH
	1	1002109	COVER, ACCESS (GASKET ONLY)
18	2	30A01213-007	CLEAT – TIE DOWN
	4	NAS1149D0463J	WASHER
	4	MS21083N4	NUT

THIS PAGE INTENTIONALLY LEFT BLANK


SECTION 5
EXTRUSIONS

CONTENTS

HULL EXTRUSIONS - AMPHIBIAN52

HULL EXTRUSIONS - SEAPLANE54


HULL EXTRUSIONS - AMPHIBIAN

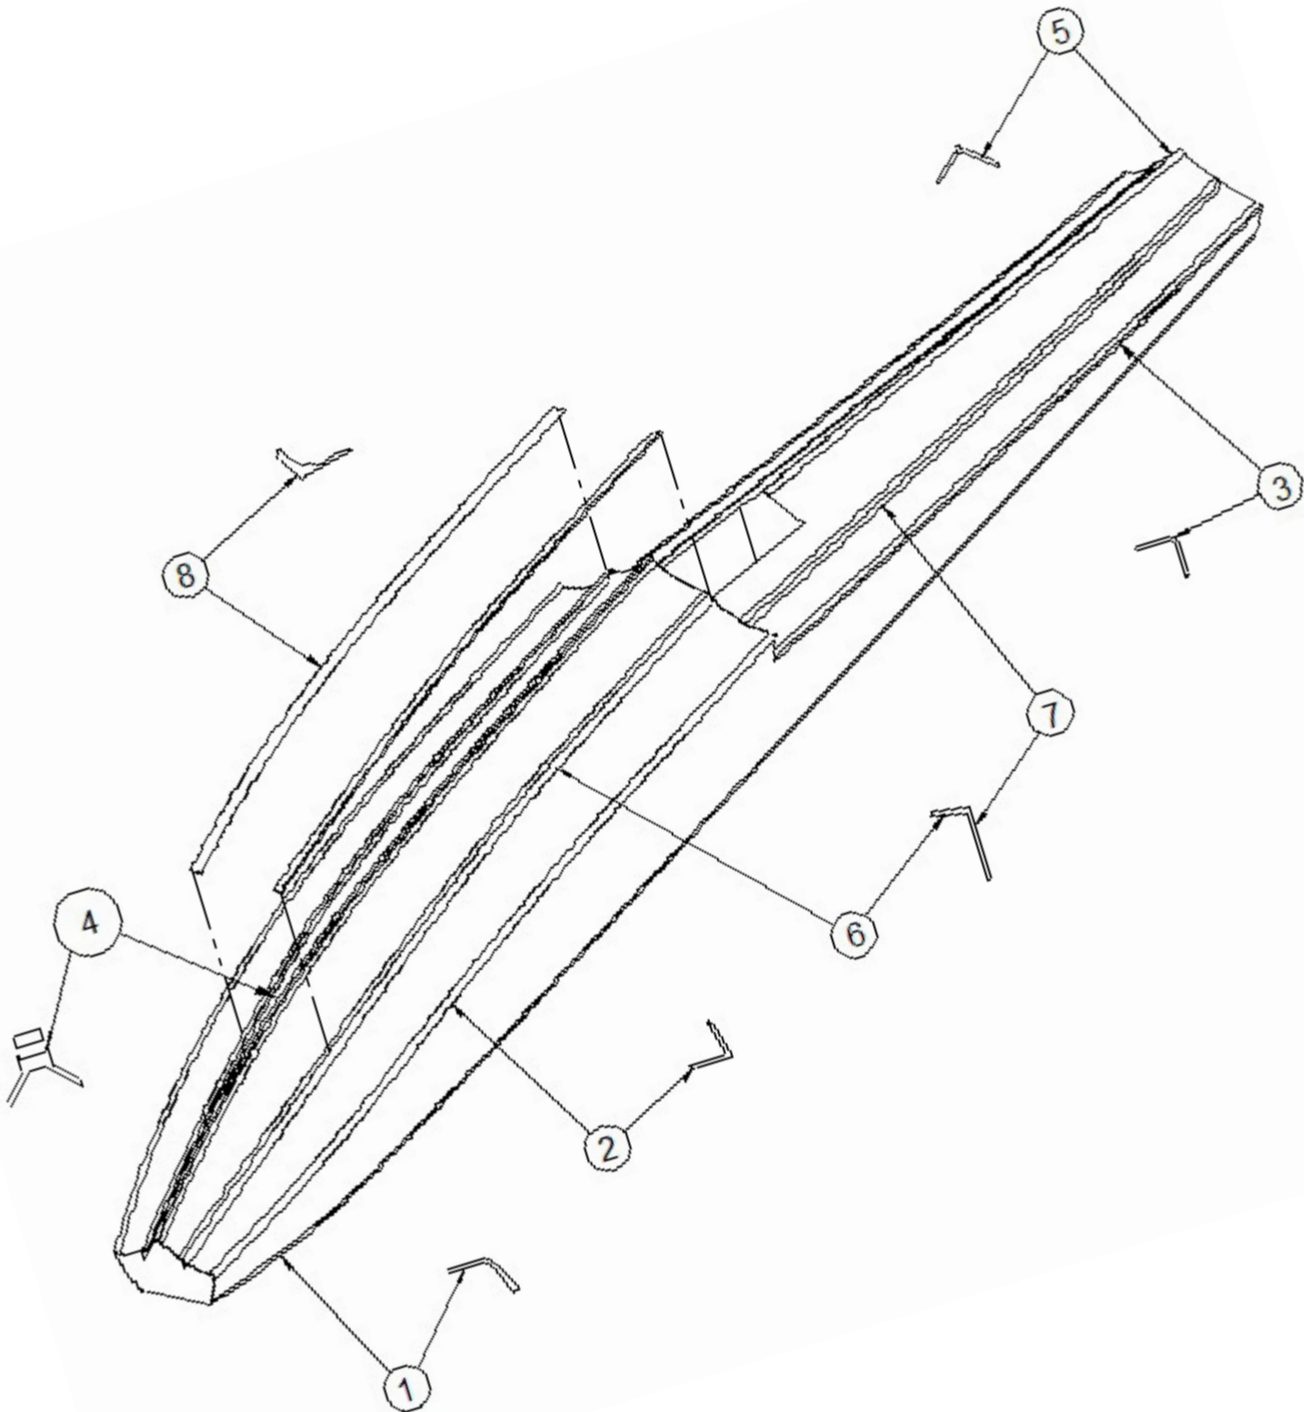

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A01324-005	GUNWALL – L.
	1	30A01324-006	GUNWALL – R.
2	1	1011921	CHINE, FORWARD, LEFT, 3000 (FLOATS S/N 30313 AND LATER)
	1	1011922	CHINE, FORWARD, RIGHT, 3000 (FLOATS S/N 30313 AND LATER)
	2	1010119	EXTRUSION, CHINE, FWD (BLANK, NO PRE-DRILLED HOLES) (FLOATS S/N 30312 AND PRIOR)
3	1	30A01395-001	CHINE – AFTERBODY L.
	1	30A01395-002	CHINE – AFTERBODY R.
4	1	30A01377-001	KEEL - MAIN
	1	3A01200-001	STRIP, WEAR
5	1	30A01425-001	KEEL - AFTERBODY
6	1	30A01361-037	SISTER KEEL – FWD L.
	1	30A01361-038	SISTER KEEL – FWD R.
7	1	30A01361-039	SISTER KEEL – AFT L.
	1	30A01361-040	SISTER KEEL – AFT R.
8	1	30A01342-009	SISTER KEEL – OUTER L.
	1	30A01342-010	SISTER KEEL – OUTER R.

HULL EXTRUSIONS - SEAPLANE

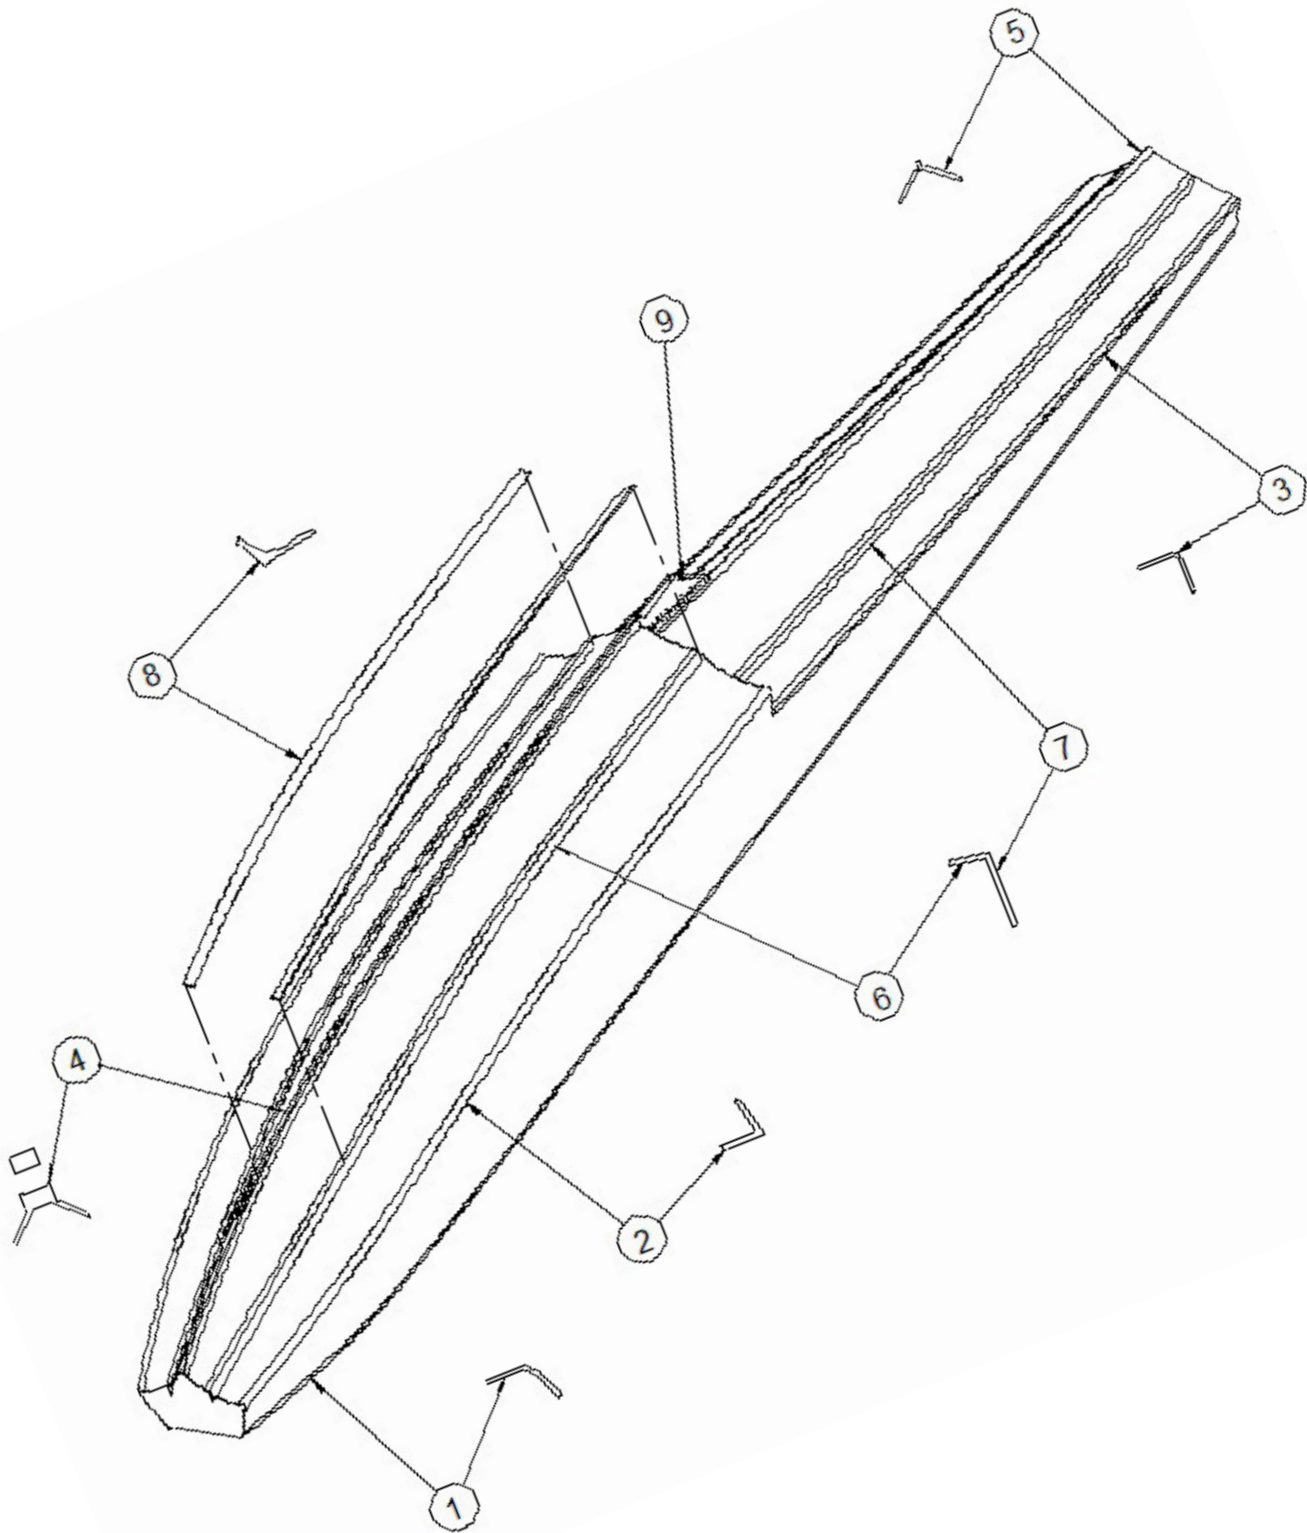

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A01324-005	GUNWALL – L.
	1	30A01324-006	GUNWALL – R.
2	1	1011921	CHINE, FORWARD, LEFT, 3000 (FLOATS S/N 30313 AND LATER)
	1	1011922	CHINE, FORWARD, RIGHT, 3000 (FLOATS S/N 30313 AND LATER)
	2	1010119	EXTRUSION, CHINE, FWD (BLANK, NO PRE-DRILLED HOLES) (FLOATS S/N 30312 AND PRIOR)
3	1	30A01395-001	CHINE – AFTERBODY L.
	1	30A01395-002	CHINE – AFTERBODY R.
4	1	1001120	KEEL - MAIN
	1	3A01200-001	STRIP, WEAR
5	1	30S01425-003	KEEL - AFTERBODY
6	1	30A01361-037	SISTER KEEL – FWD L.
	1	30A01361-038	SISTER KEEL – FWD R.
7	1	30S01361-043	SISTER KEEL – AFT L.
	1	30S01361-044	SISTER KEEL – AFT R.
8	1	30A01342-009	SISTER KEEL – OUTER L.
	1	30A01342-010	SISTER KEEL – OUTER R.
9	1	30S01163-085	ANGLE SUPPORT – AFTERBODY L.
	1	30S01163-086	ANGLE SUPPORT – AFTERBODY R.


THIS PAGE INTENTIONALLY LEFT BLANK

SECTION 6
PUMPER TUBE INSTALLATION

CONTENTS

PUMPER TUBE58

PUMPER TUBE

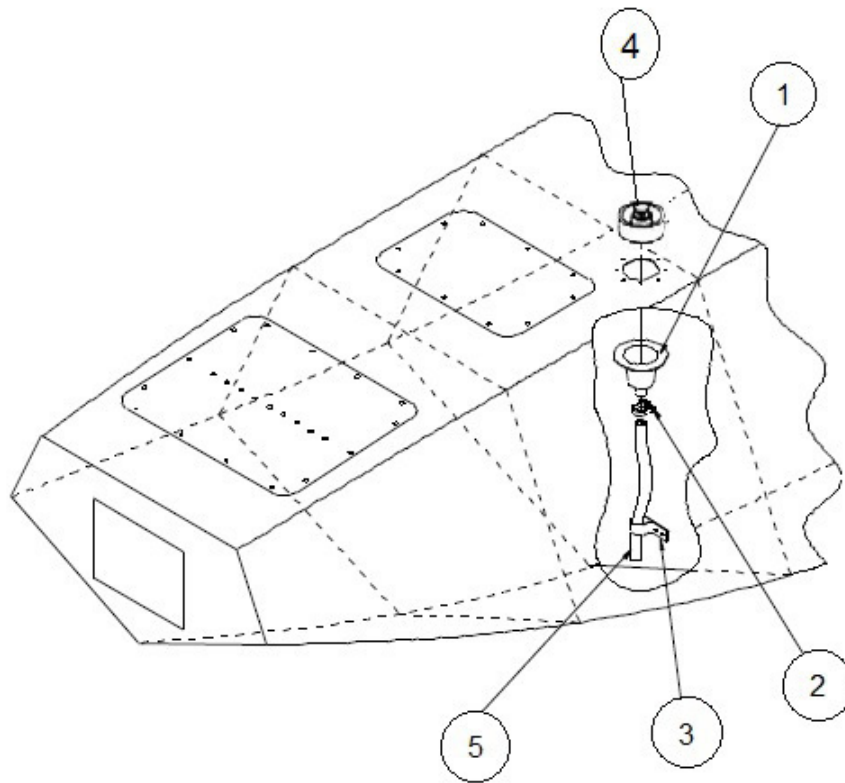

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1011004	ASSEMBLY, CUP, PUMPOUT, DUCKBILL
	1	4A01749-001	CUP – PUMPOUT ALUM.
	1	1011808	RETAINER, VALVE, DUCKBILL, PUMPOUT PLUG
2	1	57134	CLAMP – UPPER END
3	1	3A01158-003	CLAMP – LOWER END
4	1	1011870	VALVE, DUCKBILL (NEW VERSION)
	1	2111	STOPPER – PUMPER TUBE
5	1	30A01618-064	PUMPOUT TUBE 18.5 IN.
	1	30A01618-065	PUMPOUT TUBE 24.5
	1	30A01618-066	PUMPOUT TUBE 26.5
	1	30A01618-067	PUMPOUT TUBE 29.0
	1	30A01618-068	PUMPOUT TUBE 23.0
	1	30A01618-069	PUMPOUT TUBE 26.5
	1	30A01618-070	PUMPOUT TUBE 22.0
	1	30A01618-071	PUMPOUT TUBE 18.0
	1	30A01618-072	PUMPOUT TUBE 15.5
	1	30A01618-073	PUMPOUT TUBE 12.5
	1	30A01618-074	PUMPOUT TUBE 25.0

SECTION 7
WATER RUDDER, STEERING, AND RETRACT CABLES

CONTENTS


WATER RUDDER INSTALLATION.....60

WATER RUDDER CENTERING SPRINGS (M-7-420 TURBINE ONLY) INSTALLATION.....63

STEERING AND RETRACT SYSTEM INSTALLATION64

ROUTING, STEERING, BALANCE, AND RETRACT CABLE67

WATER RUDDER INSTALLATION

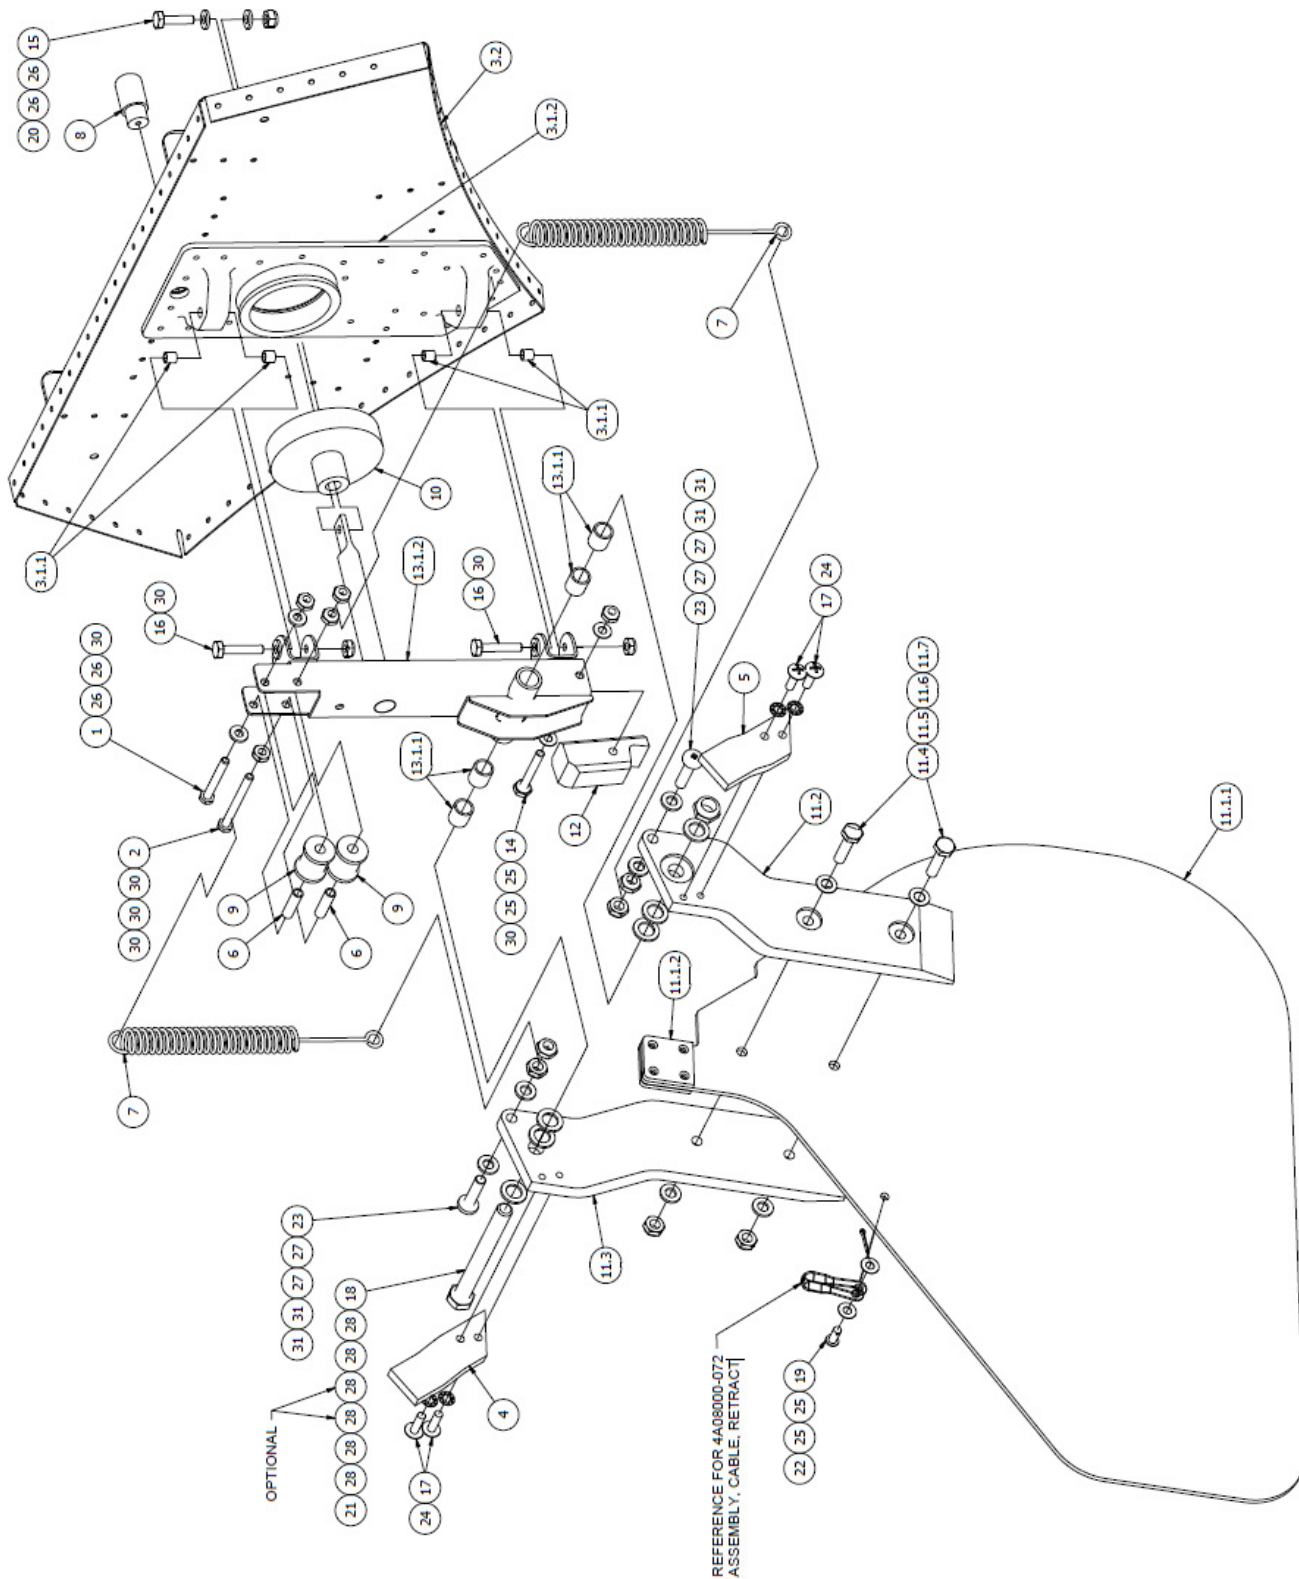


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	#10-32 X 1.5 SS	STAINLESS STEEL SCREW
2	1	1032 X 2INCH SS	BOLT, SSTL MACHINE HEX HEAD, 3/16" DIA, 2" LENGTH
3	1	30A01000-343	ASSEMBLY, BULKHEAD #14
3.1	1	1008934	ASSEMBLY, MOUNT, PIVOT, WATER RUDDER
3.1.1	4	03DU04	SELF LUBRICATING BUSHINGS
3.1.2	1	1008934	MOUNT, PIVOT, WATER RUDDER
3.2	1	30A01158-207	BULKHEAD #14
4	1	34A08205-007	STOP, WATER RUDDER LOCK, LT, C182
5	1	34A08205-008	STOP, WATER RUDDER LOCK, RT, C182
6	2	3A08502-001	SPACER, WATER RUDDER RETRACT ROLLER, LONG
7	2	3A08525-001	SPRING, RUDDER RETRACT
8	1	3A08605-001	CABLE GUIDE
9	2	3A08606-001	ROLLER, CABLE RETRACT, LOWER
10	1	3A08650-001	BOOT, WATER RUDDER
11	1	4A08000-094	ASSEMBLY, WATER RUDDER
11.1	1	4A08000-062	ASSEMBLY, WATER RUDDER BLADE
11.1.1	1	4A08001-026	BLADE, WATER RUDDER
11.1.2	2	4A08001-027	DOUBLER, WATER RUDDER
11.2	1	4A08197-008	ARM - WATER RUDDER, CONTROL, RH
11.3	1	4A08197-009	ARM - WATER RUDDER, CONTROL, LH
11.4	2	AN4-10A	BOLT, 1/4-28, 0.5625 GRIP, UNDRILLED, STEEL
11.5	2	NAS1149D0416J	WASHER, 0.265 ID, 0.016 THK, ALUMINUM
11.6	2	NAS1149D0463J	WASHER, 0.265 ID, 0.063 THK, ALUMINUM
11.7	2	NAS679-A4W	KAYNAR NUT
12	1	6A08183-005	STOP, WATER RUDDER
13	1	8A08000-098	ASSY, WATER RUDDER POST
13.1	1	3A08000-096	ASSEMBLY, PIVOT, WATER RUDDER
13.1.1	4	06DU08	BUSHING, SELF LUBRICATING, .375 ID X .500 LONG
13.1.2	1	3A08000-096B	BLANK, PIVOT, WATER RUDDER
14	1	AN3-13A	BOLT, 10-32, 1 GRIP, UNDRILLED, STEEL
15	1	AN3-6A	BOLT, 10-32, 0.375 GRIP, UNDRILLED, STEEL
16	2	AN3C10A	BOLT, 10-32, 0.625 GRIP, UNDRILLED, STAINLESS STEEL
17	4	AN526-1032R10	SCREW, MACHINE, TRUSS HEAD
18	1	AN6C34A	BOLT, 3/8-24, 2.9375 GRIP, UNDRILLED, STEEL
19	1	MS20392-2C11	CLEVIS PIN
20	1	MS21044N3	NUT, LOCKING, REGULAR HEIGHT, 10-32 UNF
21	1	MS21083N6	NUT, LOCKING, LOW HEIGHT, 3/8-24 UNF
22	1	MS24665-151	COTTER PIN
23	2	MS35207-283	SCREW, PAN HEAD, CROSS-RECESSED, 1/4-28, 1.0 LONG
24	4	MS35333-39	STAR WASHER
25	4	NAS1149D0316J	WASHER, 0.203 ID, 0.016 THK, ALUMINUM


ITEM	QTY	PART NO.	PART DESCRIPTION
26	4	NAS1149D0363J	WASHER, 0.203 ID, 0.063 THK, ALUMINUM
27	4	NAS1149D0463J	WASHER, 0.265 ID, 0.063 THK, ALUMINUM
28	6	NAS1149F0663P	WASHER, 0.39 ID, 0.063 THK, STEEL
29	1	NAS1435K3	SHACKLE
30	7	NAS679-A3W	KAYNAR NUT
31	4	NAS679-A4W	KAYNAR NUT

WATER RUDDER CENTERING SPRINGS (M-7-420 TURBINE ONLY) INSTALLATION

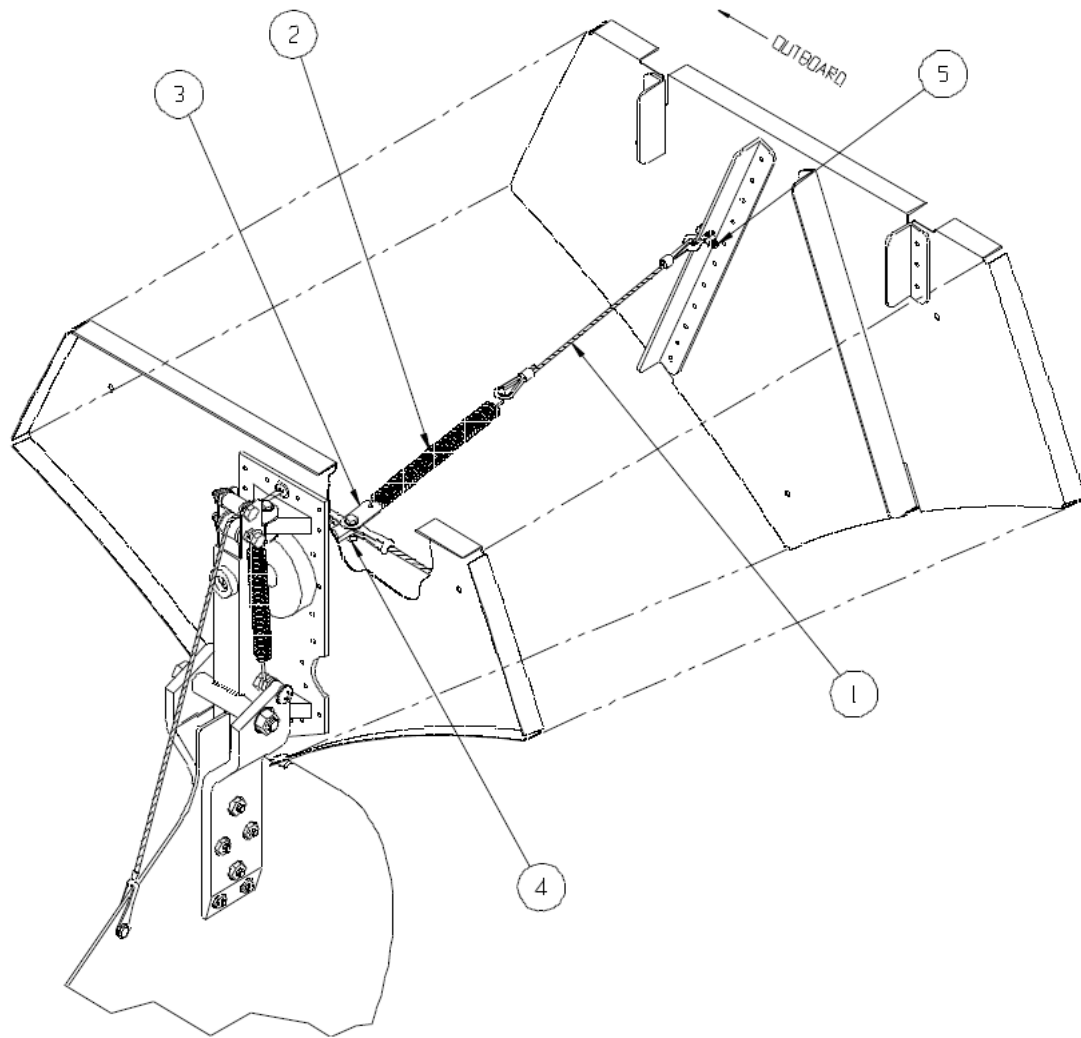

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A08000-163	ASS'Y - CABLE
2	1	30A08589-001	SPRING
3	1	30A08465-003	SHACKLE
4	1	AN3-7	BOLT - ATTACH
	1	AN310-3	NUT
	1	NAS1149DO363J	WASHER
	1	MS24665-5	COTTER PIN
5	1	AN3-5A	BOLT - ATTACH
	1	NAS1149DO363J	WASHER
	1	MS21044N3	NUT
	1	MS20115-2	SHACKLE

STEERING AND RETRACT SYSTEM INSTALLATION

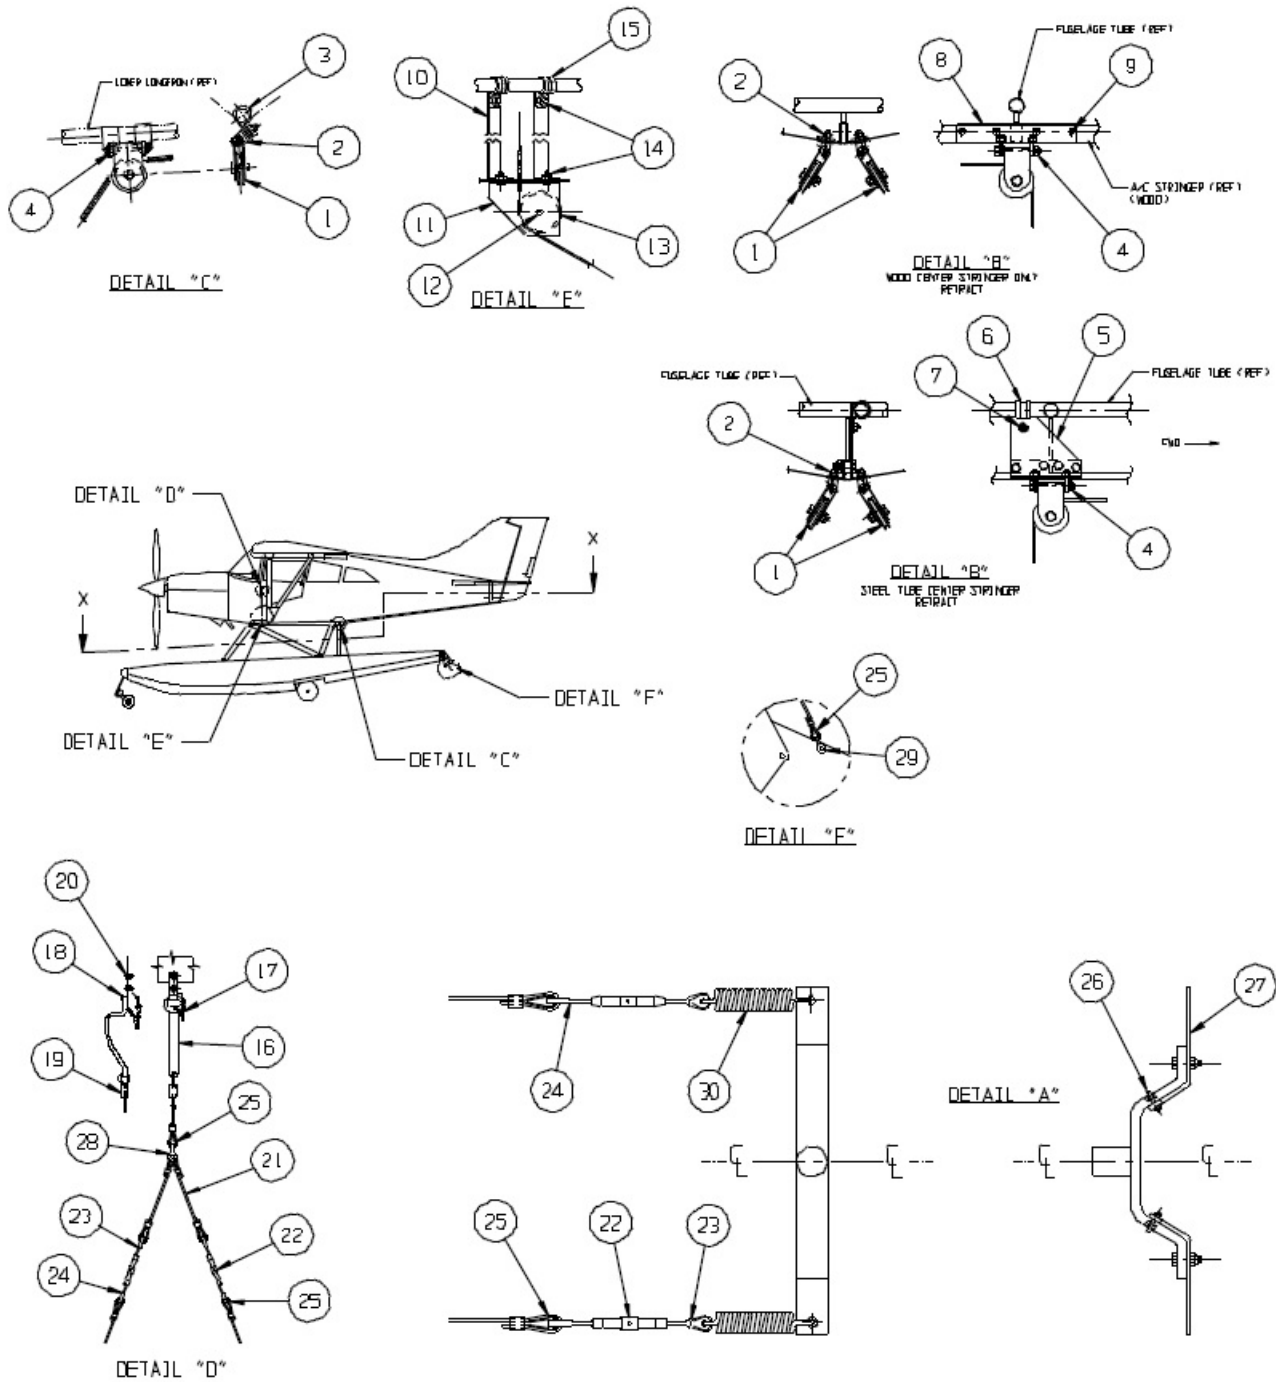


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	2	21A08000-124	ASS'Y – PULLEY BRACKET
	1	21A08008-150	BRACKET
	1	MS20219-2	PULLEY
	1	AN394-19	PIN - CLEVIS
	1	NAS1149DO416J	WASHER
	1	MS24665-132	COTTER PIN
2	8	AN42B4A	EYE BOLT
	8	NAS1149F0363F	WASHER
	8	MS21044N4	NUT
3	4	AN742D12	CLAMP
4	4	AN3-17A	BOLT – BRACKET ATTACH
	8	NAS1149F0363F	WASHER
	4	MS21044N3	NUT
5	1	30A12000-049	ASS'Y – PULLEY BRACKET SUPPORT (METAL CENTER STRINGER)
	1	30A12163-079	ANGLE - LARGE
	1	30A12163-078	ANGLE - SMALL
	4	30A12274-008	BUSHING
	4	AN3-7A	BOLT
	4	NAS1149F0363P	WASHER
	4	MS21044N3	NUT
6	1	AN742-14C	CLAMP
7	1	AN526-832R12	SCREW
	1	NAS1149FN832P	WASHER
	1	MS21044N08	NUT
8	1	30A08150-142	BRACKET – PULLEY SUPPORT (WOOD CENTER STRINGER)
9	4	AN526-632-10	SCREW - ATTACH
	4	NAS1149FO632F	WASHER
	4	MS21044N06	NUT
10	2	23A12163-070	SUPPORT – PULLEY BRACKET
11	1	3A08151-046	PULLEY BRACKET
12	1	AN4-7A	BOLT – PULLEY ATTACH
	2	NAS1149F0463P	WASHER
	1	MS21044N4	NUT
13	1	MS20219-2	PULLEY
14	4	AN526-832R12	SCREW
	4	NAS1149FN832P	WASHER
	4	MS21044N08	NUT
15	2	MS21919WDG14	CLAMP
16	1	30A08154-015	HANDLE - RETRACT
17	1	21A08747-001	CHAIN – RETRACT HANDLE

ITEM	QTY	PART NO.	PART DESCRIPTION
18	1	21A08487-001	CLIP – HANDLE REST
19	1	21A08274-009	CABLE HOLDER
	1	1032 X .13	SET SCREW
20	1	AN526-832R8	SCREW (PANEL)
	1	AN526-832R12	SCREW (CHAIN)
	2	NAS1149FN832P	WASHER
	2	MS21044N08	NUT
21	A/R	3/32 X 7 S.S.	CABLE (REQUEST LENGTH)
22	5	MS21251B3S	TURNBUCKLE BARREL
23	4	MS21254-3LS	EYE – TURNBUCKLE
24	4	MS21254-3RS	EYE – TURNBUCKLE
25	A/R	AN100-3	THIMBLE – CABLE
	A/R	18-2G	NICOPRESS – CLAMP
26	2	30A08455-002	“U” BOLT
	2	21A02487-002	SADDLE – “U” BOLT
	2	NAS1149FO363P	WASHER
	2	MS21044N3	NUT
27	2	30A08001-048	EXTENSION – STEERING FORK
	2	AN4-10A	BOLT – ATTACH
	2	NAS1149F0463P	WASHER
	2	MS21044N4	NUT
28	3	MS20115-3	SHACKLE
	3	MS20392-2-17	PIN
	3	MS24665-132	PIN – COTTER
	3	NAS1149FO363P	WASHER
29	2	MS20115-3	SHACKLE
	2	MS20392-2-13	PIN
	2	MS24665-132	PIN – COTTER
	2	NAS1149FO363P	WASHER
30	2	21A08525-005	SPRING

ROUTING, STEERING, BALANCE, AND RETRACT CABLE

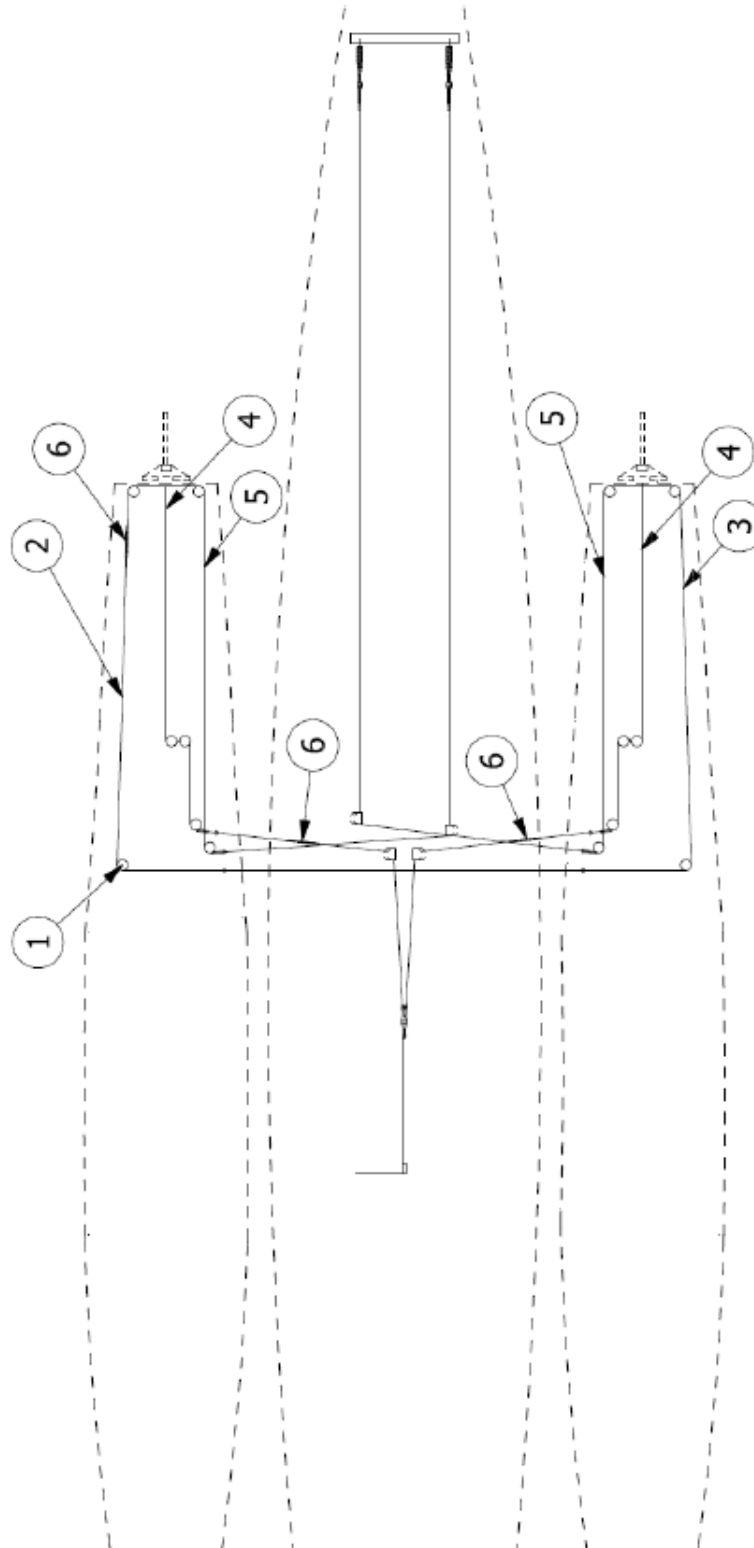


ITEM	QTY	PART NO.	PART DESCRIPTION
1	18	MS20219-2	PULLEY
2	2	30A08000-153	CABLE ASSY. BALANCE R/H
3	2	30A08000-154	CABLE ASSY. BALANCE L/H
4	2	30A08000-156	CABLE ASSY. RETRACT
5	2	30A08000-155	CABLE ASSY. STEERING
6	3	MS21251B3S	TURNBUCKLE

SECTION 8 LANDING GEAR

CONTENTS

NOSE GEAR RETRACTION ASSEMBLY.....	70
NOSE GEAR LOWER ASSEMBLY	72
NOSE WHEEL ASSEMBLY (GROVE).....	74
NOSE WHEEL ASSEMBLY (PARKER).....	76
MAIN GEAR INSTALLATION.....	78
MAIN GEAR RETRACTION.....	80
MAIN GEAR HYDRAULIC INSTALLATION.....	82
MAIN GEAR WHEEL ASSEMBLY	84
MAIN GEAR SHOCK ASSEMBLY	87
MAIN GEAR WITHOUT WHEEL PIVOT ASSEMBLY FOR FLOAT SERIAL NUMBERS 30307A & 30308A AND LATER.....	88
MAIN GEAR WITHOUT WHEEL PIVOT ASSEMBLY FOR FLOAT SERIAL NUMBERS 30305A & 30306A AND PRIOR.....	90
MAIN GEAR WITH WHEEL PIVOT ASSEMBLY FOR FLOAT SERIAL NUMBERS 30307A & 30308A AND LATER.....	92
MAIN GEAR WITH WHEEL PIVOT ASSEMBLY FOR FLOAT SERIAL NUMBERS 30305A & 30306A AND PRIOR.....	94
MAIN GEAR ASSEMBLY	96
MAIN GEAR ROTARY ACTUATOR ASSEMBLY.....	98


NOSE GEAR RETRACTION ASSEMBLY

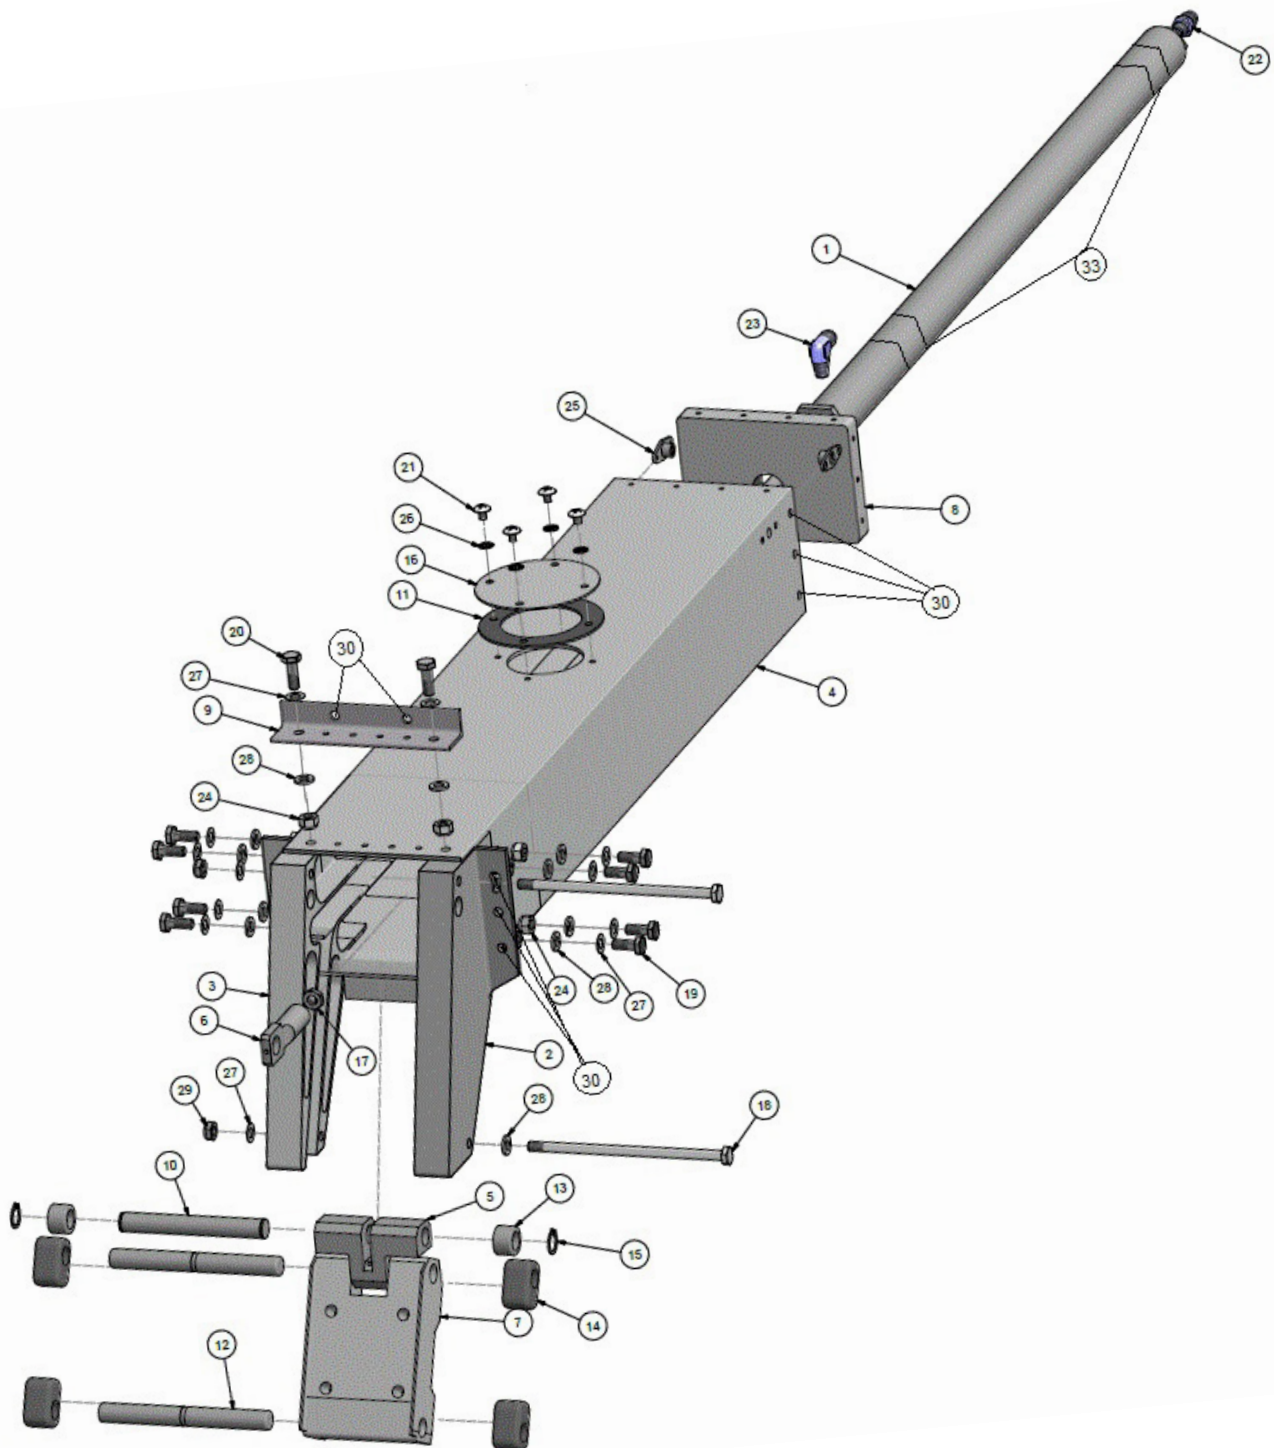

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	-	30A07000-017	ASSEMBLY, NOSE BOX, 3000/3450
1	1	1002572	CYLINDER, NOSE GEAR, 3000/3450
2	1	1005837	END, NOSE GEAR TRACK LEFT
3	1	1005838	END, NOSE GEAR TRACK, RIGHT
4	1	1005857	NOSE BOX, 3000 FLOAT
5	1	21A07032-005	LINK - TROLLEY, NOSE GEAR
6	1	21A07094-002	END - ROD, CYLINDER, NOSE GEAR
7	1	21A07187-009	TROLLEY - NOSE GEAR
8	1	21A07237-002	END CAP, NOSE BOX
9	1	21A07359-194	EXTRUSION, ANGLE
10	1	21A07509-007	AXLE, TROLLEY LINK
11	1	30A07567-011	GASKET, COVER, NOSE BOX, 2100 AND 3000
12	2	34A07509-008	AXLE, TROLLEY
13	2	3A07530-001	BEARING - TROLLEY, NOSE GEAR
14	4	3A07604-001	BLOCK, SLIDE, TROLLEY, NOSE GEAR
15	2	5100-46-H	SNAP RING
16	1	8A01008-080	COVER, BULKHEAD HYD CYL. HOLE
17	1	AN316-5R	NUT
18	2	AN4-53A	BOLT
19	8	AN4-5A	BOLT
20	2	AN4-6A	BOLT
21	4	AN526-1032R4	SCREW, MACHINE, TRUSS HEAD
22	1	AN816-4D	NIPPLE, FLARED TUBE AND PIPE THREAD
23	1	MS20822-4D	ELBOW
24	10	MS21044N4	NUT
25	2	MS21078-4	NUT PLATE
26	4	MS35333-39	STAR WASHER
27	12	NAS1149D0416J	WASHER
28	12	NAS1149D0463J	WASHER
29	2	NAS679-A4W	KAYNAR NUT
30	10	AN4-5A	BOLT (NOT SHOWN)
	10	NAS1149D0416J	WASHER (NOT SHOWN)
	10	MS21044N4	NUT (NOT SHOWN)
31	1	30A06655-001	NOSE SPRING (NOT SHOWN)
32	1	MS35489-23	GROMMIT (NOT SHOWN)
33	2	3A07005-178	CLIP, SWITCH, NOSE & MAIN


NOSE GEAR LOWER ASSEMBLY

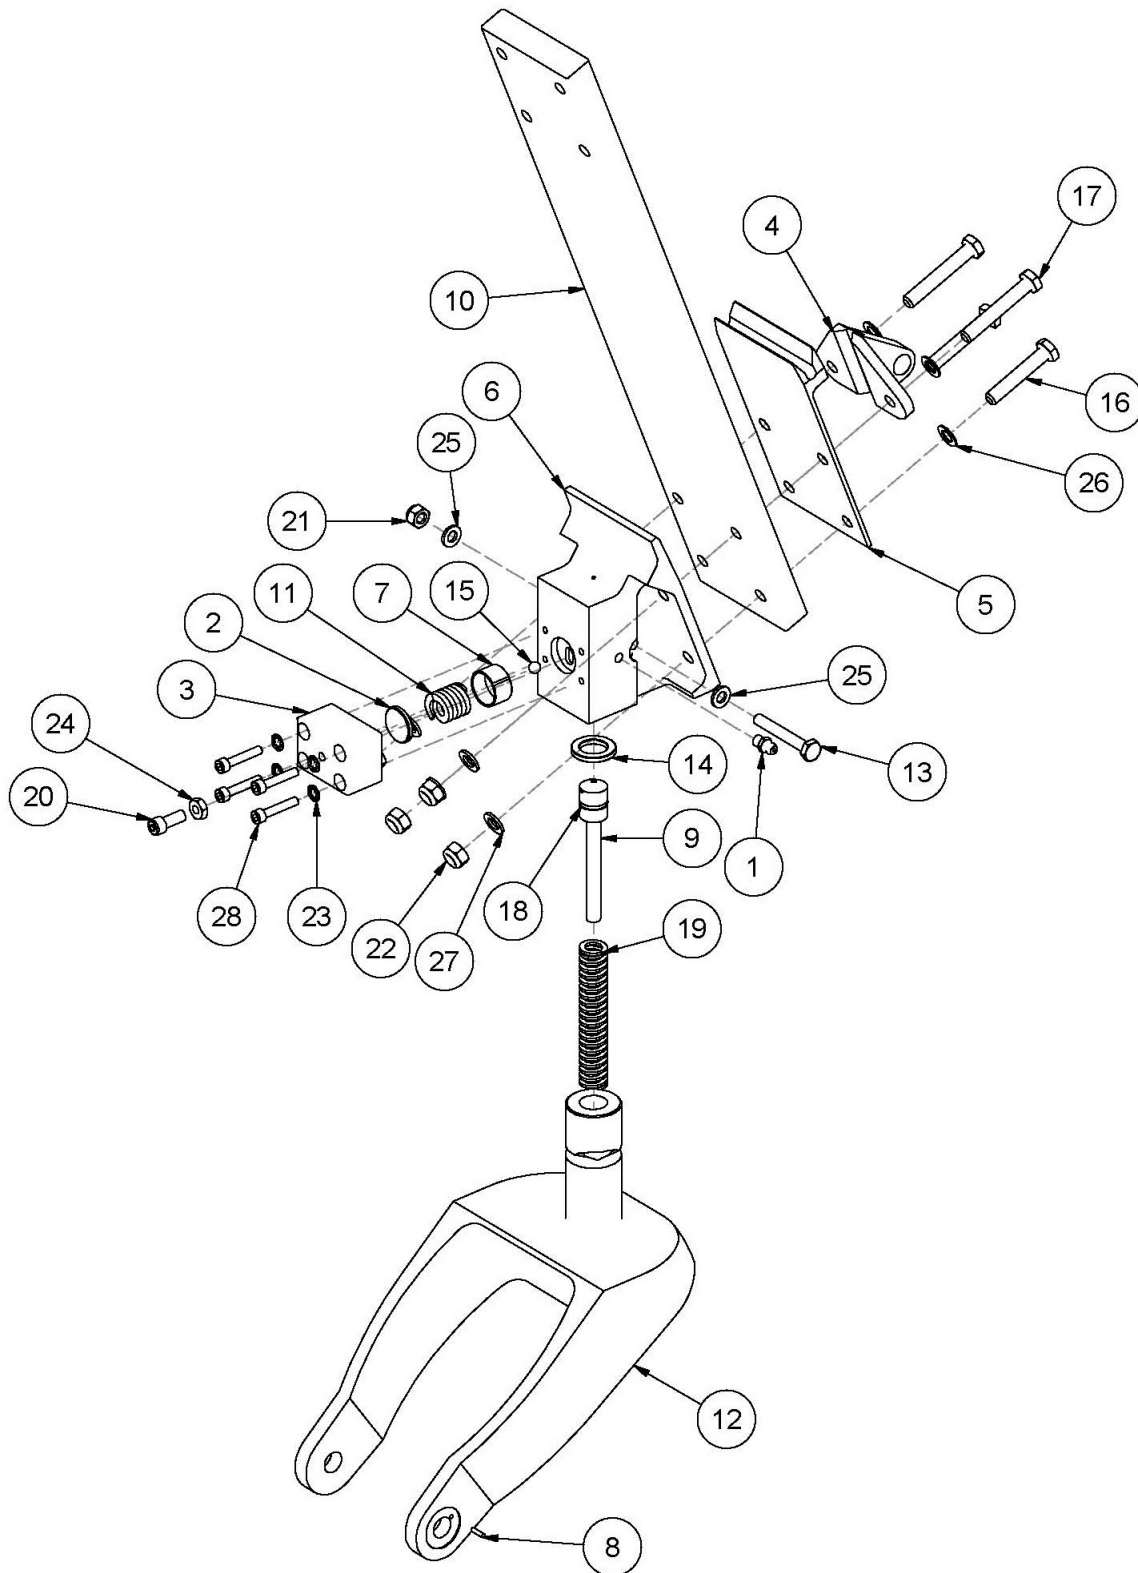

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1095K41	COMMON GREASEZERK
2	1	21A06160-053	PRESSURE PLATE
3	1	21A06194-005	BLOCK - SPRING
4	1	21A06213-006	TOW HOOK NOSE GEAR
5	1	21A06237-001	BEARING PLATE, LOWER, NOSE GEAR
6	1	21A06318-005	BLOCK - PIVOT, NOSE GEAR
7	1	21A06475-006	FRICTION CUP
8	1	3A06476-001	PIN, ANTIROTATION
9	1	21A06605-002	PLUNGER- NOSE WHEEL, 21, 23, 3, 34
10	1	30A06655-001	SPRING NOSE GEAR
11	1	21A06705-005	PRESSURE SPRING
12	1	30A06000-024	ASSEMBLY, - PIVOT AND FORK, NOSE GEAR
13	1	30A06702-016	BOLT - MODIFIED, PIVOT BLOCK
14	1	3A06602-001	THRUST WASHER
15	1	9528K15	1/4" CHROME BALL BEARING
16	2	AN5-15A	BOLT
17	2	AN5-17A	BOLT
18	1	AN6227-9	O-RING
19	1	M62-350	SPRING
20	1	MS16997-60	BOLT
21	1	MS21044N4	NUT
22	4	MS21044N5	NUT
23	4	MS35333-39	STAR WASHER
24	1	MS35649-2252	NUT
25	2	NAS1149D0463J	WASHER
26	4	NAS1149F0532P	WASHER
27	4	NAS1149F0563P	WASHER
28	4	NAS1352-316P	BOLT

NOSE WHEEL ASSEMBLY (GROVE)

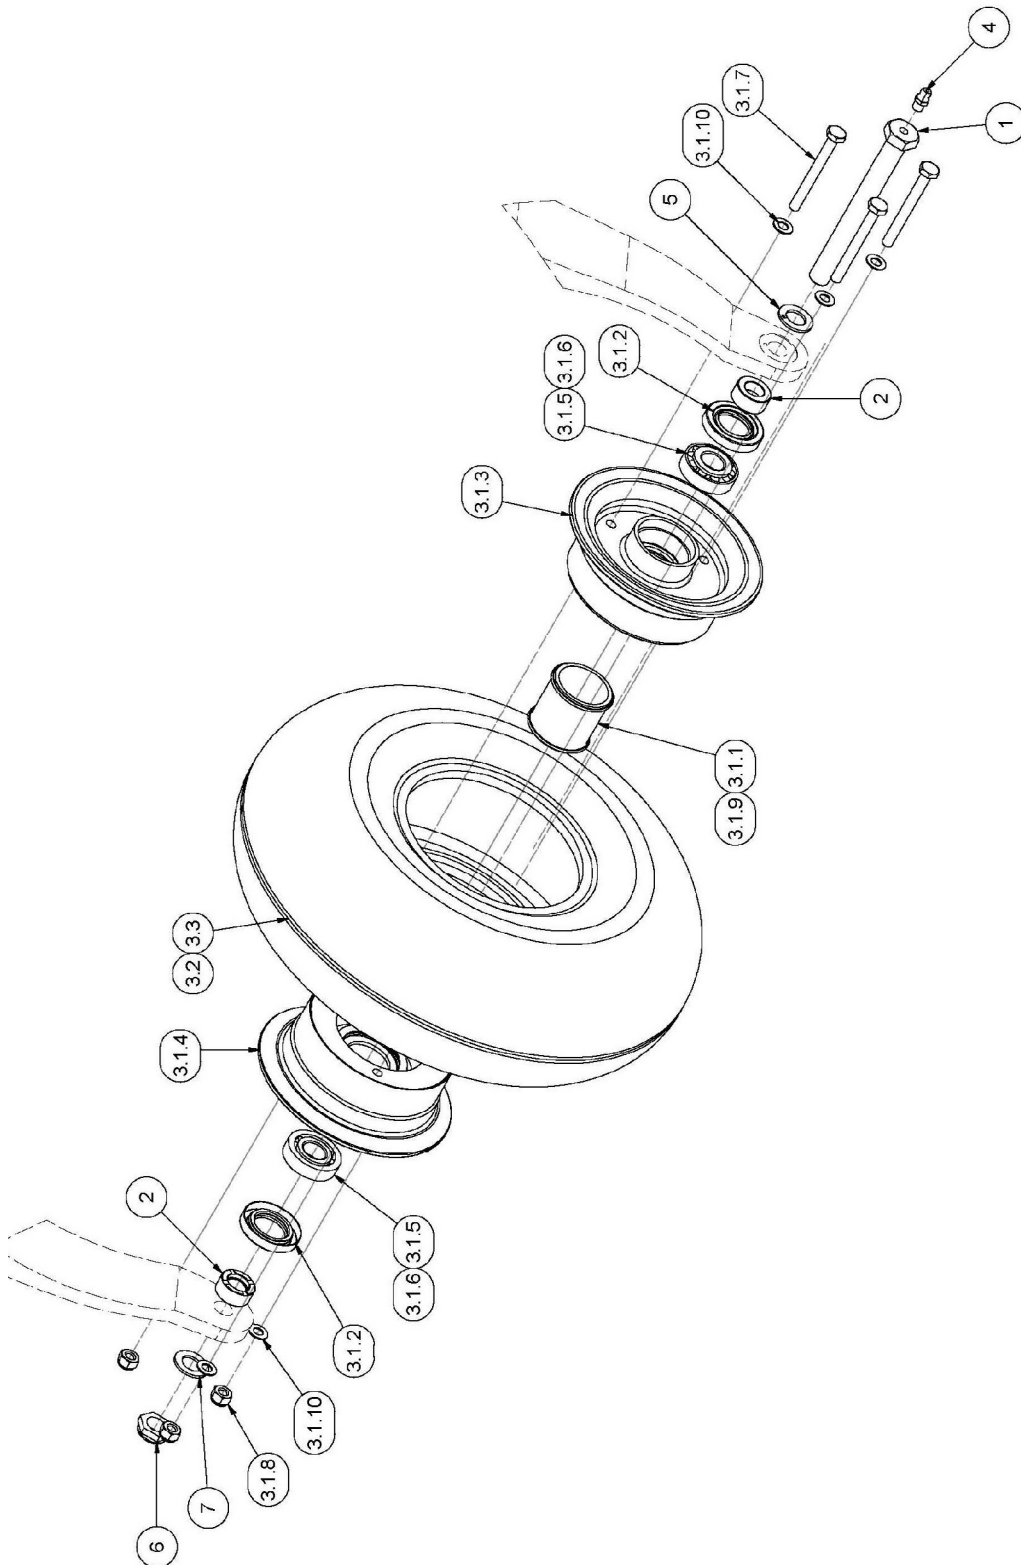


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1005927	BOLT, MODIFIED, AXLE, NOSE GEAR
2	2	1005928	SPACER
3	1	1006679	ASSEMBLY, NOSE WHEEL
3.1	1	49-12AF-001	WHEEL ASSEMBLY, GROVE
3.1.1	1	010-019	GREASE RETAINER
3.1.2	2	471570	SEAL, TIMKEN (EQUIVALENT TO GROVE OEM P/N 010-026)
3.1.3	1	015-020A	WHEEL HALF INNER
3.1.4	1	016-020AF	WHEEL HALF OUTER
3.1.5	2	A4050	BEARING CORE
3.1.6	2	A4138	BEARING CONE
3.1.7	3	AN4-23A	BOLT
3.1.8	3	MS21044N-4	NUT
3.1.9	2	MS28775-029	O-RING
3.1.10	6	NAS1149F0416	WASHER
3.2	1	XA1AB*	TUBE
3.3	1	AD1B2*	TIRE
4	1	1095K41	COMMON GREASEZERK
5	1	3A06702-003	MODIFIED WASHER
6	1	MS21083N8	NUT
7	1	NAS1149D0863J	WASHER

* Any alternate tire (tube type) which is TSO-approved, matches the listed tire's dimensions, and meets its speed/load/ply ratings may be used. Equivalent tubes may also be used.

NOSE WHEEL ASSEMBLY (PARKER)

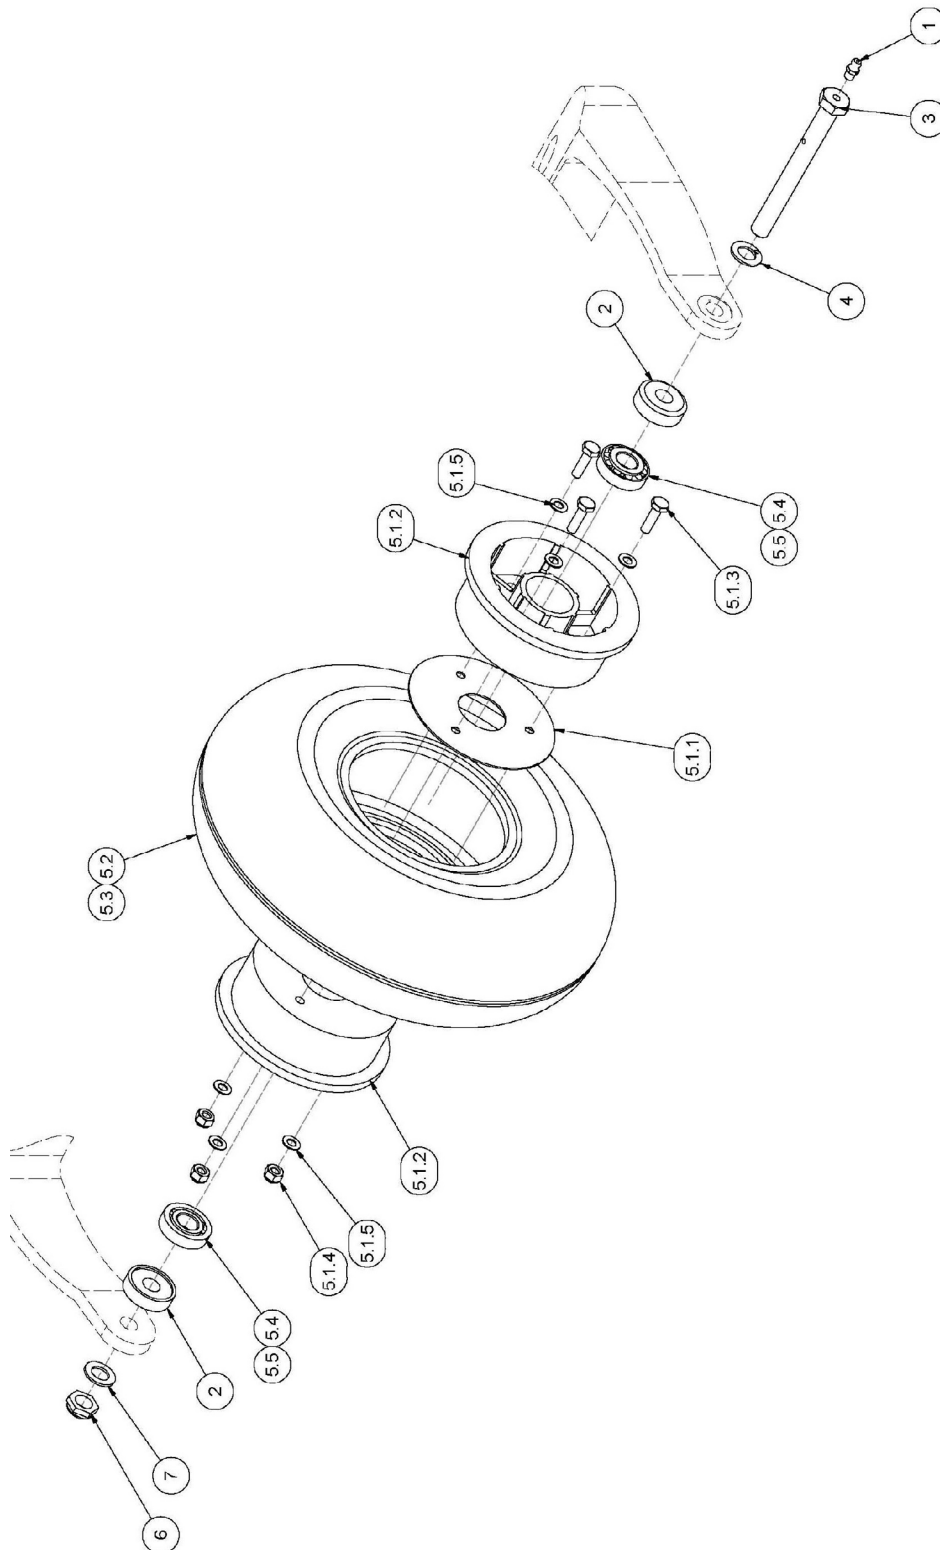


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1095K41	COMMON GREASEZERK
2	2	3A06259-001	SPACER - NOSE WHEEL - SMALL FLOAT
3	1	3A06702-002	BOLT, MODIFIED, AXLE, NOSE GEAR
4	1	3A06702-003	MODIFIED WASHER
5	1	30A06000-025	NOSE WHEEL ASSEMBLY
5.1	1	D-30380	PARKER WHEEL ASSEMBLY
5.1.1	1	068-30373	GASKET
5.1.2	2	161-30382	WHEEL HALF
5.1.3	3	AN4-7A	BOLT
5.1.4	3	MS21044N4	NUT
5.1.5	6	NAS1149F0432P	WASHER
5.2	1	AD1B2*	TIRE
5.3	1	XA1AB*	TUBE
5.4	2	A4050	BEARING CORE
5.5	2	A4138	BEARING CONE
6	1	MS21083N8	NUT
7	1	NAS1149D0863J	WASHER

* Any alternate tire (tube type) which is TSO-approved, matches the listed tire's dimensions, and meets its speed/load/ply ratings may be used. Equivalent tubes may also be used.


MAIN GEAR INSTALLATION

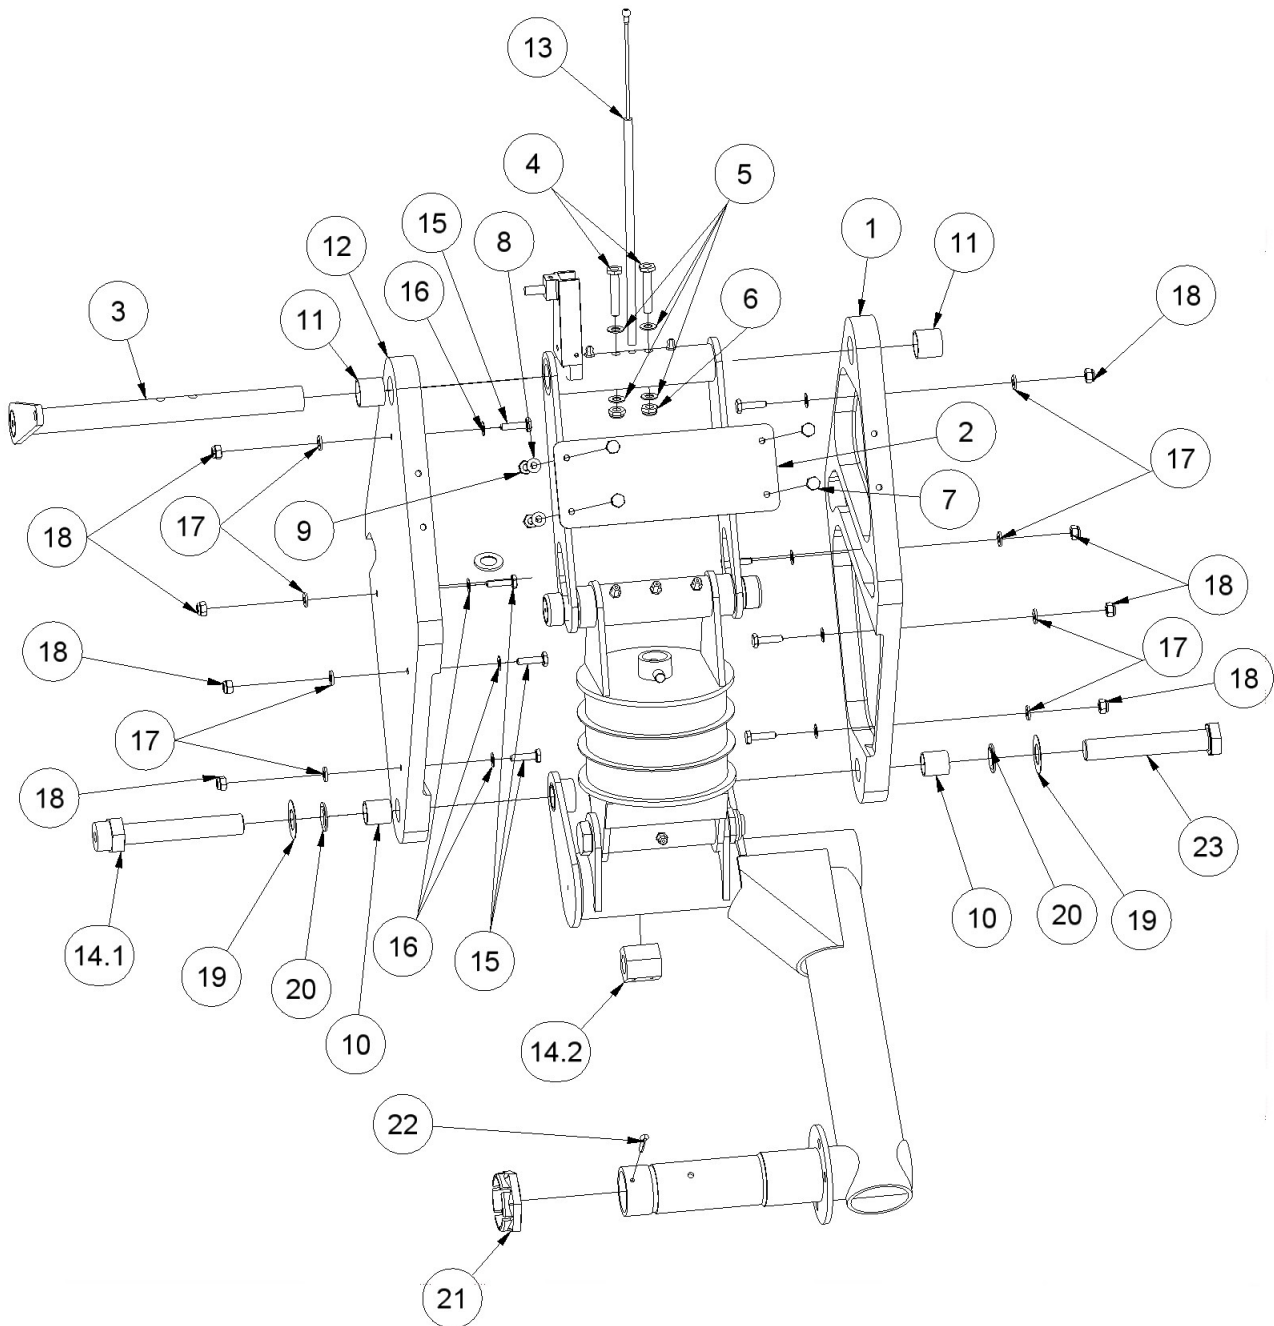

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A05114-008	TRACK - MAIN GEAR - RIGHT
2	1	30A05003-085	SPACING PLATE
3	1	30A05000-039	ASS'Y. ARM RETRACT (LEFT)
	1	30A05000-040	ASS'Y. ARM RETRACT (RIGHT)
4	2	NAS6204-17	BOLT
5	4	NAS1149F0432P	WASHER
6	2	MS21083N4	NUT
7	4	AN3-5A	BOLT
8	4	NAS1149D0316J	WASHER
9	4	MS21044N3	NUT
10	2	10DU12	BUSHING
11	2	12DU12	BUSHING
12	1	30A05114-007	TRACK - MAIN GEAR - LEFT
13	1	30A05000-027	ASS'Y - ARM - GEAR INDICATOR
14	1	30A05000-038	MAIN GEAR BOLT ASS'Y - LOWER
14.1	1	30A05558-001	MODIFIED BOLT - DRAG LINK ATTACH (*CAN BE USED ON NEW OR OLD STYLE ACTUATOR - SEE SERVICE LETTER 97)
	1	1005973	MODIFIED BOLT - DRAG LINK ATTACH (*ONLY USED WITH NEW STYLE ACTUATOR - SEE SERVICE LETTER 97)
14.2	1	30A04574-001	COUPLING - MAIN GEAR
15	8	AN3-6A	BOLT
16	8	NAS1149D0316J	WASHER
17	8	NAS1149D0363J	WASHER
18	8	MS21044N3	NUT
19	2	NAS1149D1016J	WASHER
20	2	93783A035	SEALING WASHER
21	1	MS21025-24	NUT, AXLE
22	1	MS24665-351	COTTER PIN
23	1	30A05702-020	BOLT


MAIN GEAR RETRACTION

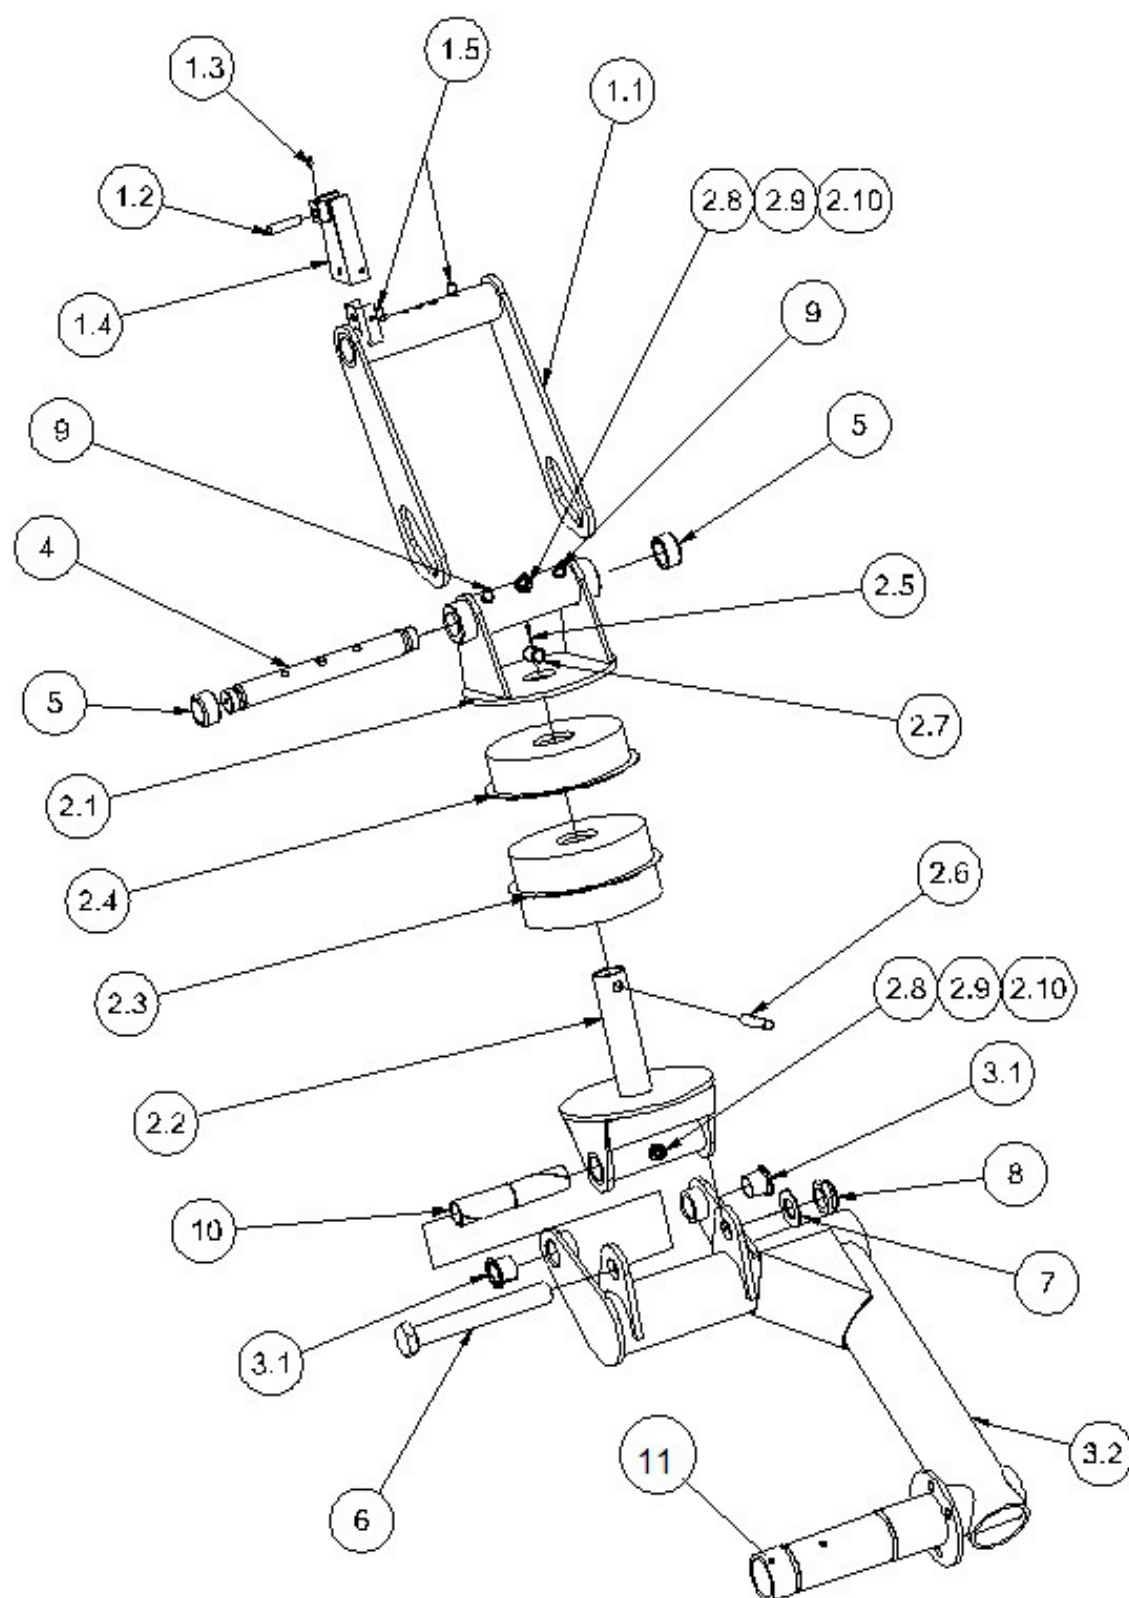

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	30A05000-042	ASS'Y. ARM RETRACT - DRAG LINK
1.1	1	30A05000-041	ASS'Y. ARM RETRACT - DRAG LINK
1.2	1	3A05701-001	CYLINDRICAL MAGNET
1.3	1	1032 NFX 3/16	SET SCREW, 10-32 X 3/16 S.S. CP
1.4	1	30A05214-007	PROX. SWITCH HOLDER
1.5	2	1095K41	COMMON GREASEZERK
2	1	30A04000-100	ASS'Y. SHOCK STRUT (FOR CESSNA 180 ONLY)
	1	34A04000-101	ASS'Y. SHOCK STRUT (FOR CESSNA 185 ONLY)
2.1	1	30A04000-093	ASSEMBLY - END SHOCK STRUT - UPPER
2.2	1	30A04000-120	ASSEMBLY - END SHOCK STRUT - LOWER
2.3	1	1002089	DUAL BUSHING ASSEMBLY (FOR CESSNA 180 ONLY)
	1	1002090	DUAL BUSHING ASSEMBLY (FOR CESSNA 185 ONLY)
2.4	1	1001102	BUSHING ASSEMBLY (FOR CESSNA 180 ONLY)
	1	1001102	BUSHING ASSEMBLY (FOR CESSNA 185 ONLY)
2.5	1	MS24665-151	COTTER PIN
2.6	1	30A04476-004	PIN - RETAINING, SHOCK STRUT
2.7	1	30A04459-002	SLEEVE - SHOCK STRUT RETAINER
2.8	2	1095K41	COMMON GREASEZERK
2.9	2	NAS1149D0416J	WASHER
2.10	2	NAS1149D0463J	WASHER
3	1	30A04000-091	ASS'Y, DRAG LINK - MAIN GEAR, LH
	1	30A04000-090	ASS'Y, DRAG LINK - MAIN GEAR, RH
3.1	2	10FDU10	BUSHING
3.2	1	30A04000-091B	DRAG LINK, MAIN GEAR, LH
	1	30A04000-090B	DRAG LINK, MAIN GEAR, RH
4	1	30A04454-007	SHAFT - AXLE - SHOCK STRUT
5	2	21A05520-003	ROLLER, SHOCK STRUT - RETRACT
6	1	30A05702-016	BOLT - DRAG LINK
7	1	NAS1149F1063P	WASHER
8	1	MS21083N10	NUT
9	2	1095K41	COMMON GREASEZERK
10	1	30A04475-006	BUSHING
11	1	6A04263-003	INSERT GREASE WHEEL
	2	MS28775-214	"O" RING
	1	1095K41	COMMON GREASEZERK

MAIN GEAR HYDRAULIC INSTALLATION

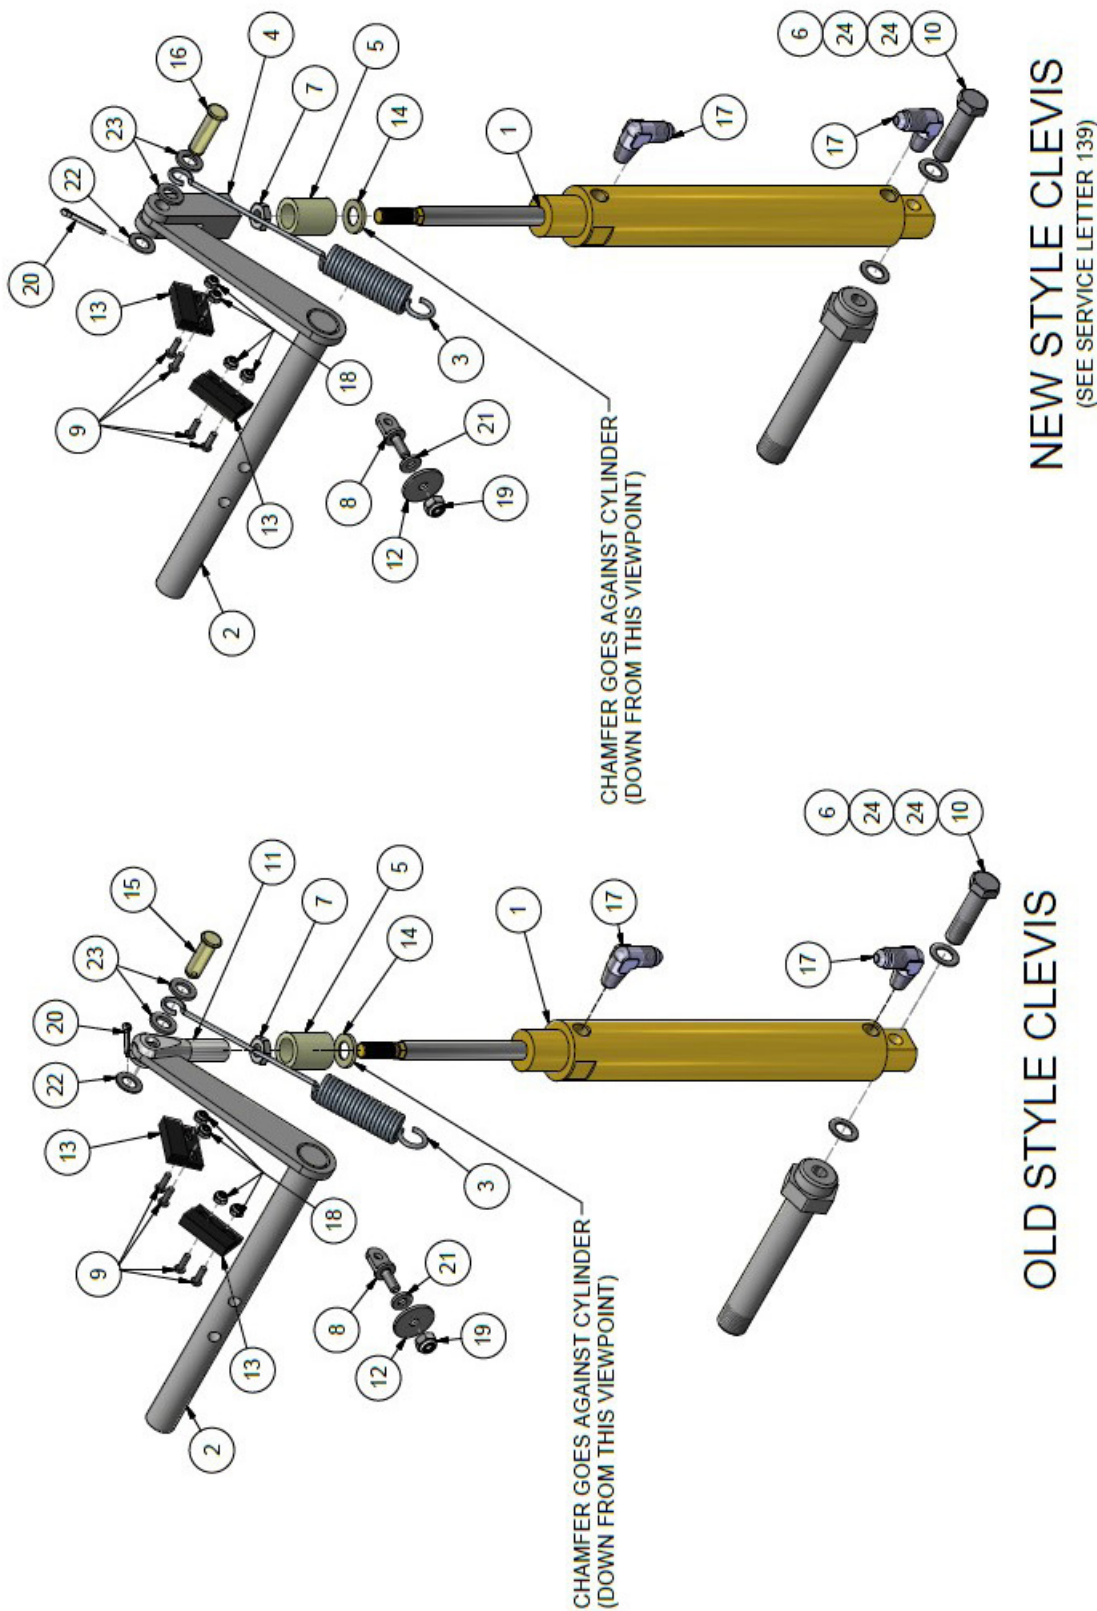


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1002573*	CYLINDER-MAIN GEAR, 3000-3450
2	1	30A05000-039	ASS'Y. ARM RETRACT (LEFT)
	1	30A05000-040	ASS'Y. ARM RETRACT (RIGHT)
3	1	21A05525-008	SPRING - GEAR
4	1	30A05252-001	SPACER - HYDRAULIC CYLINDER
5	1	30A05460-001	CLEVIS - RETRACT ARM, MAIN GEAR, (3000/3450)
6	1	30A05558-001	MODIFIED BOLT - DRAG LINK ATTACH (*CAN BE USED ON NEW OR OLD STYLE ACTUATOR - SEE SERVICE LETTER 97)
	1	1005973	MODIFIED BOLT - DRAG LINK ATTACH (*ONLY USED WITH NEW STYLE ACTUATOR - SEE SERVICE LETTER 97)
7	1	AN316-5R	NUT
8	1	AN42-4A	EYE BOLT
9	4	AN515-4R6	SCREW, MACHINE
10	1	AN6-13A	BOLT
11	1	AN665-46RS	TERMINAL, FLY WIRE
12	1	AN970-3	WASHER
13	2	HAMLIN 59135-20	HAMLIN MAGNETIC SWITCH
14	1	MS20002C6	WASHER - COUNTER SUNK
15	1	MS20392-4C25	CLEVIS PIN
16	1	MS20392-4C29	CLEVIS PIN
17	2	MS20822-4-4D	ELBOW
18	4	MS21044N04	NUT
19	1	MS21044N3	NUT
20	2	MS24665-283	COTTER PIN
21	1	NAS1149D0363J	WASHER
22	1	NAS1149F0532P	WASHER
23	2	NAS1149F0563P	WASHER
24	2	NAS1149F0632P	WASHER

* If this style actuator is replacing the old style non rebuildable cylinder, reference Service Letter 97 for replacement and the correct drag link attach modified bolt.

MAIN GEAR WHEEL ASSEMBLY

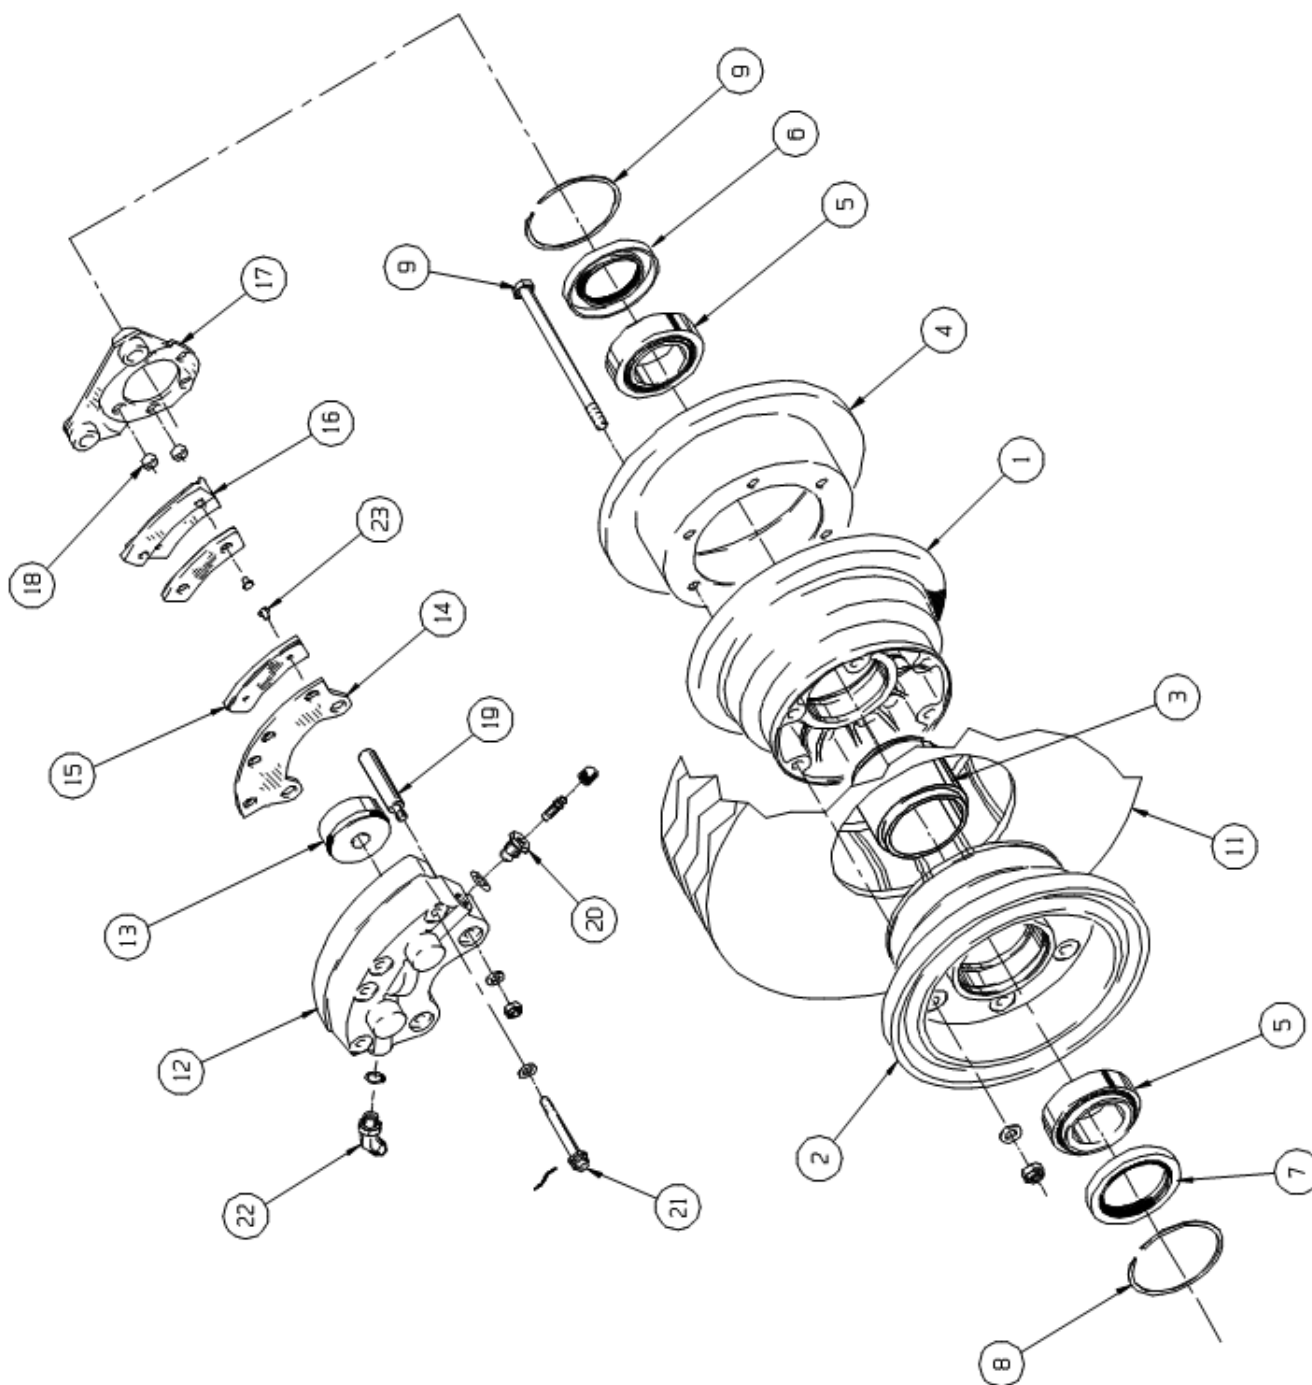


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	8A04000-031	WHEEL ASS'Y. (W/ TIRE & TUBE)
2	1	40-418-3	WHEEL ASS'Y. (BOTH HALVES) (NAMEPLATE READS "40-418B", INCLUDES ITEMS 3-10)
	1	40-418 (ALT)	WHEEL ASS'Y. (ALTERNATE, INCLUDES ITEMS 3-10)
3	1	067-14700	SPACER – GREASE DAM
4	1	164-24501	DISC – BRAKE, CHROME (ORIG EQUIP FOR 40-418-3)
	1	164-24500	DISC – BRAKE, NON-CHROME (ORIG EQUIP FOR 40-418)
5	2	13836	CUP – BEARING, NON-CHROME (ORIG EQUIP FOR 40-418-3)
	2	13836CP	CUP – BEARING, CHROME (ORIG EQUIP FOR 40-418)
	2	13889	CONE – BEARING, NON-CHROME (ORIG EQUIP FOR 40-418-3)
	2	13889CP	CONE – BEARING, CHROME (ORIG EQUIP FOR 40-418)
6	1	473232	SEAL, INBOARD
7	1	472439	SEAL, OUTBOARD (#50 HOLE REQUIRED BEFORE INST.)
8	2	155-14300	RING - SNAP
9	6	AN5-35A	BOLT
	6	NAS1149F0563P	WASHER
	6	MS210425	NUT
10	1	166-20000	NAMEPLATE – “WARNING” (NOT SHOWN)
	1	166-19700	NAMEPLATE (NOT SHOWN)
11	1	AA1E6*	TIRE 6.00 X 6, 8 PLY
	1	XA1AD*	TUBE 6.00 X 6
12	1	30A04000-103	ASSEMBLY, BRAKE CALIPER, LH, 3000/3450
	1	30A04000-102	ASSEMBLY, BRAKE CALIPER, RH, 3000/3450
13	2	062-10700	PISTON
	1	MS28775-222	O-RING
14	1	063-01100	PLATE - PRESSURE
15	2	066-10500	LINING - BRAKE
16	1	064-01500	PLATE – BACK
17	1	075-20700	PLATE - TORQUE
18	1	145-01000	BUSHING
19	2	069-03100	BOLT - ANCHOR
	2	NAS1149F0463P	WASHER
	2	MS21044N4	NUT
20	1	081-00200	SEAT - BLEEDER
	1	MS28775-012	O-RING
	1	079-00300	SCREW – BLEEDER
	1	183-00100	CAP – BLEEDER
21	4	MS21250H04026	BOLT
	4	MS20002C4	WASHER
	A/R	MS20995-C32	LOCKWIRE
22	1	104-04700	FITTING

ITEM	QTY	PART NO.	PART DESCRIPTION
	1	MS28775-012	O-RING
23	4	105-00200	RIVET


* Any alternate tire (tube type) which is TSO-approved, matches the listed tire's dimensions, and meets its speed/load/ply ratings may be used. Equivalent tubes may also be used.

MAIN GEAR SHOCK ASSEMBLY

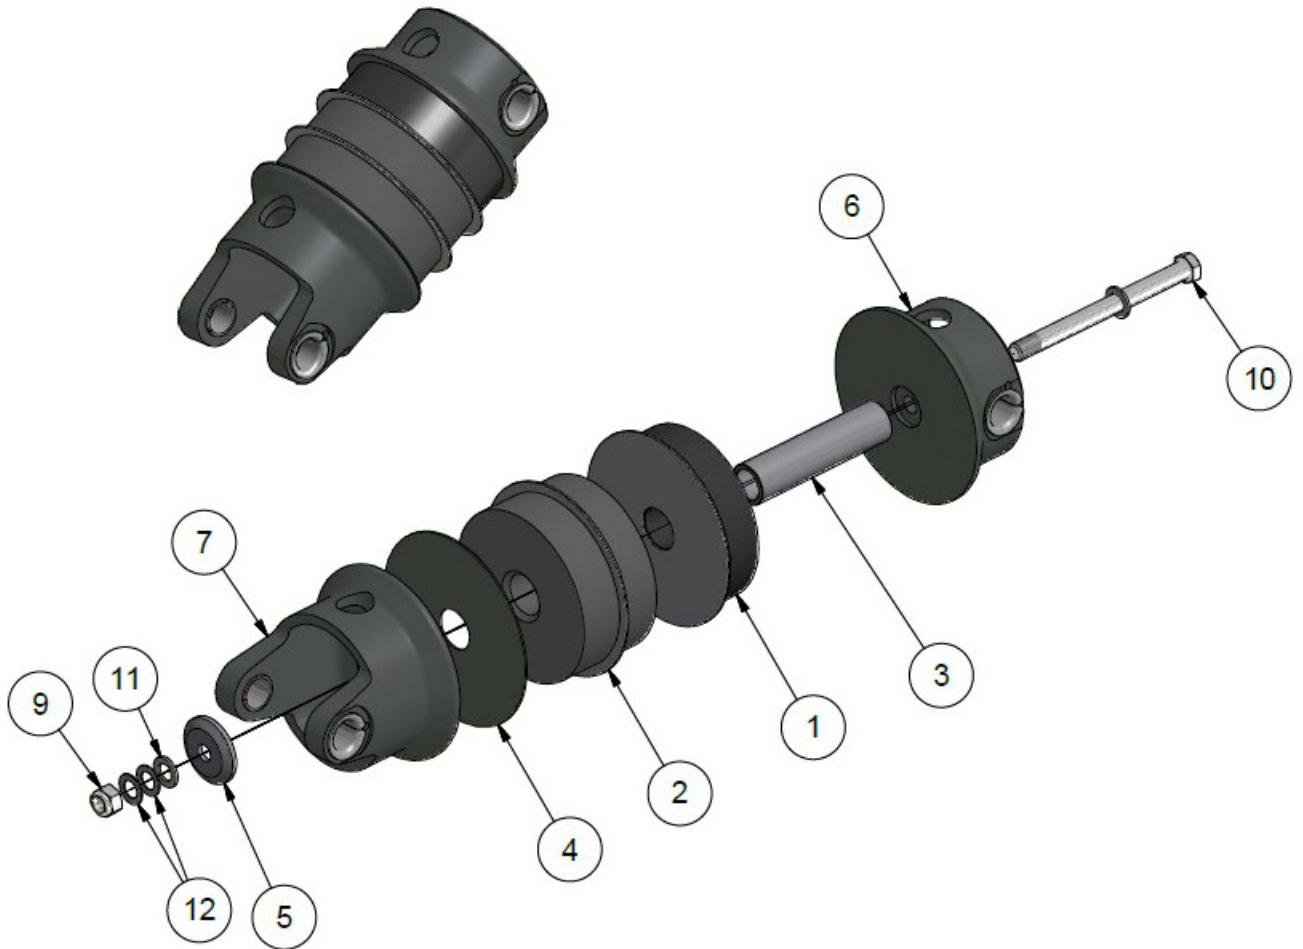

ITEM	QTY	PART NO.	PART DESCRIPTION
-	2	1004286-01	ASS'Y. SHOCK, LIGHT DUTY, MAIN GEAR (MAULE)
1	1	1001102	BUSHING ASS'Y., SHOCK STRUT
2	1	1002089	BUSHING ASS'Y., DUAL, SHOCK STRUT
3	1	1004267	TUBE, STRUT, MAIN
4	1	1004268	SHOCK SPACER, MAIN
5	1	1004269	STRUT END CAP, MAIN
6	1	1005765	ASS'Y., UPPER SHOCK STRUT, MAIN
7	1	1005766	ASS'Y., LOWER SHOCK STRUT, MAIN
9	1	MS21044N7	NUT
10	1	AN7-51A	BOLT
11	2	NAS1149D0763P	WASHER
12	2	NAS1149D0732P	WASHER

MAIN GEAR WITHOUT WHEEL PIVOT ASSEMBLY FOR FLOAT SERIAL NUMBERS 30307A & 30308A AND LATER

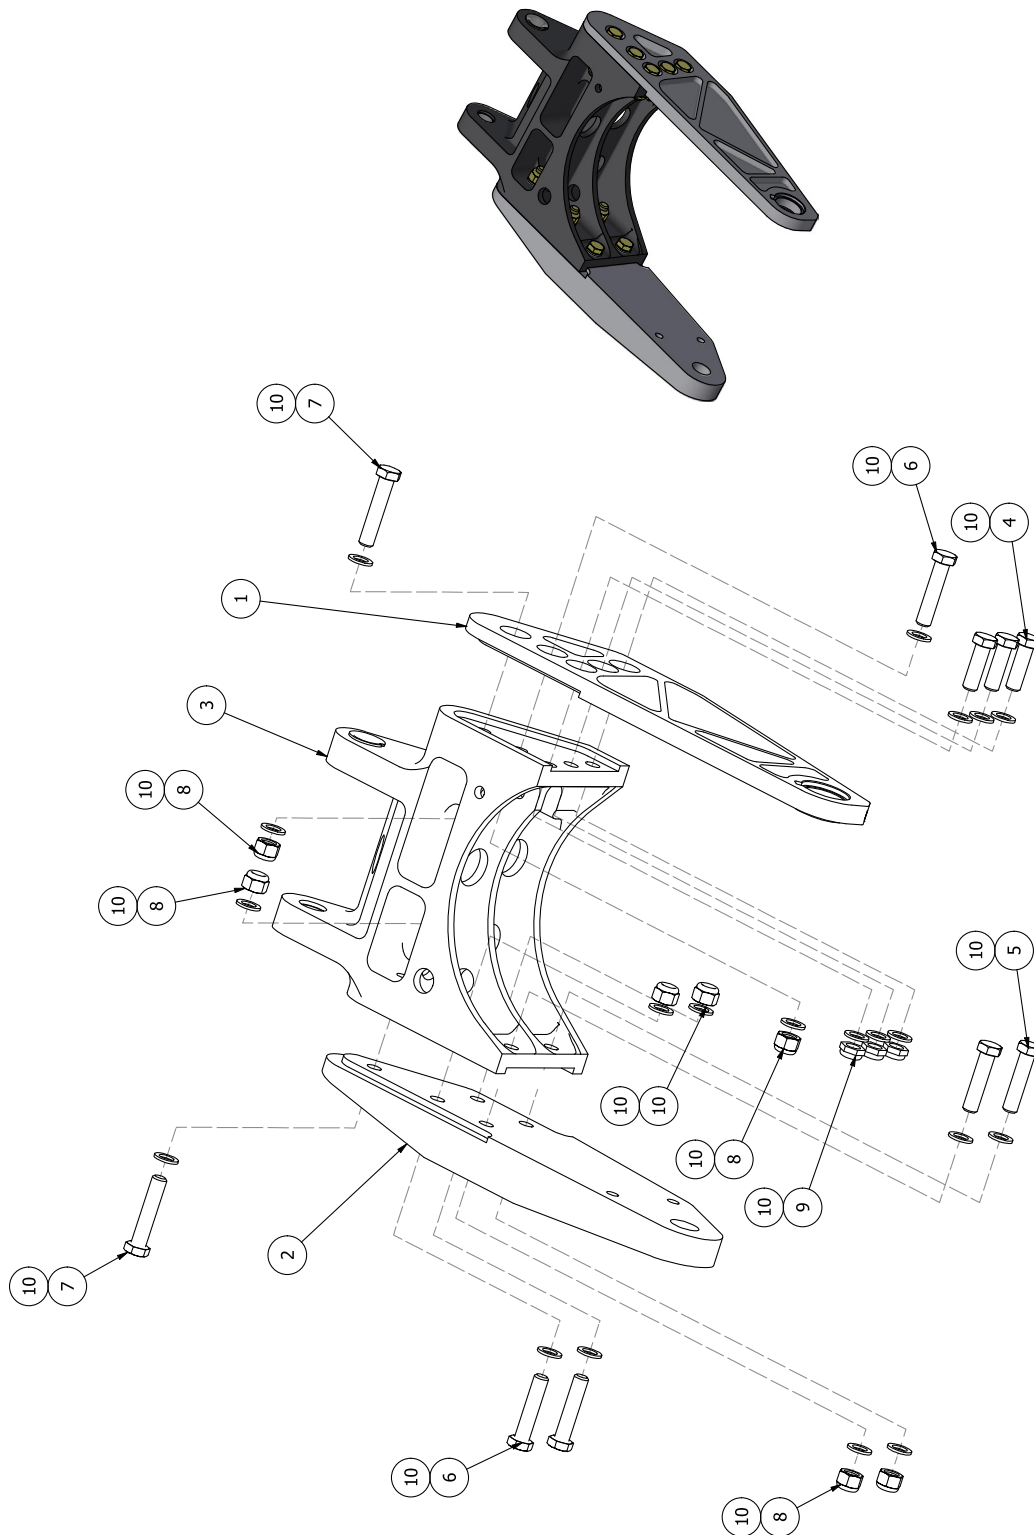


(LH ASSEMBLY DEPICTED, RH MIRRORED)

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1005746	ASS'Y., PIVOT, RH, MAIN GEAR W/O WHEEL
-	1	1005747	ASS'Y., PIVOT, LH, MAIN GEAR W/O WHEEL
1	1	1004274	LINK ARM, OUTBRD, RT FLOAT
	1	1005369	LINK ARM, OUTBRD, LT FLOAT
2	1	1004275	LINK ARM, INBRD, LT FLOAT
	1	1005370	LINK ARM, INBRD, LT FLOAT
3	1	1005744	ASSY, CENTER LINK, RH, MAIN GEAR
	1	1005745	ASSY, CENTER LINK, LH, MAIN GEAR
4	3	AN6-11A	BOLT
5	2	AN6-14A	BOLT
6	3	AN6-15A	BOLT
7	2	AN6-16A	BOLT
8	7	MS21044N6	NUT
9	3	MS21083N6	NUT
10	20	NAS1149D0663J	WASHER

MAIN GEAR WITHOUT WHEEL PIVOT ASSEMBLY FOR FLOAT SERIAL NUMBERS 30305A & 30306A AND PRIOR

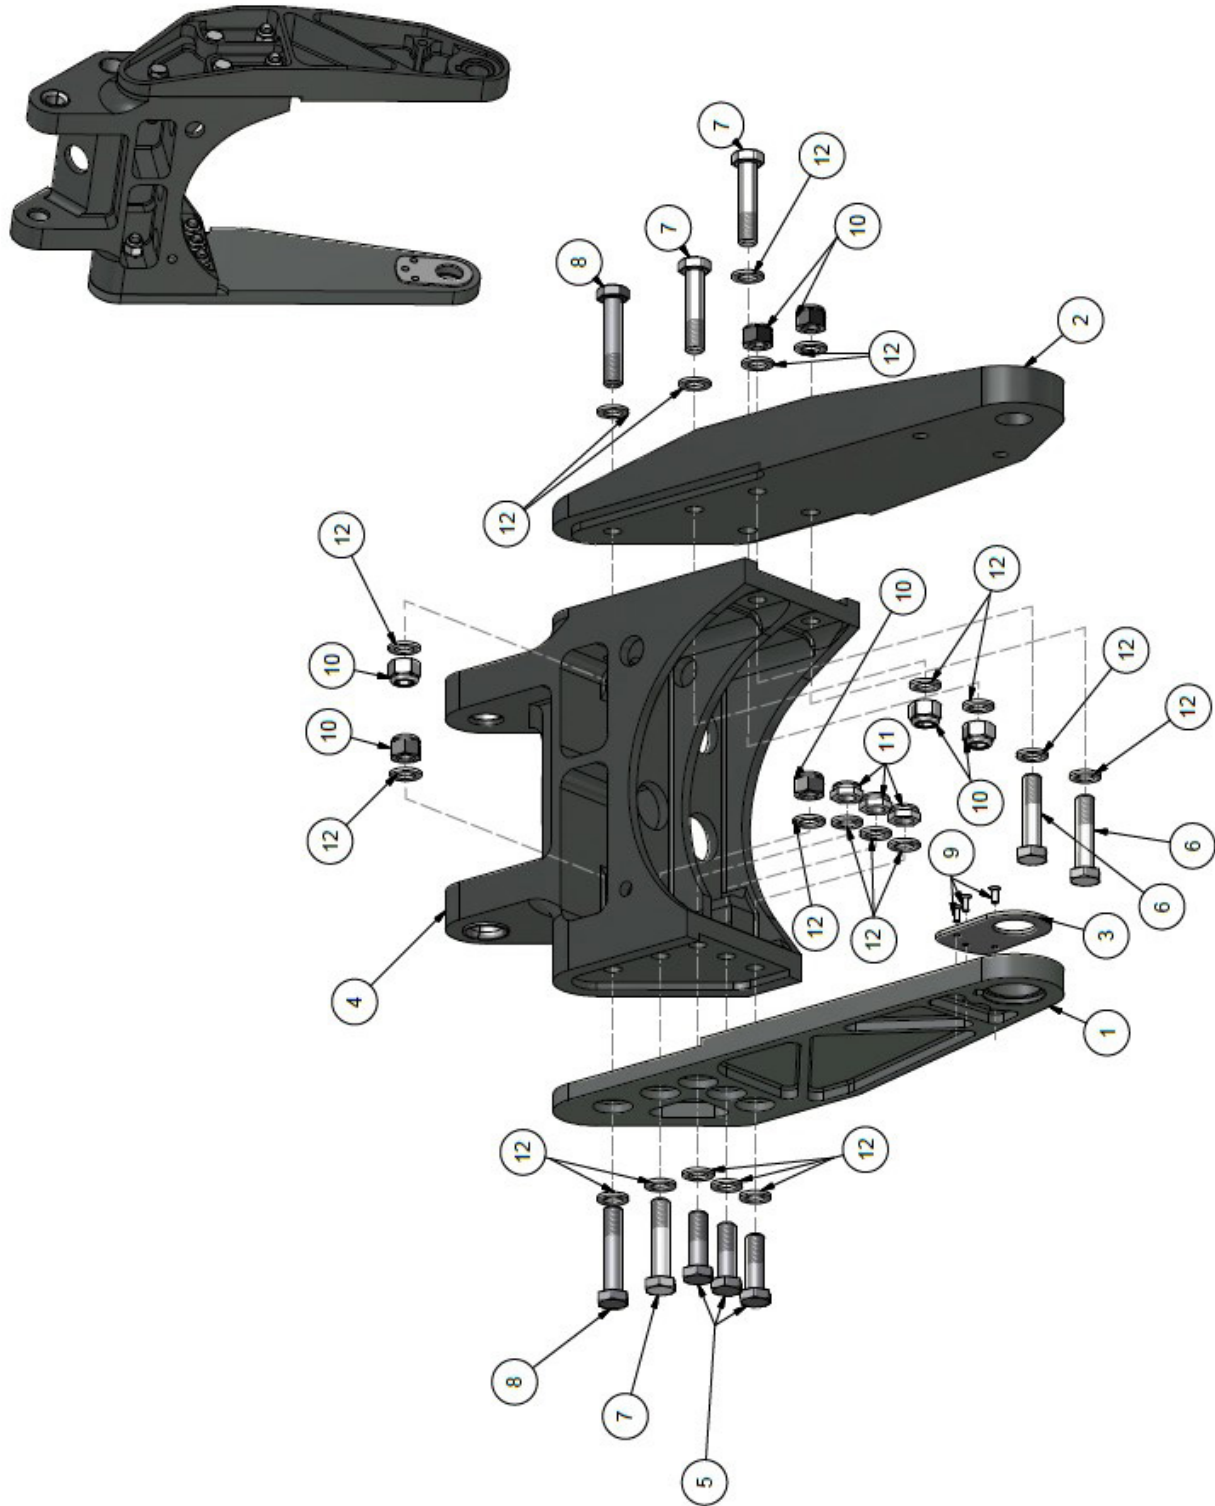


(RH ASSEMBLY DEPICTED, LH MIRRORED)

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1005746	ASS'Y., PIVOT, RH, MAIN GEAR W/O WHEEL
-	1	1005747	ASS'Y., PIVOT, LH, MAIN GEAR W/O WHEEL
1	1	1004274	LINK ARM, OUTBRD, RT FLOAT
	1	1005369	LINK ARM, OUTBRD, LT FLOAT
2	1	1004275	LINK ARM, INBRD, RT FLOAT
	1	1005370	LINK ARM, INBRD, LT FLOAT
3	1	1005387	GREASE COVER, MAIN GEAR, 3000 3450
4	1	1005744	ASSY, CENTER LINK, RH, MAIN GEAR
	1	1005745	ASSY, CENTER LINK, LH, MAIN GEAR
5	3	AN6-11A	BOLT
6	2	AN6-14A	BOLT
7	3	AN6-15A	BOLT
8	2	AN6-16A	BOLT
9	3	MS20426-4	RIVET-FLAT HEAD
10	7	MS21044N6	NUT
11	3	MS21083N6	NUT
12	20	NAS1149D0663J	WASHER


MAIN GEAR WITH WHEEL PIVOT ASSEMBLY FOR FLOAT SERIAL NUMBERS 30307A & 30308A AND LATER

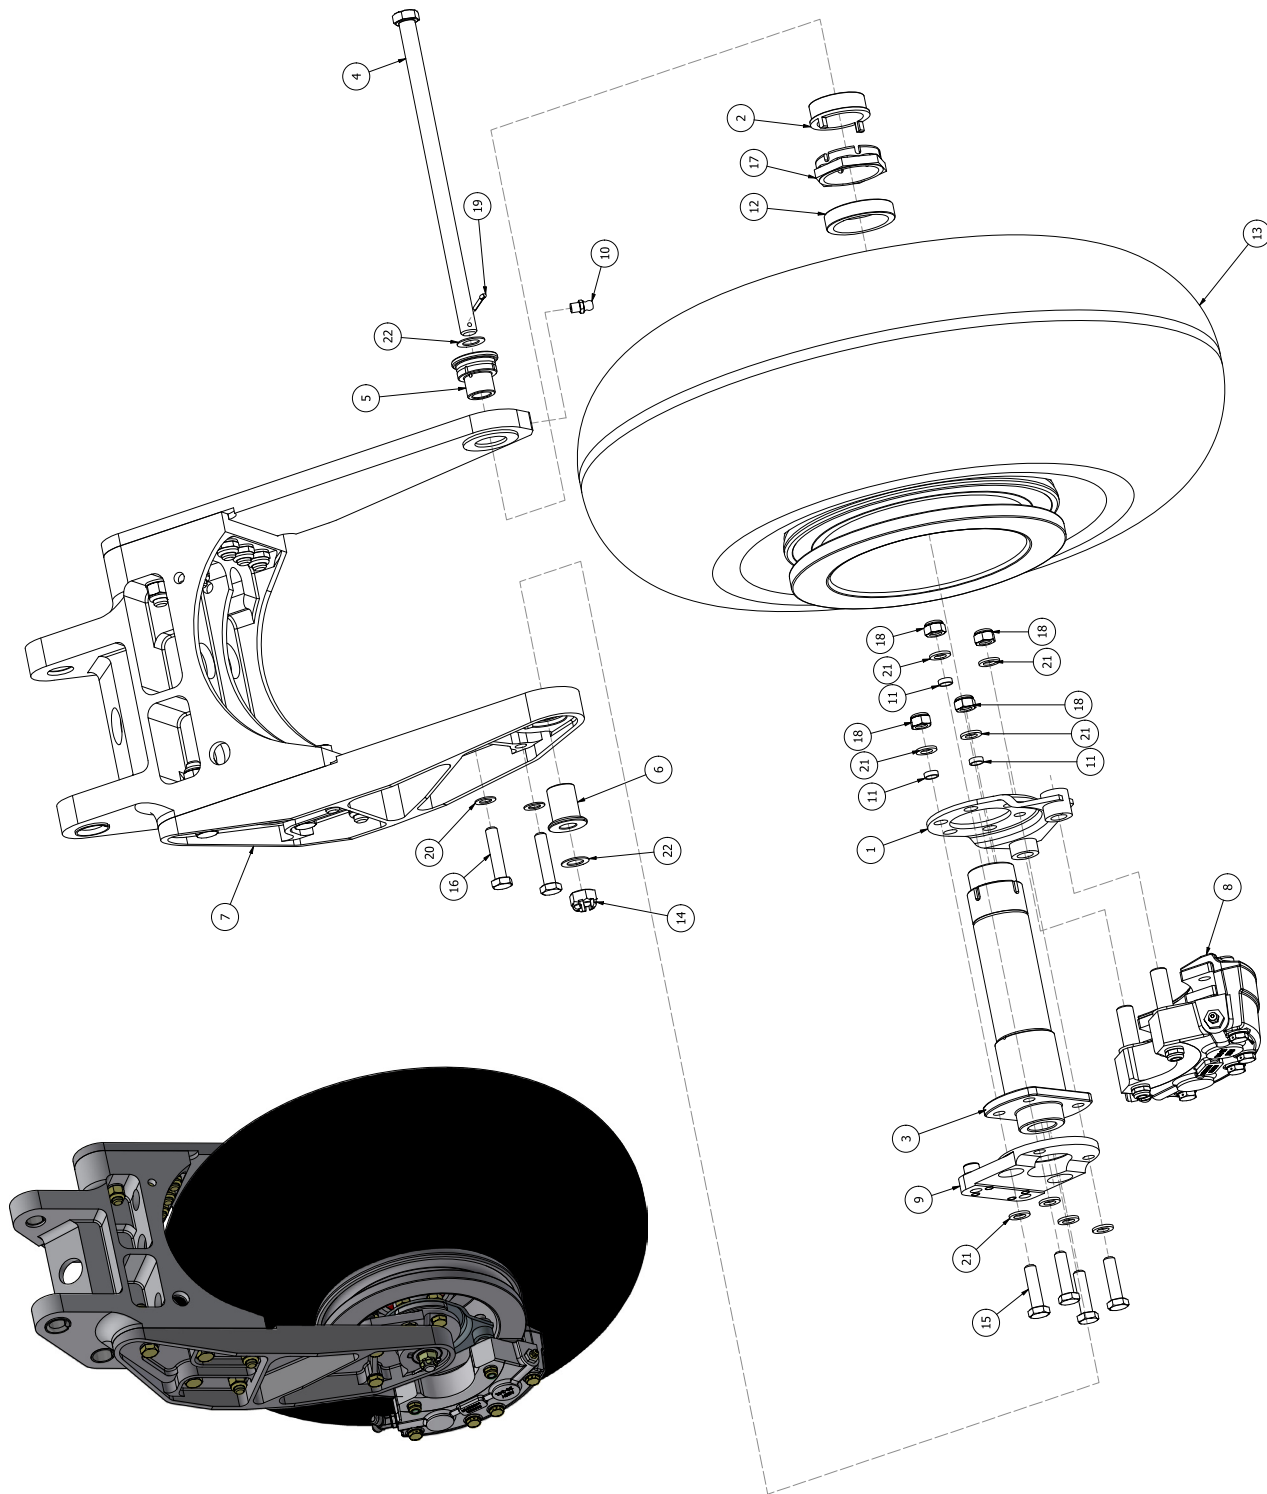

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1004288	ASS'Y., PIVOT, RH, MAIN GEAR
-	1	1005377	ASS'Y., PIVOT, LH, MAIN GEAR
1	1	075-20700	TORQUE PLATE
2	1	1004281	LOCKING HUB, MAIN
3	1	1004283	AXLE, MAIN GEAR
4	1	1005374	BOLT - 7/16-20 UNF-3A, 8.20 GRIP
5	1	1005378	HUB, AXLE
6	1	1005389	HUB, AXLE
7	1	1005746	ASS'Y., PIVOT, RH, MAIN GEAR W/O WHEEL
	1	1005747	ASS'Y., PIVOT, LH, MAIN GEAR W/O WHEEL
8	1	1005844	BRAKE ASSEMBLY COMPLETE, RH
	1	1005775	BRAKE ASSEMBLY COMPLETE, LH
	4	AN4H21A	BOLT
	2	MS21083N4	NUT
	6	NAS1149F0463P	WASHER
	2	069-03100	BOLT - ANCHOR
9	1	1005855	ASSY, BRACKET, ANTI ROTATION, MAIN, 3000 3450
10	1	1095K41	COMMON GREASEZERK
11	3	30A04523-002	BUSHING, TORQUE PLATE
12	1	6A04093-002	AXLE SPACER, MAIN WHEEL
13	1	8A04000-031	MAIN WHEEL ASSEMBLY
14	1	AN310-7	NUT, HEX, CASTLE, 7/16-20 UNF
15	4	AN5-11A	BOLT
16	2	AN5-13A	BOLT
17	1	MS21025-24	NUT, AXLE
18	6	MS21044N5	NUT
19	1	MS24665-302	COTTER PIN
20	2	NAS1149F0532P	WASHER
21	12	NAS1149F0563P	WASHER
22	2	NAS1149F0732P	WASHER


MAIN GEAR WITH WHEEL PIVOT ASSEMBLY FOR FLOAT SERIAL NUMBERS 30305A & 30306A AND PRIOR

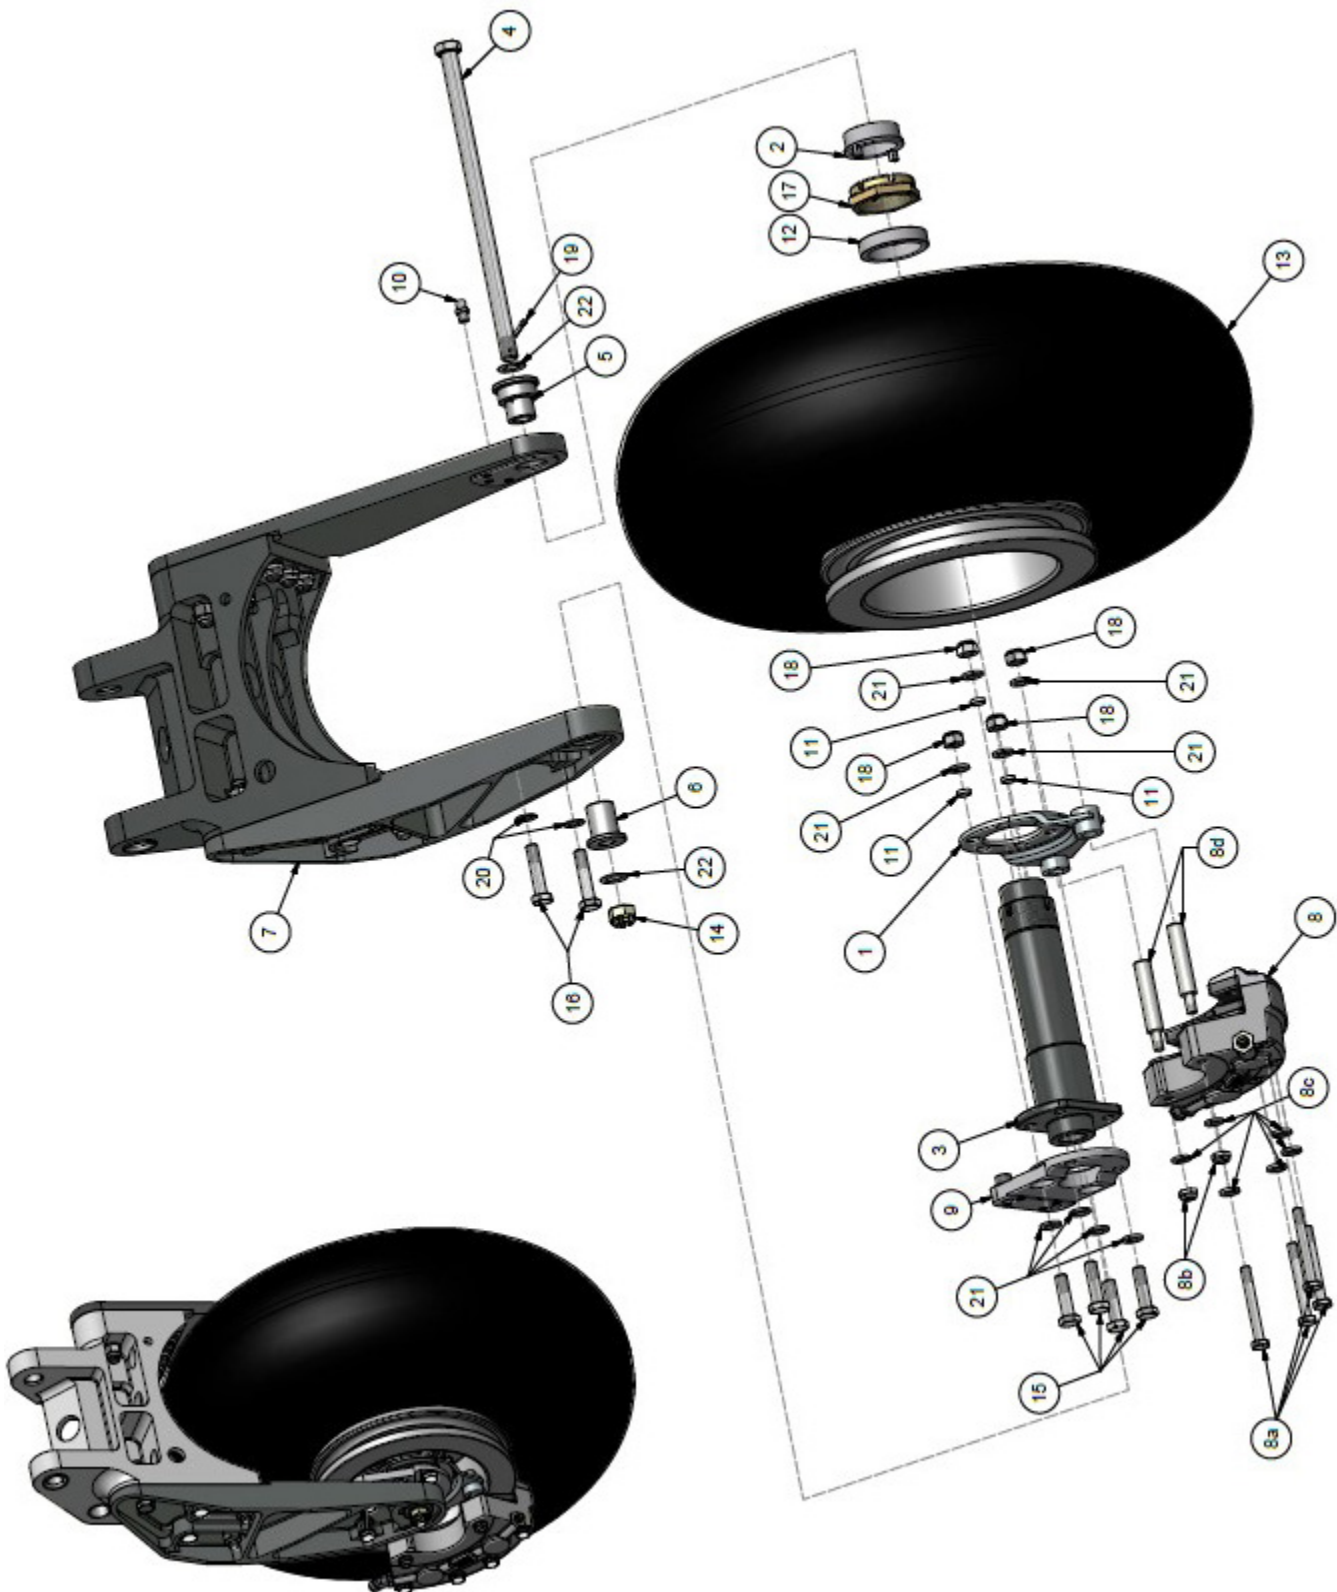

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1004288	ASS'Y., PIVOT, RH, MAIN GEAR
-	1	1005377	ASS'Y., PIVOT, LH, MAIN GEAR
1	1	075-20700	TORQUE PLATE
2	1	1004281	LOCKING HUB, MAIN
3	1	1004283	AXLE, MAIN GEAR
4	1	1005374	BOLT - 7/16-20 UNF-3A, 8.20 GRIP
5	1	1005378	HUB, AXLE
6	1	1005389	HUB, AXLE
7	1	1005746	ASS'Y., PIVOT, RH, MAIN GEAR W/O WHEEL
	1	1005747	ASS'Y., PIVOT, LH, MAIN GEAR W/O WHEEL
8	1	1005844	BRAKE ASSEMBLY COMPLETE, RH
	1	1005775	BRAKE ASSEMBLY COMPLETE, LH
8a	4	AN4H21A	BOLT
8b	2	MS21083N4	NUT
8c	6	NAS1149F0463P	WASHER
8d	2	069-03100	BOLT - ANCHOR
9	1	1005855	ASSY, BRACKET, ANTI ROTATION, MAIN, 3000 3450
10	1	1095K41	COMMON GREASEZERK
11	3	30A04523-002	BUSHING, TORQUE PLATE
12	1	6A04093-002	AXLE SPACER, MAIN WHEEL
13	1	8A04000-031	MAIN WHEEL ASSEMBLY
14	1	AN310-7	NUT, HEX, CASTLE, 7/16-20 UNF
15	4	AN5-11A	BOLT
16	2	AN5-13A	BOLT
17	1	MS21025-24	NUT, AXLE
18	6	MS21044N5	NUT
19	1	MS24665-302	COTTER PIN
20	2	NAS1149F0532P	WASHER
21	12	NAS1149F0563P	WASHER
22	2	NAS1149F0732P	WASHER


MAIN GEAR ASSEMBLY

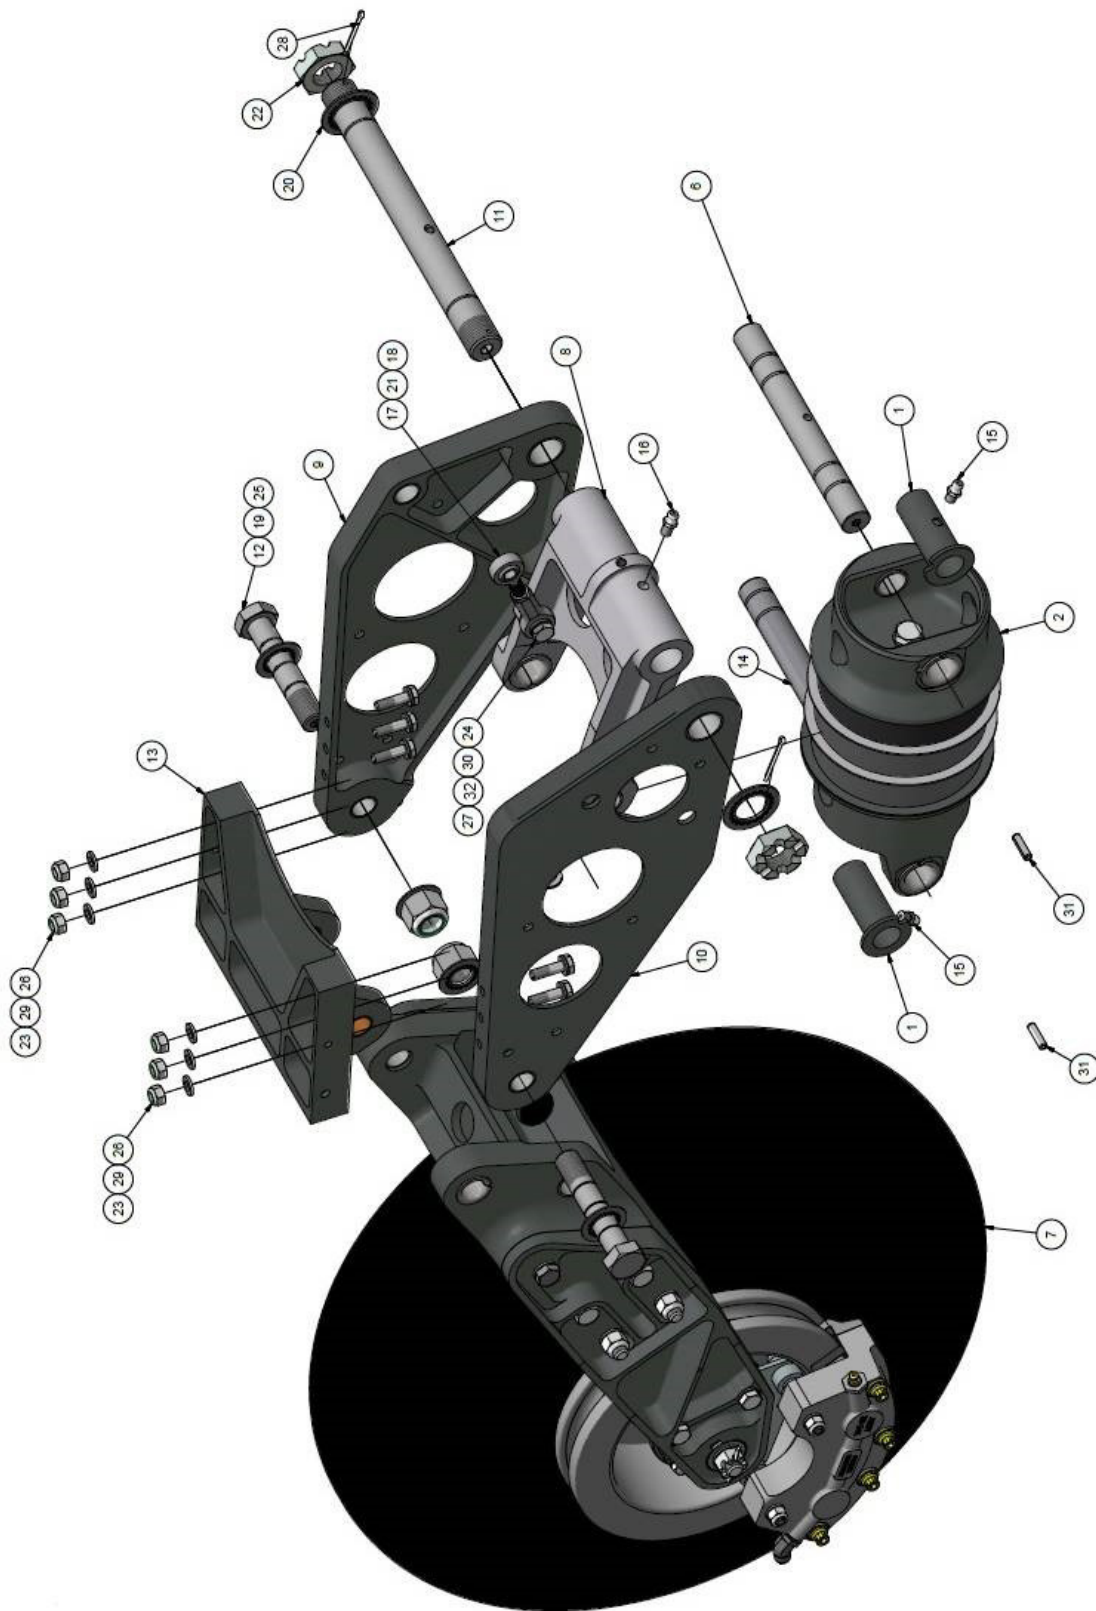

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1004291-02	ASS'Y, MAIN GEAR, RIGHT, LIGHT DUTY, UNDER 3250 LBS
-	1	1004251-02	ASS'Y, MAIN GEAR, LEFT, LIGHT DUTY, UNDER 3250 LBS
1	2	1004263	RETAINER, MAIN
2	1	1004286-01	ASS'Y., SHOCK, LIGHT DUTY, MAIN GEAR
6	1	1004287	ASS'Y., PIVOT PIN, SHOCK, UPPER, MAIN
7	1	1004288	ASSY, PIVOT, RH, MAIN GEAR
	1	1005377	ASS'Y., PIVOT, LH, MAIN GEAR
8	1	1004289	ASS'Y., UPPER SHOCK LINK
9	1	1004882	ASS'Y., SIDE SUPPORT, LH, MAIN
10	1	1005375	ASS'Y., SIDE SUPPORT, RH, MAIN
11	1	1005733	ASSEMBLY, SHAFT, UPPER SHOCK, MAIN GEAR
12	2	1005734	ASSEMBLY, BOLT, MODIFIED, LOWER PIVOT
13	1	1005735	ASSEMBLY, SUPPORT, PIVOT, LOWER, MAIN GEAR
14	1	1005750	ASS'Y., PIVOT PIN, SHOCK, LOWER, MAIN
15	4	1095K41	COMMON GREASEZERK
16	1	1095K42	COMMON GREASEZERK
17	1	59915K274	BALL JOINT ROD END, 5/16" BALL ID, MALE
18	1	59915K483	BALL JOINT END, 5/16" BALL ID, FEMALE
19	4	93781A035	SEALING WASHER
20	2	93783A046	SEALING WASHER
21	1	AN316-4R	NUT
22	2	AN320-14	NUT, HEX, SLOTTED, 7/8-14 UNF
23	6	AN4-7A	BOLT
24	1	AN5-11A	BOLT
25	2	MS21044N10	NUT
26	6	MS21044N4	NUT
27	1	MS21044N5	NUT
28	2	MS24665-304	COTTER PIN
20	12	NAS1149F0463P	WASHER
30	2	NAS1149F0532P	WASHER
31	2	NAS561P6-12	COTTER PIN

MAIN GEAR ROTARY ACTUATOR ASSEMBLY

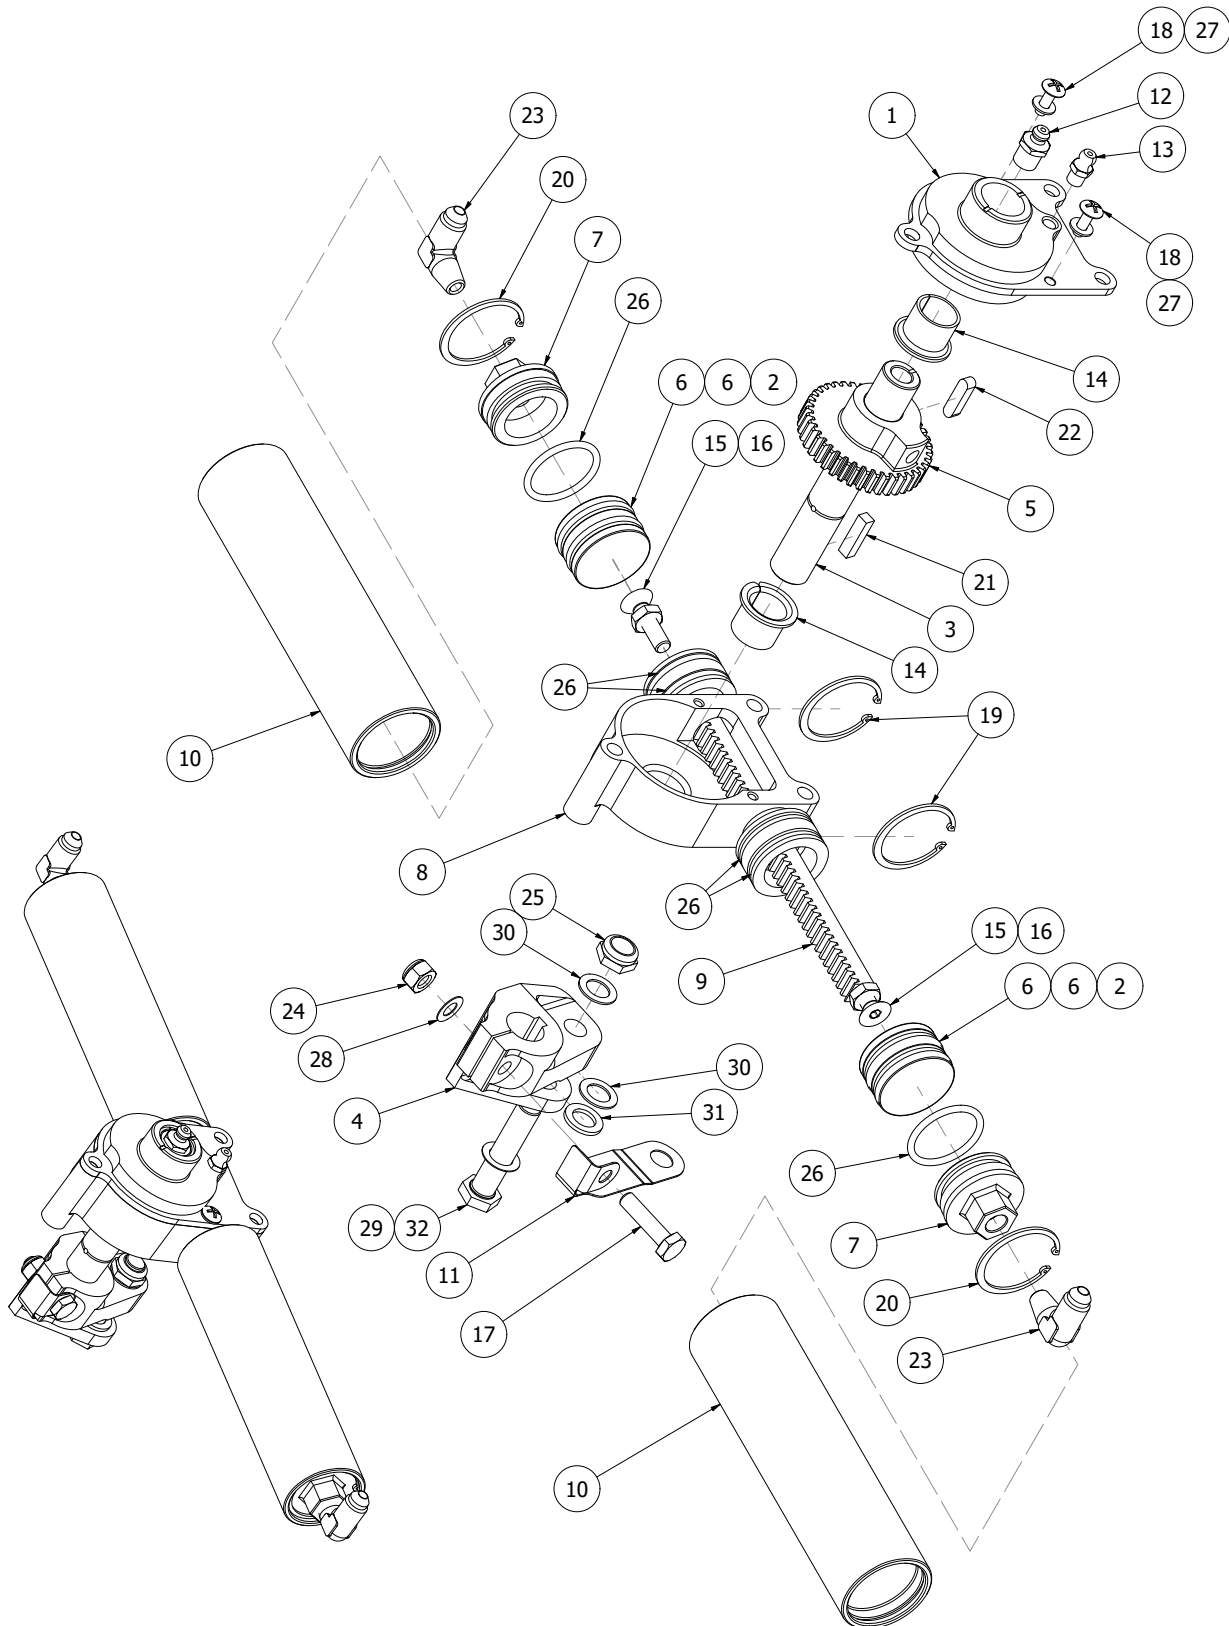

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1012500	ASSEMBLY, ROTARY ACTUATOR, MAIN GEAR
1	1	1005274	HOUSING TOP, ROTARY ACTUATOR, MAIN GEAR
2	2	1005276	PISTON, ROTARY ACTUATOR, MAIN GEAR
3	1	1005277	SHAFT, ROTARY ACTUATOR, MAIN GEAR
4	1	1005280	ARM, GEAR ACTUATOR, 3000 3450
5	1	1005282	SPUR GEAR, PDIA 2.00 BORE .625 MODIFIED
6	4	1005285	SEAL, U-CUP, .156 C/S, .937 ID, 1.250 OD
7	2	1012501	CYLINDER CAP, ROTARY ACTUATOR, MAIN GEAR
8	1	1012502	HOUSING, ROTARY ACTUATOR, MAIN GEAR
9	1	1012503	RACK, MOD, ROTARY ACTUATOR, MAIN GEAR
10	2	1012504	CYLINDER, ROTARY ACTUATOR, MAIN GEAR
11	1	1012868	RETAINER, ACTUATOR, MAIN GEAR, 3000/3450
12	1	1095K11	GREASE ZERK
13	1	1095K41	GREASE ZERK
14	2	10FDU10	FLANGED BUSHING
15	2	91253A309	SCREW, HEX DRIVE FLAT HEAD, 1/4-28 THREAD
16	2	92052A120	NUT, THIN, GRADE 8, 1/4-28 THREAD
17	1	AN4-10A	BOLT, 1/4-28, 0.5625 GRIP, UNDRILLED, STEEL
18	2	AN526C832R8	SCREW, MACHINE, TRUSS HEAD
19	2	MS16625-4125	RETAINING RING, INTERNAL
20	2	MS16625-4131	RETAINING RING, INTERNAL
21	1	MS20066-183	KEY, MACHINE-SQUARE, BOTH ENDS SQUARE
22	1	MS20068-119	KEY, MACHINE-SQUARE, BOTH ENDS ROUND
23	2	MS20822-4D	ELBOW
24	1	MS21044N4	NUT, LOCKING, REGULAR HEIGHT, 1/4-28 UNF
25	1	MS21083N6	NUT, LOCKING, LOW HEIGHT, 3/8-24 UNF
26	6	MS28775-121	"O" RING
27	2	NAS1149CN832R	WASHER, 0.174 ID, 0.032 THK, STAINLESS STEEL
28	1	NAS1149D0416J	WASHER, 0.265 ID, 0.016 THK, ALUMINUM
29	1	NAS1149F0616P	WASHER, 0.39 ID, 0.016 THK, STEEL
30	2	NAS1149F0632P	WASHER, 0.39 ID, 0.032 THK, STEEL
31	1	NAS1149F0663P	WASHER, 0.39 ID, 0.063 THK, STEEL
32	1	NAS6206-21	BOLT, 3/8-24 THREAD, 1.766" LENGTH, 1.312" GRIP


THIS PAGE INTENTIONALLY LEFT BLANK

SECTION 9
STRUTS, WIRES, STEPS, AND SPREADER BARS

CONTENTS

STRUTS, WIRES, AND SPREADER BARS102
STEPS INSTALLATION.....105

STRUTS, WIRES, AND SPREADER BARS

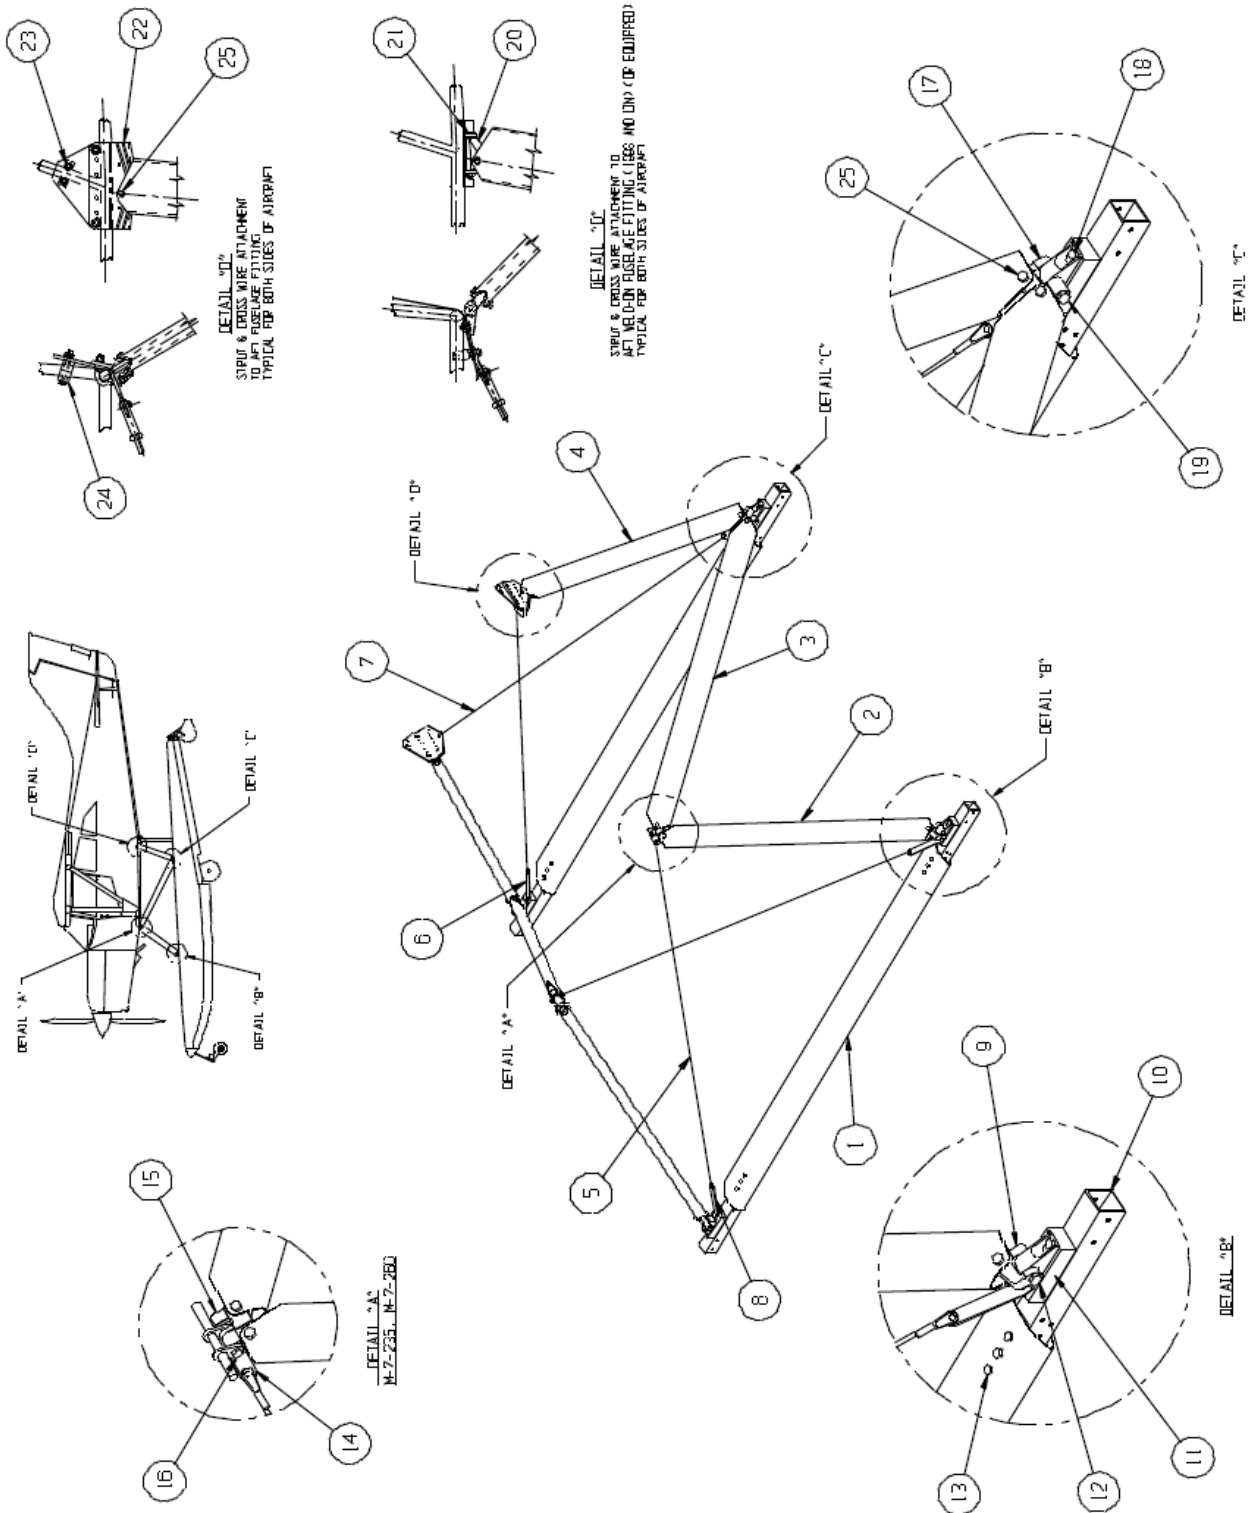


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	2	30A03000-031	ASS'Y - SPREADER BAR
2	2	30A02000-185	ASS'Y - FRONT STRUT
3	2	30A02000-186	ASS'Y - DIAGONAL STRUT
4	2	30A02000-187	ASS'Y - REAR STRUT
5	2	30A02000-211	ASS'Y - FWD - DRAG WIRE
	1	AN665-46RS *	CLEVIS "R"
	1	AN665-46LS *	CLEVIS "L"
	2	MS20392-4C17	PIN - CLEVIS
	2	MS24665-152	PIN - COTTER
	1	AN316C5L	CHECK NUT "L"
	1	AN316C5R	CHECK NUT "R"
	2	30A02000-191	ASS'Y - FWD - DRAG WIRE (M-7-235C, M-7-260C)
	1	AN665-61LS *	CLEVIS "L"
	1	AN665-46RS *	CLEVIS "R"
	1	AN316C5L	CHECK NUT "L"
	1	AN316C5R	CHECK NUT "R"
	2	MS20392-5C19	PIN - CLEVIS
	2	MS24665-301	PIN - COTTER
6	2	21A02462-008	LUG - REAR LOWER - WIRE PULL
7	2	30A02000-188	ASS'Y - REAR DRAG WIRE (WIPAIRE UPPER FITTINGS) SEE ITEM 20
	2	30A02000-210	ASS'Y - REAR DRAG WIRE (MAULE WELDED UPPER FITTINGS) SEE ITEM 22
8	2	21A02519-005	LUG - FWD LOWER WIRE PULL
	2	21A02154-008	WASHER
9	2	30A02204-009	FITTING - LOWER FRONT STRUT
10	2	30A03319-001	TUBE - SPREADER BAR - LH
	2	30A03319-002	TUBE - SPREADER BAR - RH
11	4	30A02219-003	FITTING - DECK
12	2	AN7-31A	BOLT - ATTACH
	2	NAS1149F0763P	WASHER
	2	MS21044N7	NUT
13	12	AN6-31A	BOLT - SPREADER BAR
	24	NAS1149FO663P	WASHER
	12	MS21044N6	NUT
14	2	21A02519-009	WIRE PULL - FWD UPPER
15	1	30A02196-003	FITTING - STRUT - UPPER - LH
	1	30A02196-004	FITTING - STRUT - UPPER - RH
16	2	AN6-40A	BOLT - FWD STRUT FITTING
	2	NAS1149F0663P	WASHER
	2	MS21044N6	NUT


ITEM	QTY	PART NO.	PART DESCRIPTION
17	1	30A02207-007	FITTING – STRUT – LOWER REAR - LH
	1	30A02207-006	FITTING – STRUT – LOWER REAR - RH
18	2	AN6-40A	BOLT
	4	NAS1149F0663P	WASHER
	2	MS21044N6	NUT
19	2	AN7-36A	BOLT
	4	NAS1149F0763P	WASHER
	2	MS21044N7	NUT
20	1	30A02204-011	FITTING – REAR UPPER - LH
	1	30A02204-010	FITTING – REAR UPPER - RH
21	2	AN6-31A	BOLT
	4	NAS1149F0663P	WASHER
	2	MS21044N6	NUT
22	1	30A02000-183	ASS'Y – REAR FITTING (ALT) LH
	1	30A02000-184	ASS'Y – REAR FITTING (ALT) RH
23	4	AN4-20A	BOLT – CLAMP ATTACH
	8	NAS1149F0463P	WASHER
	4	MS21044N4	NUT
24	2	30A02195-007	CLAMP
25	12	AN6-20A	BOLT (FLT S/N 106 AND DOWN)
	12	AN6-22A	BOLT (FLT S/N 107 AND UP)
	24	NAS1149F0663P	WASHER
	12	MS21044N6	NUT

"S" DENOTES STAINLESS STEEL


STEPS INSTALLATION

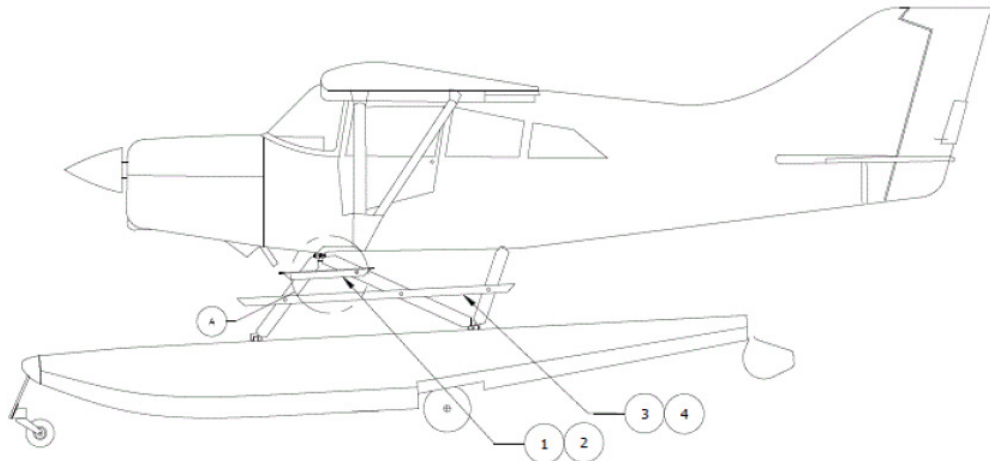

TYP. INSTALLATION LEFT & RIGHT SIDE

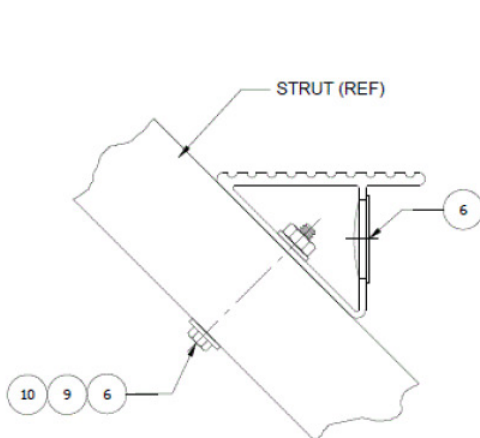

INSTALLATION OF STEPS TO STRUTS
(CENTER STRUT)

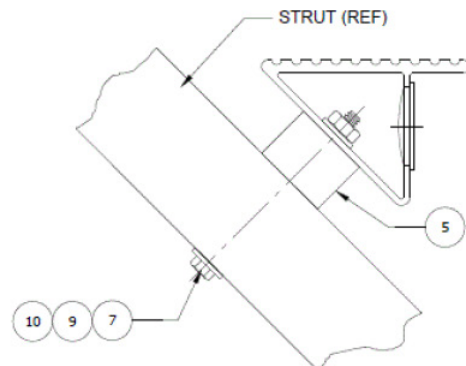

INSTALLATION OF STEPS TO STRUTS
(FWD & AFT STRUT)

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1009950	STEP, FUELING, LH, MAULE
2	1	1009951	STEP, FUELING, RH, MAULE
3	1	23A02369-036	STEP, RH, MAULE
4	1	23A02369-037	STEP, LH, MAULE
5	4	30A02602-010	SPACER
6	6	AN3-20A	BOLT
7	4	AN3-26A	BOLT
8	10	BPF	PLUG
9	10	MS21044N3	NUT
10	10	NAS1149F0332P	WASHER

THIS PAGE INTENTIONALLY LEFT BLANK






SECTION 10

HYDRAULIC SYSTEM

CONTENTS

HYDRAULIC SYSTEM INSTALLATION POST SERVICE LETTER 222	108
HYDRAULIC SYSTEM INSTALLATION PRE SERVICE LETTER 222	110
HYDRAULIC PUMP ASSEMBLY POST SERVICE LETTER 222	112
HYDRAULIC PUMP SUPPORT PLATE ASSEMBLY POST SERVICE LETTER 222.....	115
HYDRAULIC PUMP ASSEMBLY PRE SERVICE LETTER 222	117
HYDRAULIC PUMP (AFT FUSELAGE) SCHEMATIC	120
HYDRAULIC PUMP OVERVIEW POST SERVICE LETTER 222	122
HYDRAULIC PUMP OVERVIEW PRE SERVICE LETTER 222	124


HYDRAULIC SYSTEM INSTALLATION POST SERVICE LETTER 222

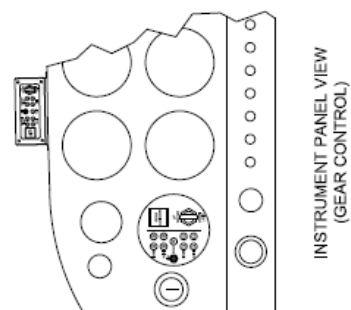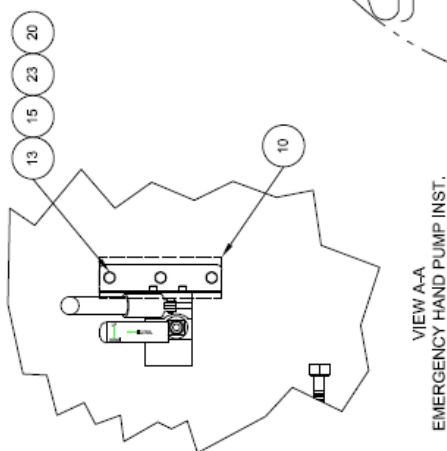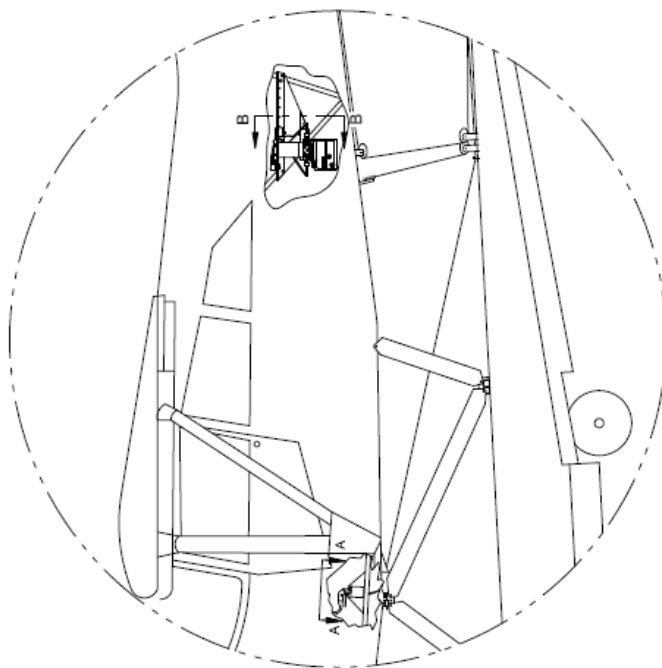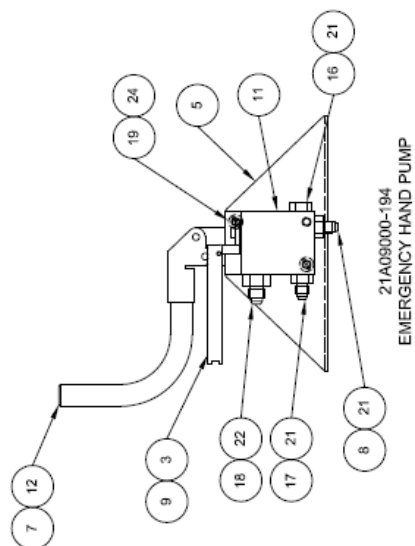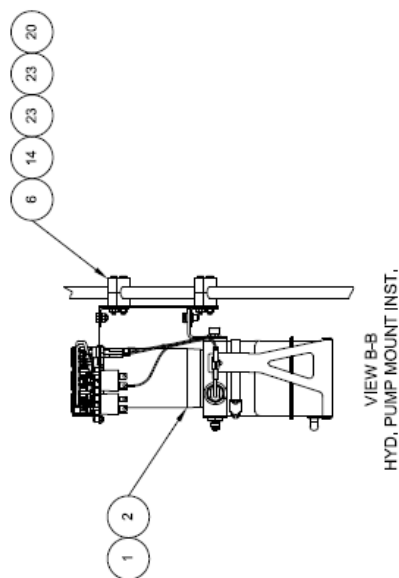

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	1011611	ASSEMBLY, HYDRAULIC POWER PACK, 12VDC
2	1	1011612	ASSEMBLY, HYDRAULIC POWER PACK, 24VDC
3	1	12A3-7379-2	PLACARD, EMERGENCY HAND PUMP
4	1	21A09000-194	ASSEMBLY, HAND PUMP, COMPLETE
5	1	21A09156-129	BRACKET, PUMP ATTACH
6	6	21A09215-002	CLAMP, MOUNTING
7	1	21A09396-001	HANDLE, HAND PUMP
8	1	21A09746-001	UNION
9	1	21A12000-052	ASSEMBLY, HANDLE
10	1	30A12000-050	PLATE, FLOORBOARD, REINFORCEMENT
11	1	642873	HAND PUMP (ONLY)
12	1	9283K13	CAP PLUG
13	3	AN3-7A	BOLT, 10-32, 0.500 GRIP, UNDRILLED, STEEL
14	6	AN3-14A	BOLT, 10-32 THREAD, 1-1/8" GRIP, 1-17/32" LENGTH
15	3	AN970-3	WASHER, .203ID, .875OD, .063 THK
16	1	AN814-4D	PLUG
17	1	AN815-4D	UNION
18	1	AN919-6D	UNION
19	2	MS16997-77	SOCKET HEAD CAP SCREW
20	9	MS21044N3	NUT, LOCKING, REGULAR HEIGHT, 10-32 UNF
21	3	MS28775-012	O-RING, HYDRAULIC PACKING, .364 ID
22	1	MS28775-014	O-RING, HYDRAULIC PACKING, .489 ID
23	15	NAS1149F0363P	WASHER, 0.203 ID, 0.063 THK, STEEL
24	2	NAS1149F0563P	WASHER, 0.328 ID, 0.063 THK, STEEL


HYDRAULIC SYSTEM INSTALLATION PRE SERVICE LETTER 222

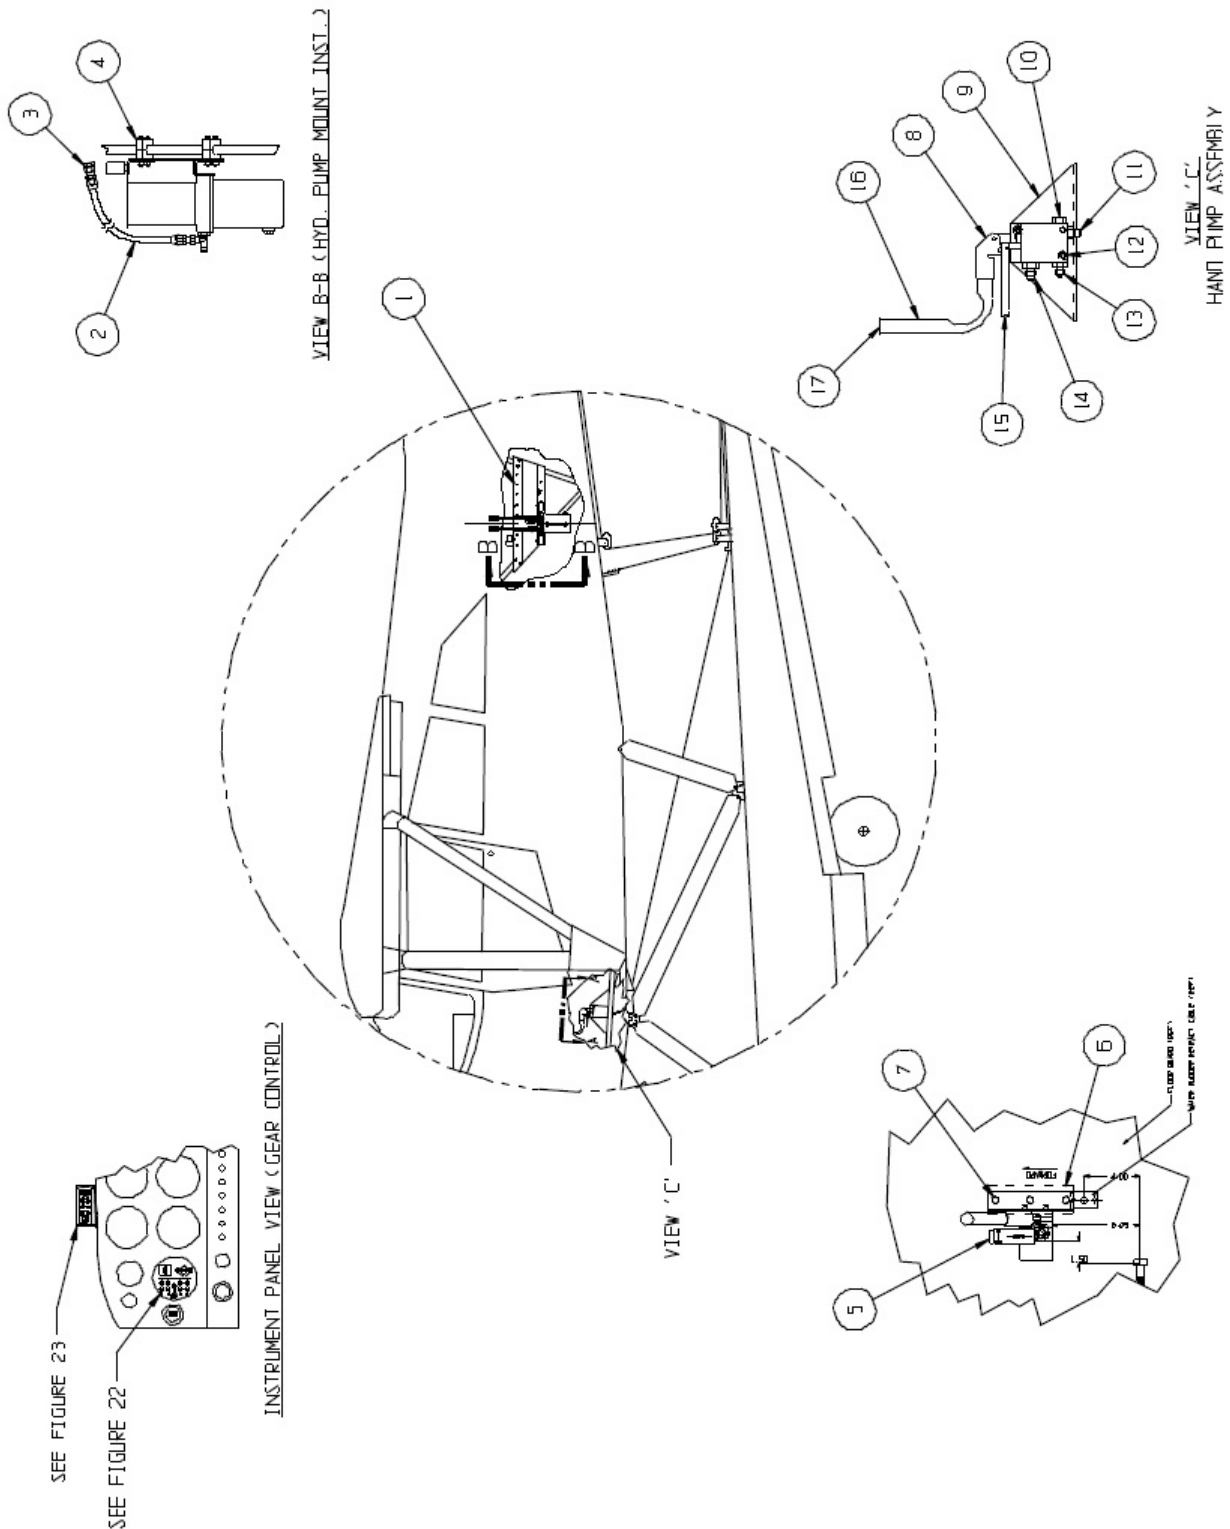


PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	23A09000-225	ASS'Y – HYDRAULIC PUMP (12V)
	1	23A09000-276	ASS'Y – HYDRAULIC PUMP (24V)
2	2	8A09000-048	ASS'Y – ACCUMULATOR HOSE
3	2	AN806-4D	PLUG
4	6	21A09215-002	CLAMP - MOUNTING
	6	AN3-14A	BOLT
	12	NAS1149F0363P	WASHER
	6	MS21044N3	NUT
5	1	21A09000-194	ASS'Y – HAND PUMP (COMPLETE)
6	1	30A12000-050	PLATE – FLOORBOARD - REINFORCEMENT
7	3	AN3-7A	BOLT – BRACKET ATTACH
	3	AN970-3	WASHER
	3	NAS1149F0363P	WASHER
	3	MS21044N3	NUT
8	1	642873	HAND PUMP (ONLY)
9	1	21A09156-129	BRACKET – PUMP MOUNT
10	1	AN814-4D	PLUG
	1	MS28775-012	“O” RING
11	1	21A09746-001	UNION
	1	MS28775-012	“O” RING
12	2	MS16997-77	CAP SCREW - ATTACH
	2	NAS1149F0563P	WASHER
13	1	AN815-4D	UNION
	1	MS28775-012	“O” RING
14	1	AN919-6D	UNION
	1	MS28775-014	“O” RING
15	1	21A12000-052	ASS'Y - HANDLE
	1	12A3-7379-2	PLACARD
	1	412169	PLACARD
16	1	21A09396-001	HANDLE
17	1	9283K13	CAP PLUG

HYDRAULIC PUMP ASSEMBLY POST SERVICE LETTER 222

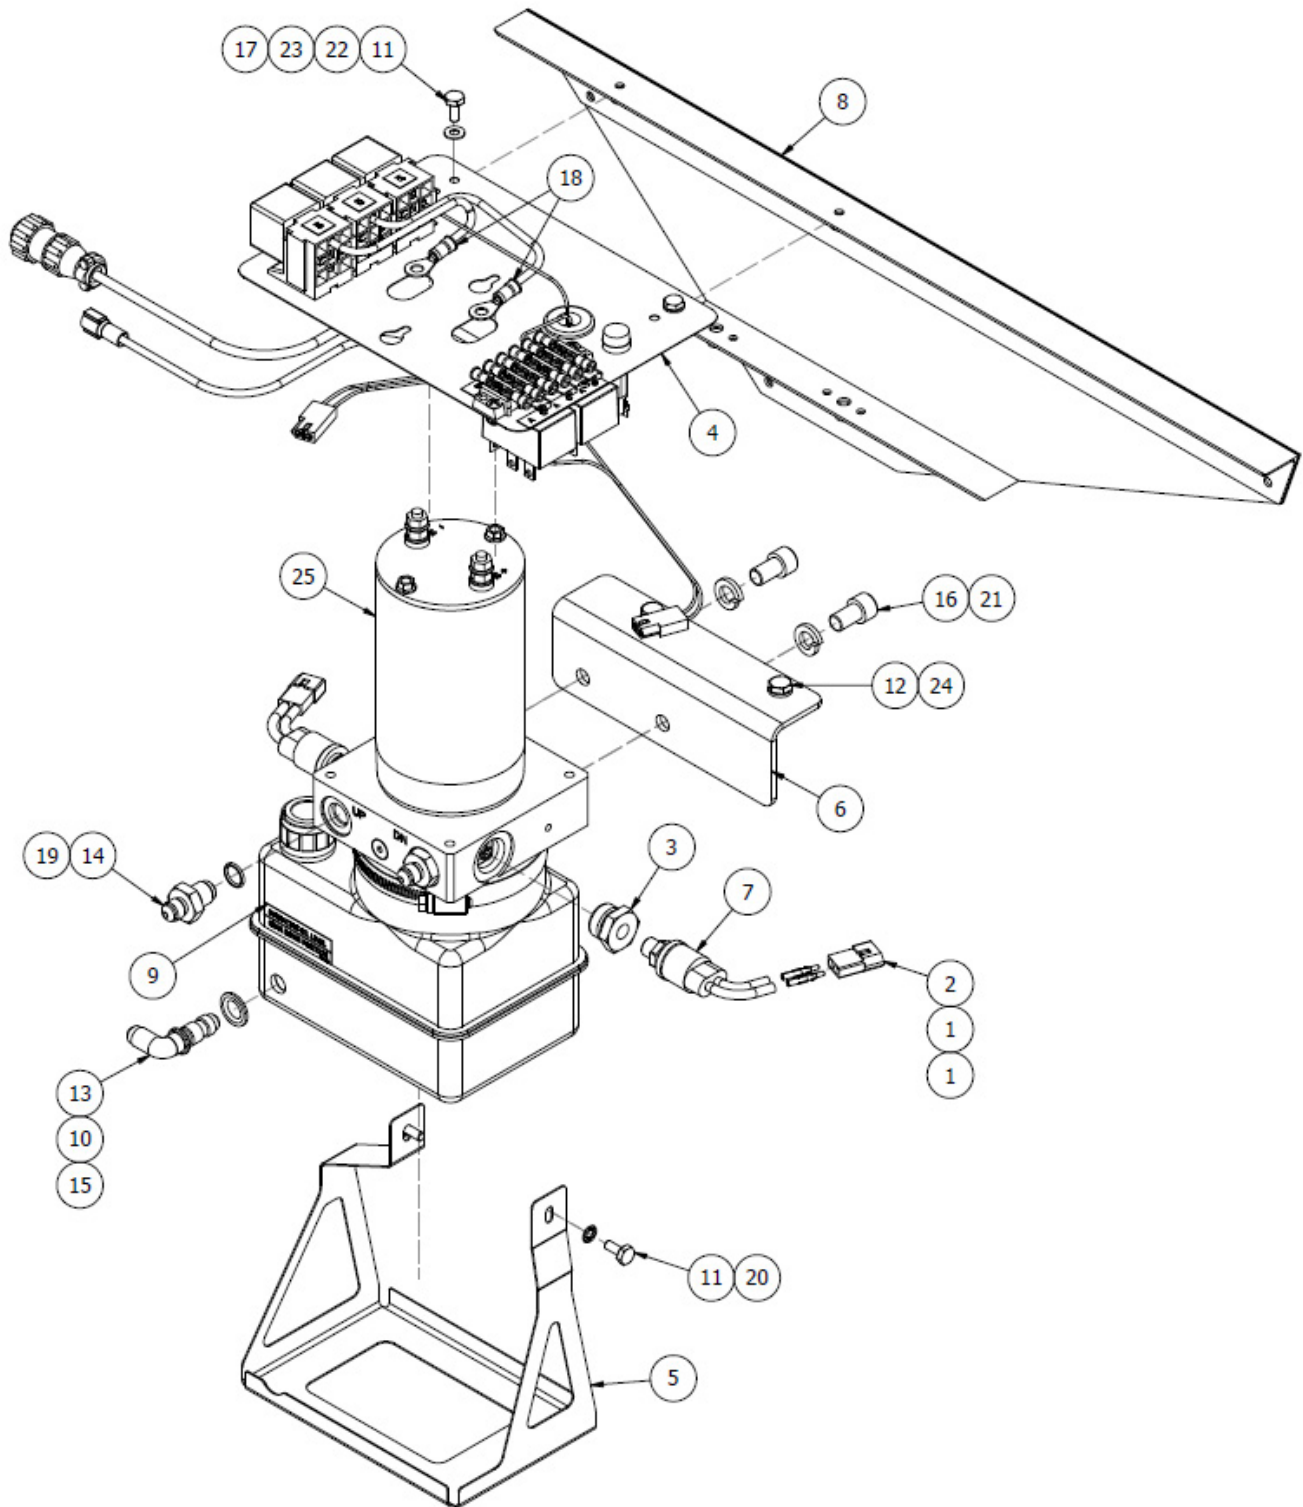


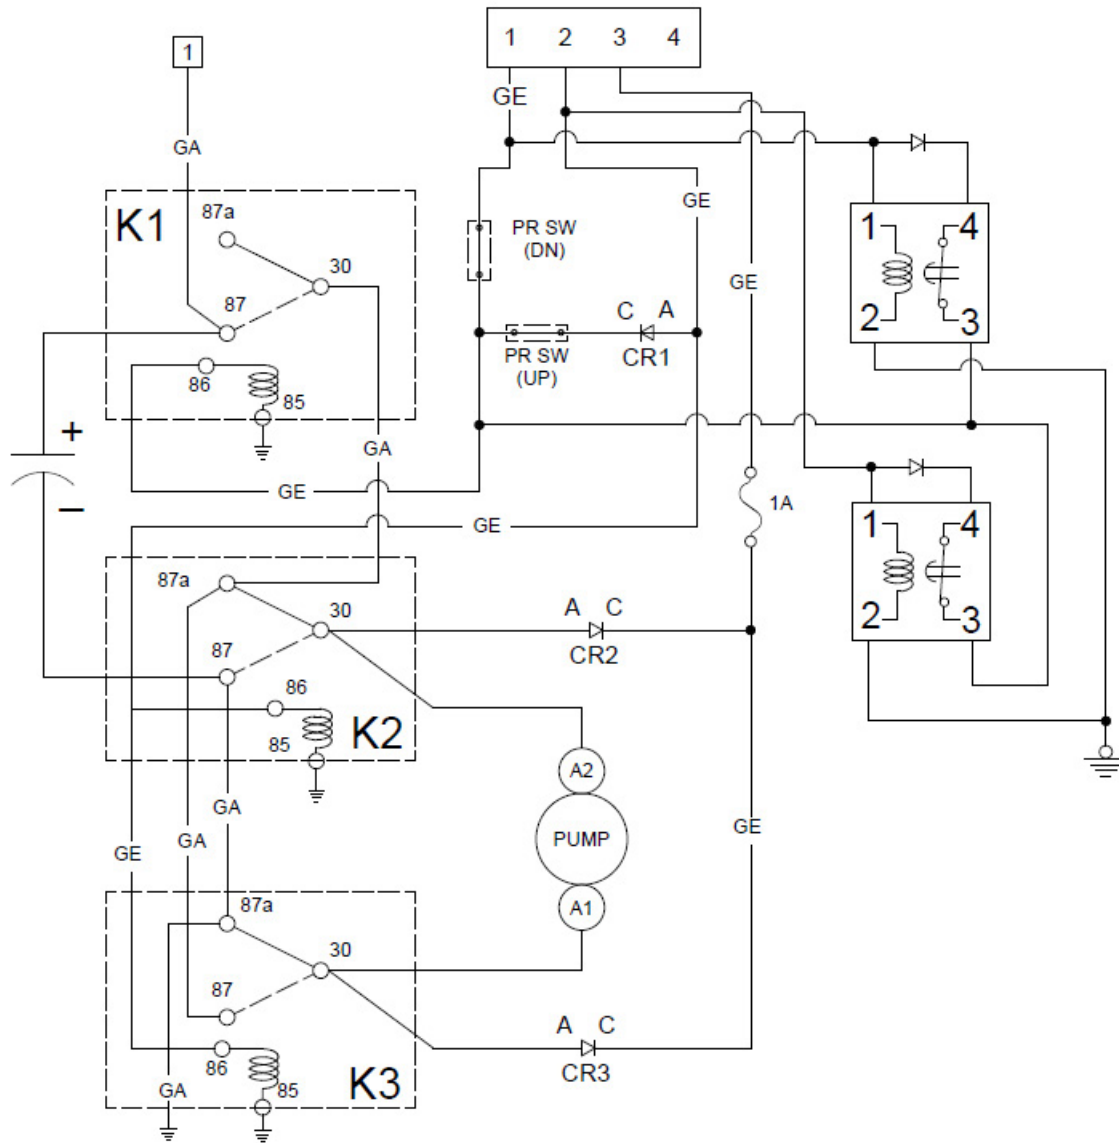

POWER PACK SCHEMATIC
(RELAYS SHOWN IN RELAXED CONDITION)
1. GE WIRES 20 GA
2. GA WIRES 12 GA


ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1011611	ASSEMBLY, HYDRAULIC POWER PACK, 12VDC
-	1	1011612	ASSEMBLY, HYDRAULIC POWER PACK, 24VDC
1	4	02-09-2118	PIN, CRIMP MALE, 1/8" DIA
2	2	03-09-2022	CONNECTOR PLUG, FEMALE
3	2	1011062	ASSEMBLY, PLUG, PRESSURE SWITCH PORT
4 (12V)	1	1011449	ASSEMBLY, SUPPORT PLATE, HYDRAULIC PUMP, 12V
4 (24V)	1	1011547	ASSEMBLY, SUPPORT PLATE, HYDRAULIC PUMP, 24V
5	1	1011542	SUPPORT, HYDRAULIC RESERVOIR, SIDE MOUNT
6	1	1011610	ANGLE, MOUNT, LOWER
7	2	20PS001EB 700W500W	PRESSURE SWITCH
8	1	23A09000-224	ASSEMBLY, BRACKET, HYDRAULIC PUMP
9	1	6A3-2199	PLACARD, OIL LEVEL
10	1	93783A032	SEALING WASHER
11	4	AN3-3A	BOLT, 10-32, 0.0625 GRIP, UNDRILLED, STEEL
12	2	AN4-5A	BOLT, 1/4-28, 0.1875 GRIP, UNDRILLED, STEEL
13	1	AN833-4D	FITTING, HYDRAULIC, 90 DEGREES ELBOW
14	2	AN919-3D	FITTING, REDUCER
15	1	AN924-4D	JAM NUT
16	2	MS16997-96	SOCKET HEAD CAP SCREW
17	2	MS21044N3	NUT, LOCKING, REGULAR HEIGHT, 10-32 UNF
18	2	MS25036-157	RING TERMINAL, #10 STUD, 10-12 AWG, YELLOW
19	2	MS28775-013	"O" RING, HYDRAULIC
20	2	MS35333-39	STAR WASHER
21	2	MS35338-46	WASHER, SPLIT
22	2	NAS1149F0332P	WASHER, 0.203 ID, 0.032 THK, STEEL
23	2	NAS1149F0363P	WASHER, 0.203 ID, 0.063 THK, STEEL
24	2	NAS1149F0463P	WASHER, 0.265 ID, 0.063 THK, STEEL
25 (12V)	1	YBZS- C0.63W1T100K/ UVZOT2	HYDRAULIC POWER PACK, 12VDC
25 (24V)	1	YBZS- C0.63W2T100K/ UVZOT2	HYDRAULIC POWER PACK, 24VDC


HYDRAULIC PUMP SUPPORT PLATE ASSEMBLY POST SERVICE LETTER 222

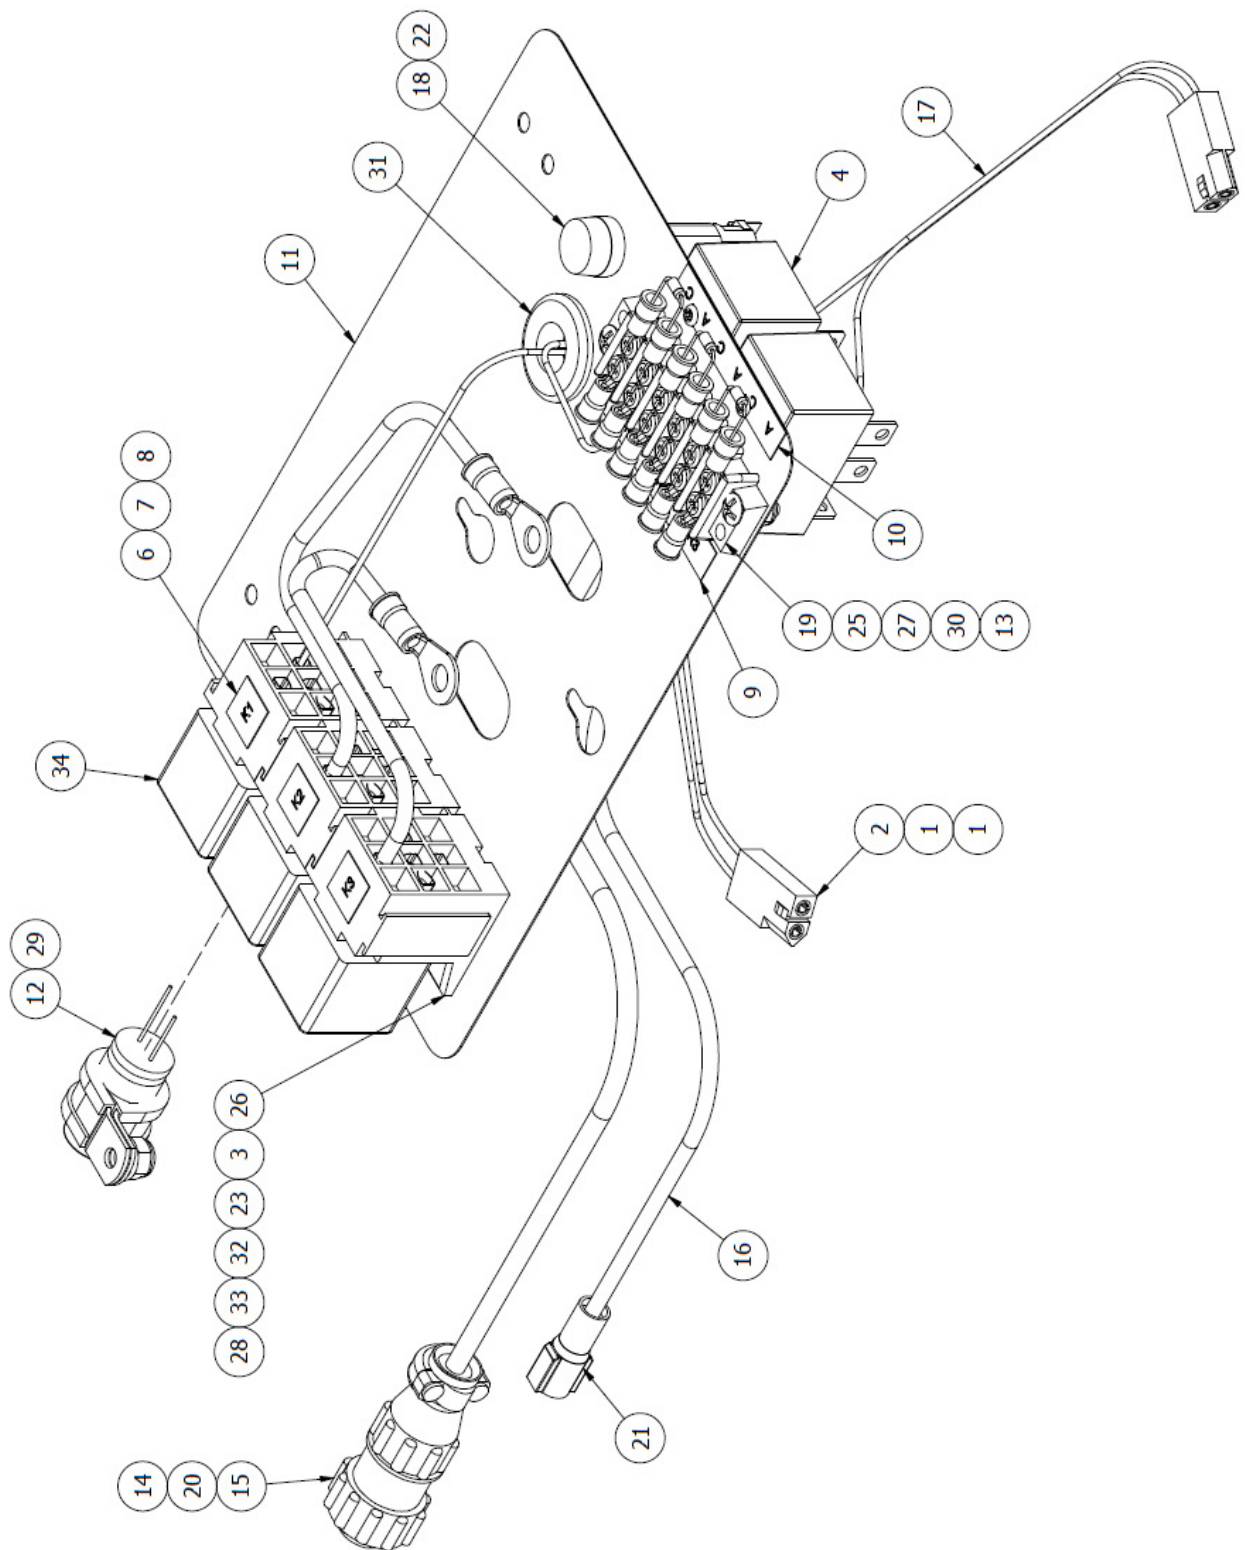

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	1011449	ASSEMBLY, SUPPORT PLATE, HYDRAULIC PUMP, 12V
-	1	1011547	ASSEMBLY, SUPPORT PLATE, HYDRAULIC PUMP, 24V
1	4	02-09-1104	PIN, CRIMP FEMALE, 1/8" DIA
2	2	03-09-1022	CONNECTOR PLUG, MALE, 2 CONN.
3	14	1-901-355-917	TERMINAL
4 (12V)	1	1005042	TIMER RELAY HARNESS
4 (24V)	1	1005043	TIMER RELAY HARNESS
6	1	1009143-01	PLACARD, K1 INDICATOR
7	1	1009143-02	PLACARD, K2 INDICATOR
8	1	1009143-03	PLACARD, K3 INDICATOR
9	1	1009144-01	PLACARD, CR INDICATOR
10	1	1009144-02	PLACARD, AC INDICATOR
11	1	1011448	TOP PLATE, HYDRAULIC PUMP
12	1	1011798	ASSEMBLY, CAPACITOR
13	3	1N4004	DIODE, 2-1/2"
14	2	206062-3	CLAMP, CABLE, CPC SIZE 11
15	1	206429-1	PLUG, MAL, CPC SIZE 1, 4 PIN
16	6 FT	22759-16-12-9	WIRE, 12 AWG, WHITE
17	10 FT	22759-16-20-9	WIRE, 20 AWG, WHITE
18	1	3453LF2A	FUSE HOLDER
19	1	6-140	TERMINAL BLOCK, 6 CONNECTOR
20	3	66103-4	PIN, CRIMP SOCKET, 24-20G
21	1	73M-250-32-NL	CONNECTOR, MALE, 10-12 AWG, FULLY INSULATED
22	1	AGC-1	FUSE, 250V, (S2565-1)
23	2	AN3-3A	BOLT, 10-32, 0.0625 GRIP, UNDRILLED, STEEL
24	1	AN3-5A	BOLT, 10-32, 0.25 GRIP, UNDRILLED, STEEL
25	2	AN526C632R8	SCREW, MACHINE, TRUSS HEAD
26	3	BR05-FW	SOCKET, 5 PRONG, PLASTIC
27	2	MS21044N06	NUT, LOCKING, REGULAR HEIGHT, 6-32 UNC
28	3	MS21044N3	NUT, LOCKING, REGULAR HEIGHT, 10-32 UNF
29	1	MS21919WDG10	CLAMP, LOOP, CUSHIONED, 5/8 TUBE OD
30	12	MS25036-102	RING TERMINAL, #6 STUD, 16-22 AWG, RED
31	1	MS35489-14	GROMMET, RUBBER
32	3	NAS1149F0332P	WASHER, 0.203 ID, 0.032 THK, STEEL
33	3	NAS1149F0363P	WASHER, 0.203 ID, 0.063 THK, STEEL
34 (12V)	3	V23234-A0001-X032	RELAY, 12V, 5 PRONG
34 (24V)	3	0-332-209-211	RELAY, 24V, 5 PRONG

HYDRAULIC PUMP ASSEMBLY PRE SERVICE LETTER 222

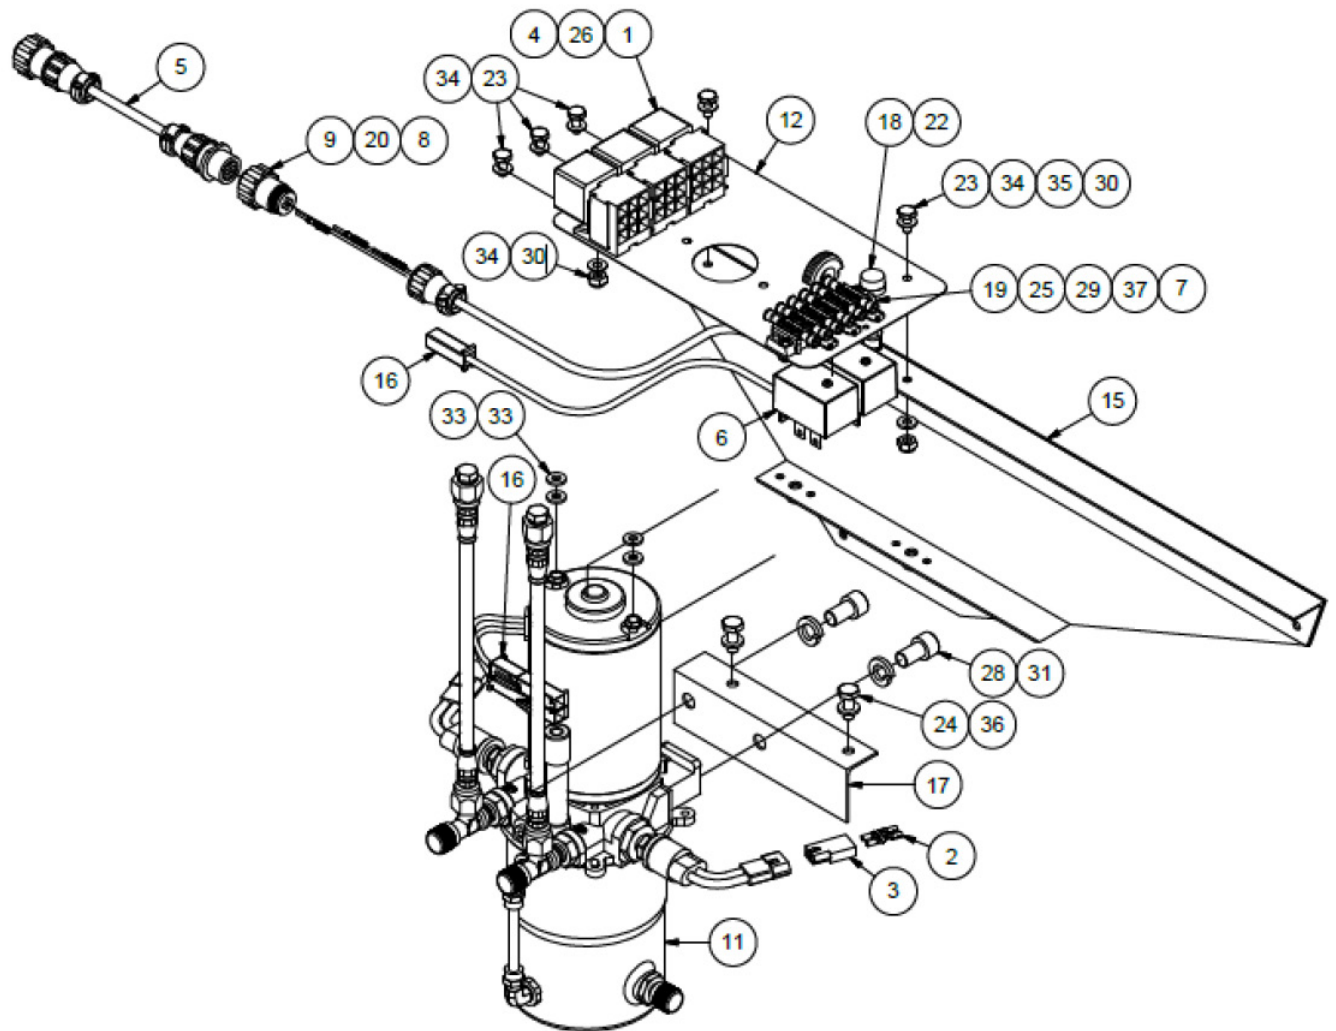

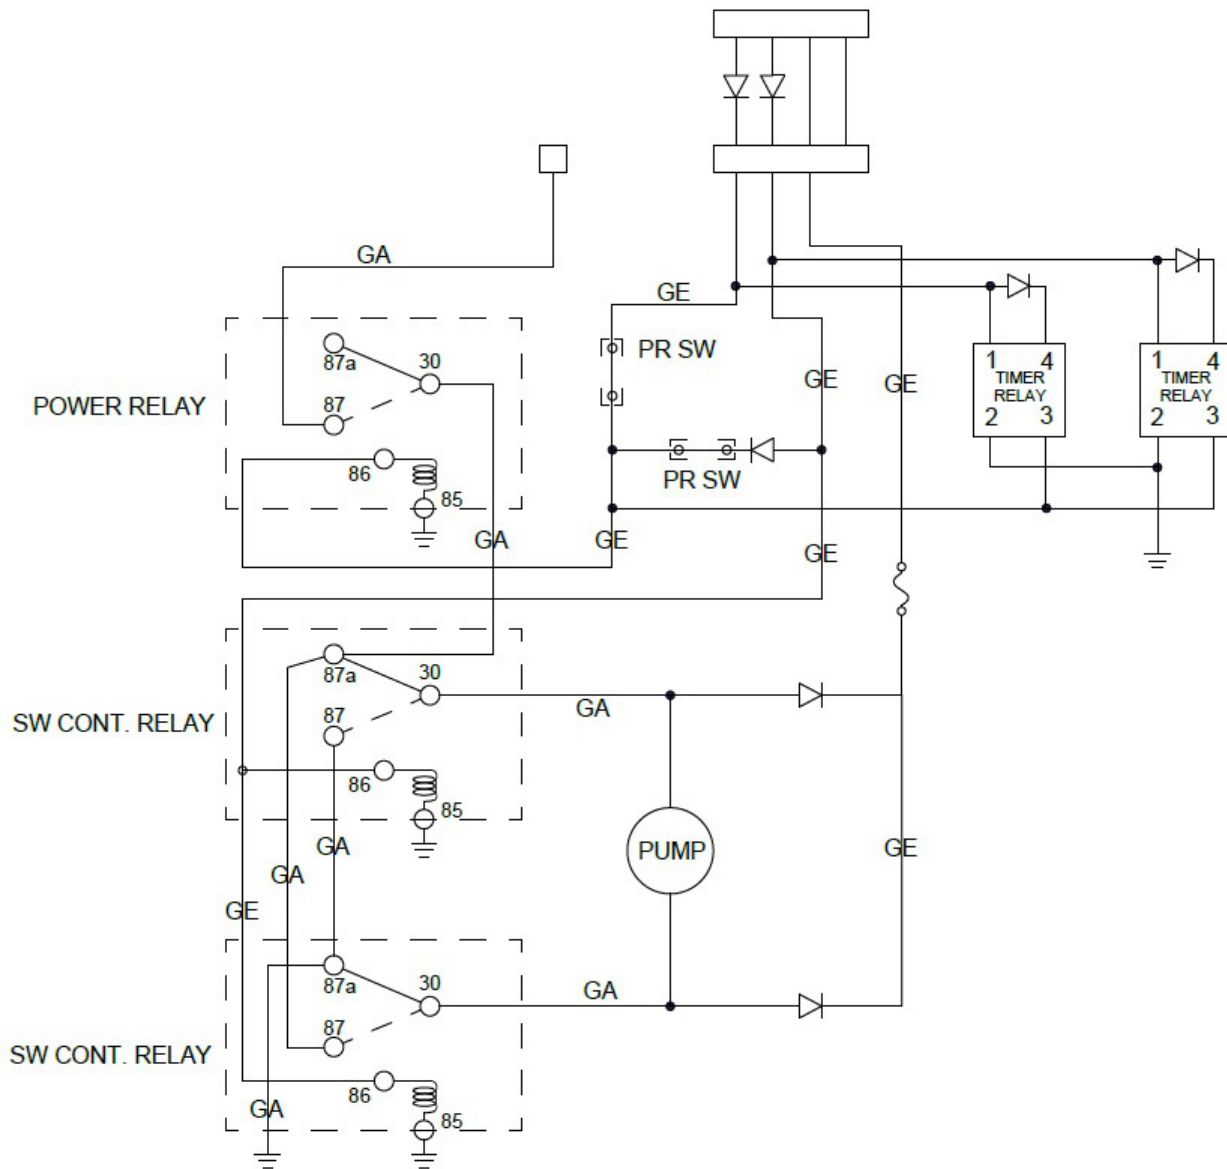


ELECTRICAL SCHEMATIC
PUMP WIRING SCHEMATIC
(RELAYS SHOWN IN RELAXED CONDITION)
1. GE WIRES 20 GA
2. GA WIRES 12 GA

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	3	0-332-209-137	RELAY, 12V, 5 PRONG
	3	0-332-209-211	RELAY, 24V, 5 PRONG
2	4	02-09-1104	PIN, CRIMP FEMALE, 1/8" DIA
3	2	03-09-1022	CONNECTOR PLUG, MALE, 2 CONN.
4	14	1-901-355-917	TERMINAL
5	1	1004949	CABLE, DIODE ADAPTOR
6	1	1005043	TIMER RELAY HARNESS
7	3	1N4004	DIODE, 2-1/2"
8	2	206062-3	CLAMP, CABLE, CPC SIZE 11
9	1	206429-1	PLUG, MALE, CPC SIZE 1, 4 PIN
10	1	206430-2	CPC FREE HANG, 4 PIN, FEMALE
11	1	21A09000-225	ASSEMBLY, HYDRAULIC PUMP, 12V
	1	21A09000-282	ASSEMBLY, HYDRAULIC PUMP, 24V
12	1	21A09010-013	PLATE, SUPPORT, HYDRAULIC PUMP
13	6 FT	22759-16-12-9	WIRE, 12 AWG, WHITE
14	10.1 FT	22759-16-20-9	WIRE, 20 AWG, WHITE
15	1	23A09000-224	ASSEMBLY, BRACKET, HYDRAULIC PUMP
16	1	73F-250-32-NL	CONNECTOR, FEMALE, 10-12 AWG
	1	73M-250-32-NL	CONNECTOR, MALE, 10-12 AWG
17	1	30A09352-041	ANGLE, MOUNTING, HYDRAULIC PUMP
18	1	3453LF2A	FUSE HOLDER
19	1	6-140	TERMINAL BLOCK, 6 CONNECTOR
20	3	66103-4	PIN, CRIMP SOCKET, 24-20G
21	3	66105-4	CRIMP SOCKET, FEMALE
22	1	AGC-1	FUSE, 250V, (S2565-1)
23	5	AN3-3A	BOLT
24	2	AN4-5A	BOLT
25	2	AN526-632R8	SCREW, MACHINE, TRUSS HEAD
26	3	BR05FW	SOCKET, 5 PRONG, PLASTIC
27	1.5 FT	HS105-3/16-0	HEAT SHRINK, TUBING, BLACK
28	2	MS16997-96	SOCKET HEAD CAP SCREW
29	2	MS21044N06	NUT
30	5	MS21044N3	NUT
31	2	MS35338-46	WASHER, SPLIT
32	1	MS35489-14	GROMMET, RUBBER
33	4	NAS1149D0363J	WASHER
34	8	NAS1149F0332P	WASHER
35	2	NAS1149F0363P	WASHER
36	2	NAS1149F0463P	WASHER
37	12	R-2	RING CONNECTOR


HYDRAULIC PUMP (AFT FUSELAGE) SCHEMATIC

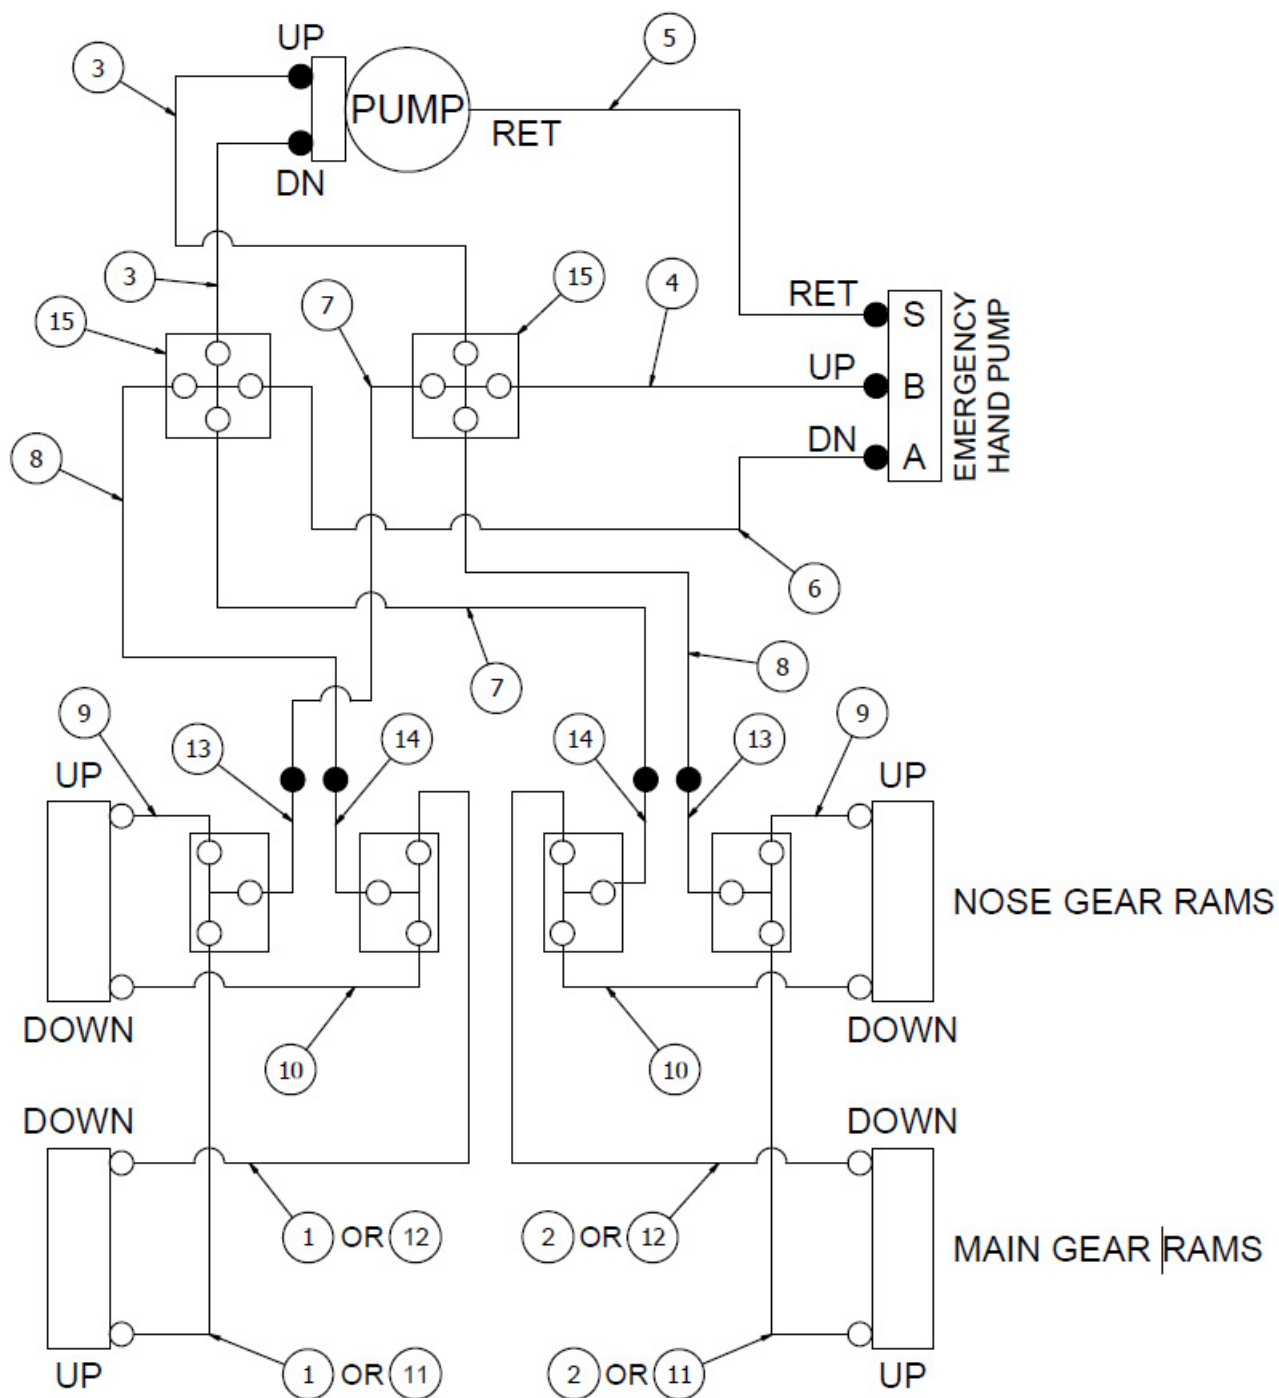

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	2	1008436	ASSEMBLY, HYDRAULIC HOSE, FLOAT TEE TO MAIN, ALUMINUM GEAR, LEFT FLOAT
2	2	1008437	ASSEMBLY, HYDRAULIC HOSE, FLOAT TEE TO MAIN, ALUMINUM GEAR, RIGHT FLOAT
3	2	21A09000-204	ASSEMBLY, HYDRAULIC HOSE, PUMP TO 4 WAY CROSS
4	1	21A09000-207	ASSEMBLY, HYDRAULIC HOSE, 4 WAY CROSS TO HAND PUMP "A"
5	1	21A09000-208	ASSEMBLY, HYDRAULIC HOSE, RESERVOIR TO HAND PUMP "S"
6	1	21A09000-223	ASSEMBLY, HYDRAULIC HOSE, 4 WAY CROSS TO HAND PUMP "B"
7	2	21A09000-262	ASSEMBLY, HYDRAULIC HOSE, 4 WAY CROSS TO FLOAT
8	2	21A09000-263	ASSEMBLY, HYDRAULIC HOSE, 4 WAY CROSS TO FLOAT
9	2	30A09000-268	ASSEMBLY, HYDRAULIC HOSE, FLOAT TEE TO NOSE UP
10	2	30A09000-269	ASSEMBLY, HYDRAULIC HOSE, FLOAT TEE TO NOSE DOWN
11	2	30A09000-270	ASSEMBLY, HYDRAULIC HOSE, FLOAT TEE TO MAIN UP, STEEL GEAR
12	2	30A09000-271	ASSEMBLY, HYDRAULIC HOSE, FLOAT TEE TO MAIN DOWN, STEEL GEAR
13	2	30A09000-272	ASSEMBLY, HYDRAULIC HOSE, FLOAT UP TEE TO FLOAT DECK
14	2	30A09000-273	ASSEMBLY, HYDRAULIC HOSE, FLOAT DOWN TEE TO FLOAT DECK
15	2	AN827-4D	CROSS FITTING, FLARED TUBE, 1/4" TUBE, 7/16-20 THREAD


HYDRAULIC PUMP OVERVIEW POST SERVICE LETTER 222

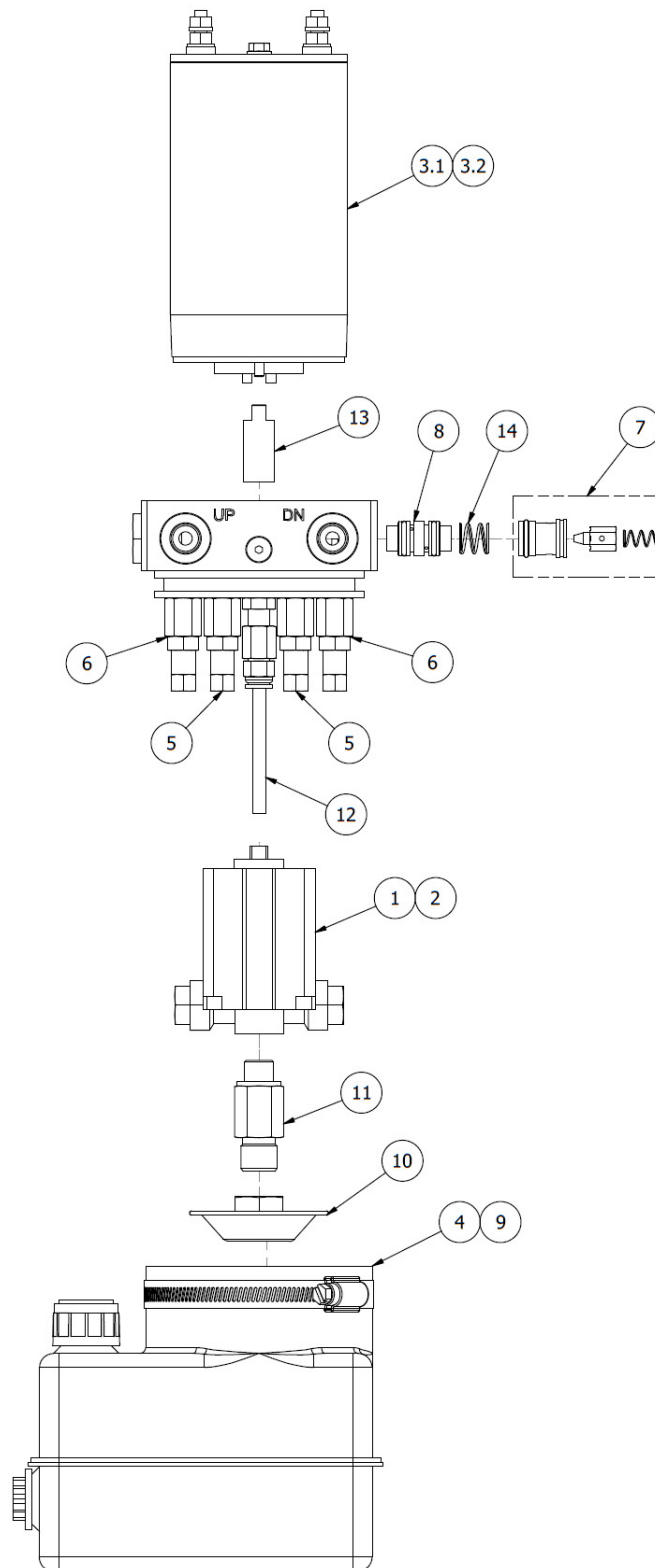

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	202-0003	BI-DIRECTIONAL PUMP, 0.64 ML/R
2	1	299-0008	SEAL KIT, BI-DIRECTIONAL GEAR PUMP
3.1	1	610-0010	DC MOTOR, 12V, .8KW
3.2	1	610-0017	DC MOTOR, 24V, .8 KW
4	1	622-0016	RESERVOIR, 1 QT.
5	2	631-0005	PRESSURE RELIEF VALVE
6	2	631-0006	THERMAL RELIEF VALVE
7	2	632-0004	ASSEMBLY, PILOT OPERATED CHECK VALVE
8	1	637-0024	SHUTTLE VALVE
9	1	681-0050	CLAMP, HOSE, 1 LITER PLASTIC RESERVOIR
10	1	682-0019	FILTER, PICKUP TUBE, HYDRAULIC PUMP
11	1	682-0055	SUCTION HEX TUBE
12	1	682-0056	RETURN TUBE
13	1	683-0011	COUPLING, MOTOR TO PUMP
14	2	685-0012	SPRING, SHUTTLE VALVE
15	1	687-0001	SEAL KIT, RESERVIOR O-RING, PILOT OPERATED RELIEF VALVE O-RING, THERMAL AND PRESSURE RELIEF VALVE O-RING (NOT SHOWN)

HYDRAULIC PUMP OVERVIEW PRE SERVICE LETTER 222

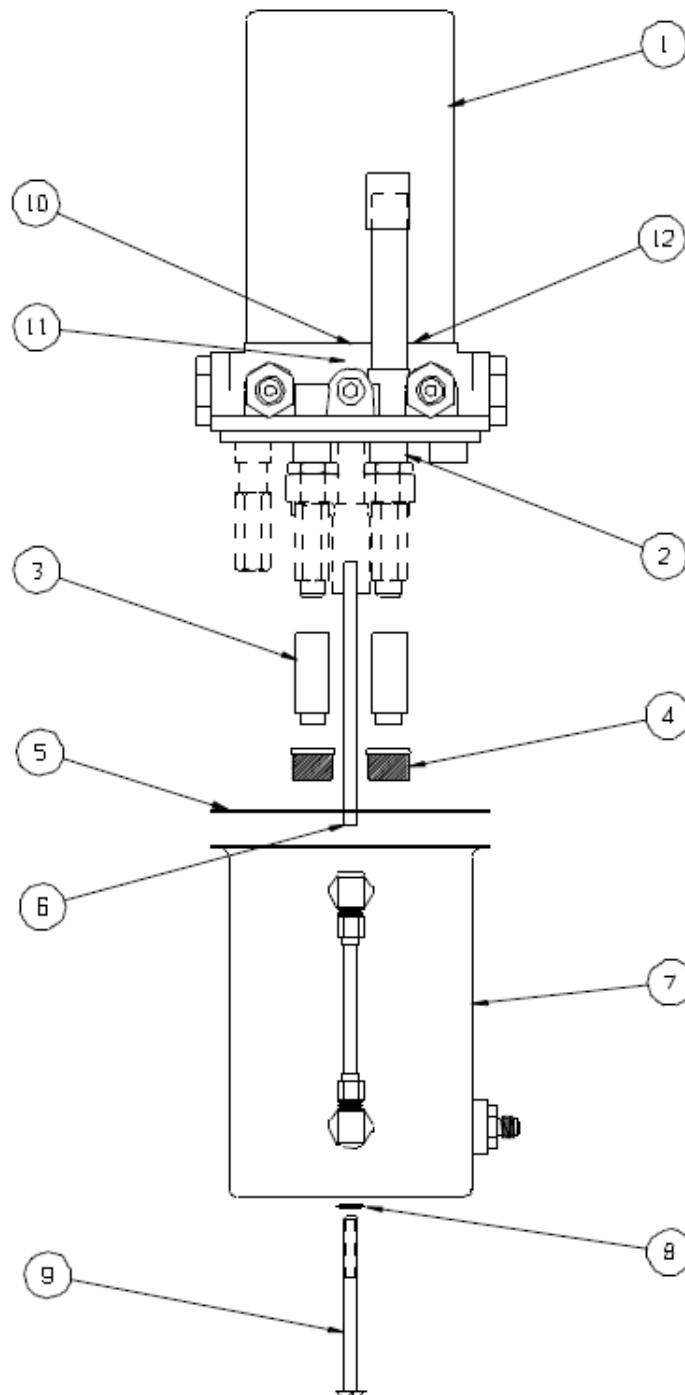

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	1	21A09000-215	HYDRAULIC PUMP ASS'Y (12V)
	1	21A09000-282	HYDRAULIC PUMP ASS'Y (24V)
	1	640661	MOTOR (12V)
	1	641131	MOTOR (24V)
2	1	634873	BASIC PUMP
3	2	362136	TUBE EXTENSIONS
4	2	410521*	FILTER
5	1	410578*	SEAL RESERVIOR
6	1	365047	RETURN TUBE
7	1	775260	RESERVIOR – GAUGE ASS'Y
8	1	415067	SEAL THREAD
9	1	409715*	SCREW – RESERVIOR ATTACH
10	1	361183*	COUPLING – MOTOR TO PUMP
11	1	410512	SEAL – PUMP SHAFT
12	1	405673	“O” RING MOTOR TO BASE

* Reference Wipaire drawing 1011065 for alternate part numbers.


THIS PAGE INTENTIONALLY LEFT BLANK

SECTION 11
ELECTRICAL

CONTENTS

ELECTRICAL SCHEMATIC POST SERVICE LETTER 222.....128
ELECTRICAL SCHEMATIC PRE SERVICE LETTER 222130
GEAR CONTROL (ROUND)132
GEAR CONTROL (RECTANGLE)134


ELECTRICAL SCHEMATIC POST SERVICE LETTER 222

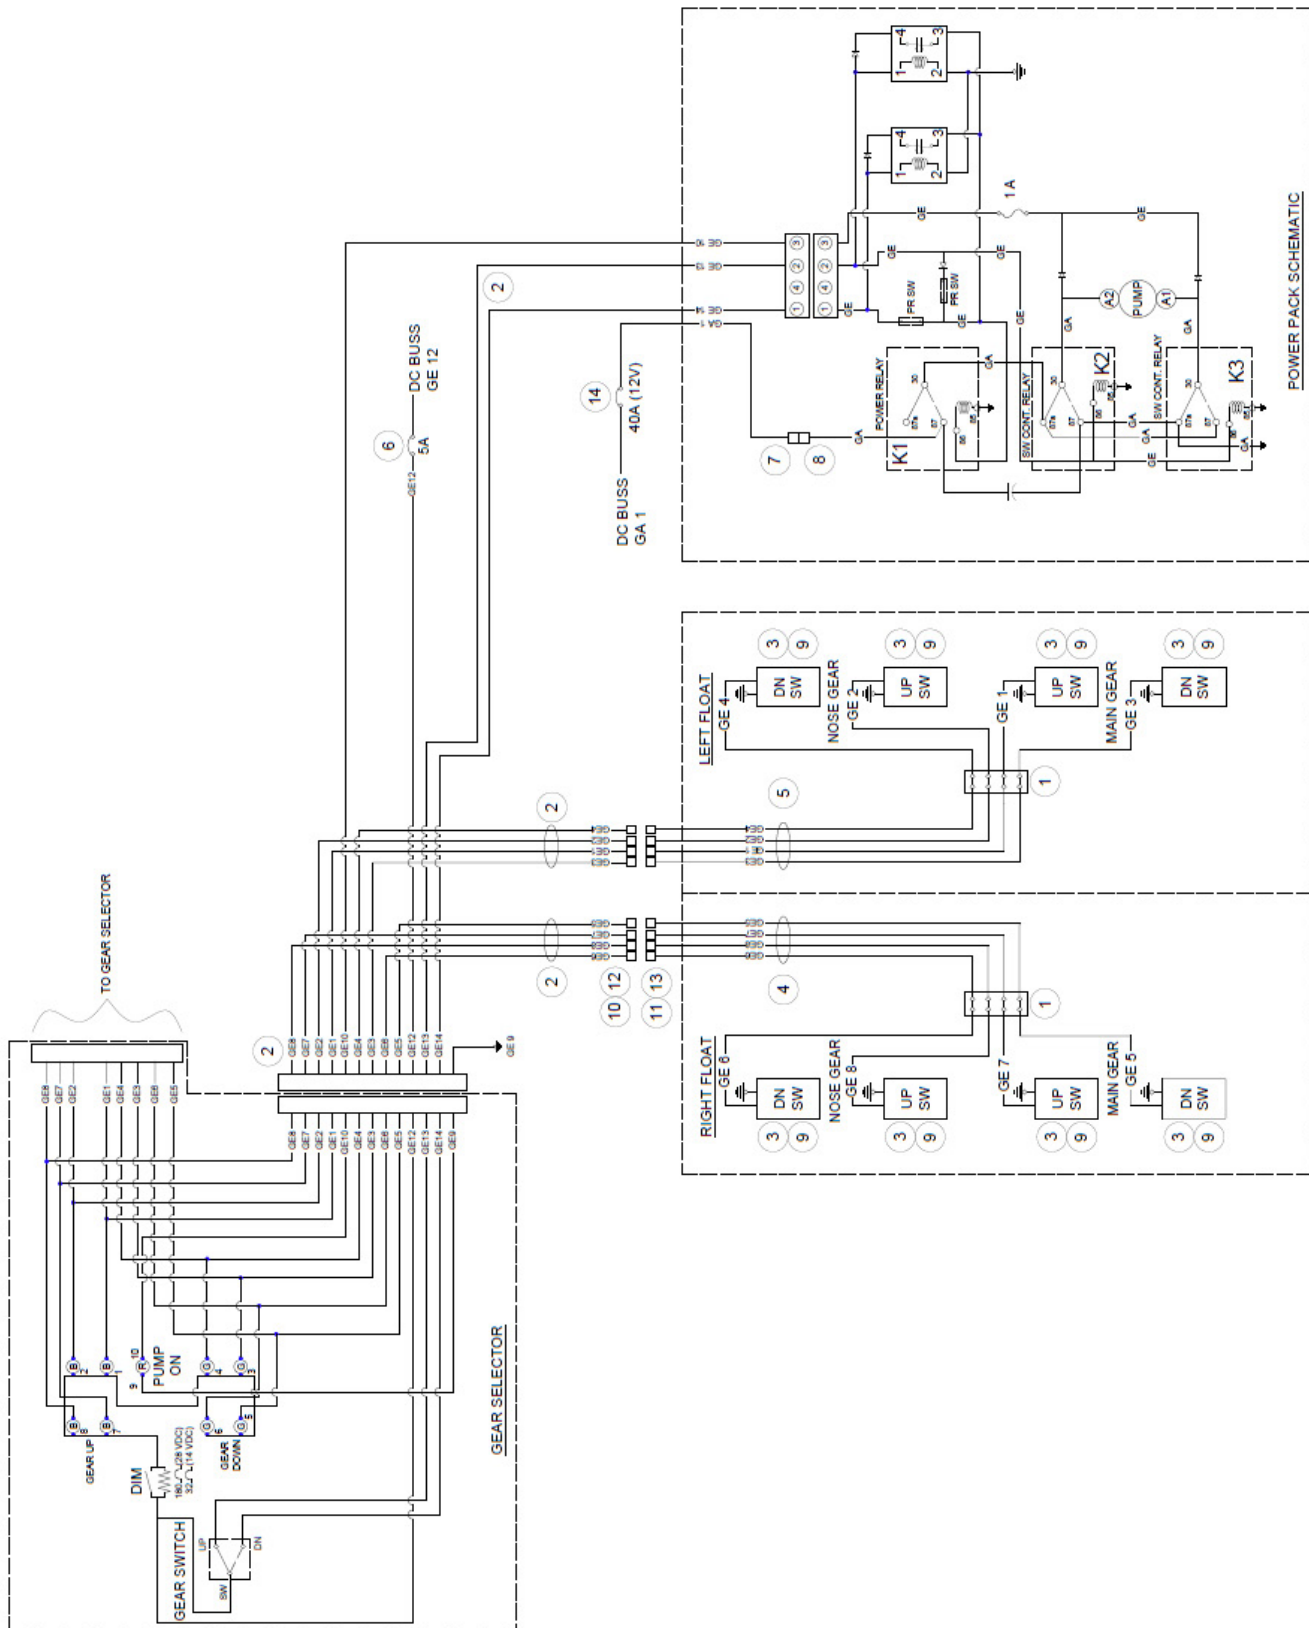

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1	2	4-140	TERMINAL BLOCK, 4 POSITION
2	1	4A11000-011	WIRE HARNESS, GEAR SELECTOR, FLOATS, HYD. PUMP
3	8	5801	GEAR POSITION SWITCH, PROXIMITY, MAGNETIC
4	1	6A10000-004	WIRE HARNESS, LEFT FLOAT
5	1	6A10000-005	WIRE HARNESS, RIGHT FLOAT
6	1	7277-2-5	CIRCUIT BREAKER, 5 AMP
7	1	73F-250-32-NL	CONNECTOR, FEMALE, 12-10 AWG
8	1	73M-250-32-NL	CONNECTOR, MALE, 12-10 AWG
9	8	21A09005-262	CLIP, GEAR POSITION SWITCH HOLDER
10	8	S1635-1	PIN
11	8	S1636-1	SOCKET
12	8	S1637-1	HOUSING
13	8	S1637-2	HOUSING
14	1	W23-X1A1G-25	CIRCUIT BREAKER, 25 AMP, 24 VDC
15	1	W23-X1A1G-40	CIRCUIT BREAKER, 40 AMP, 12 VDC


ELECTRICAL SCHEMATIC PRE SERVICE LETTER 222

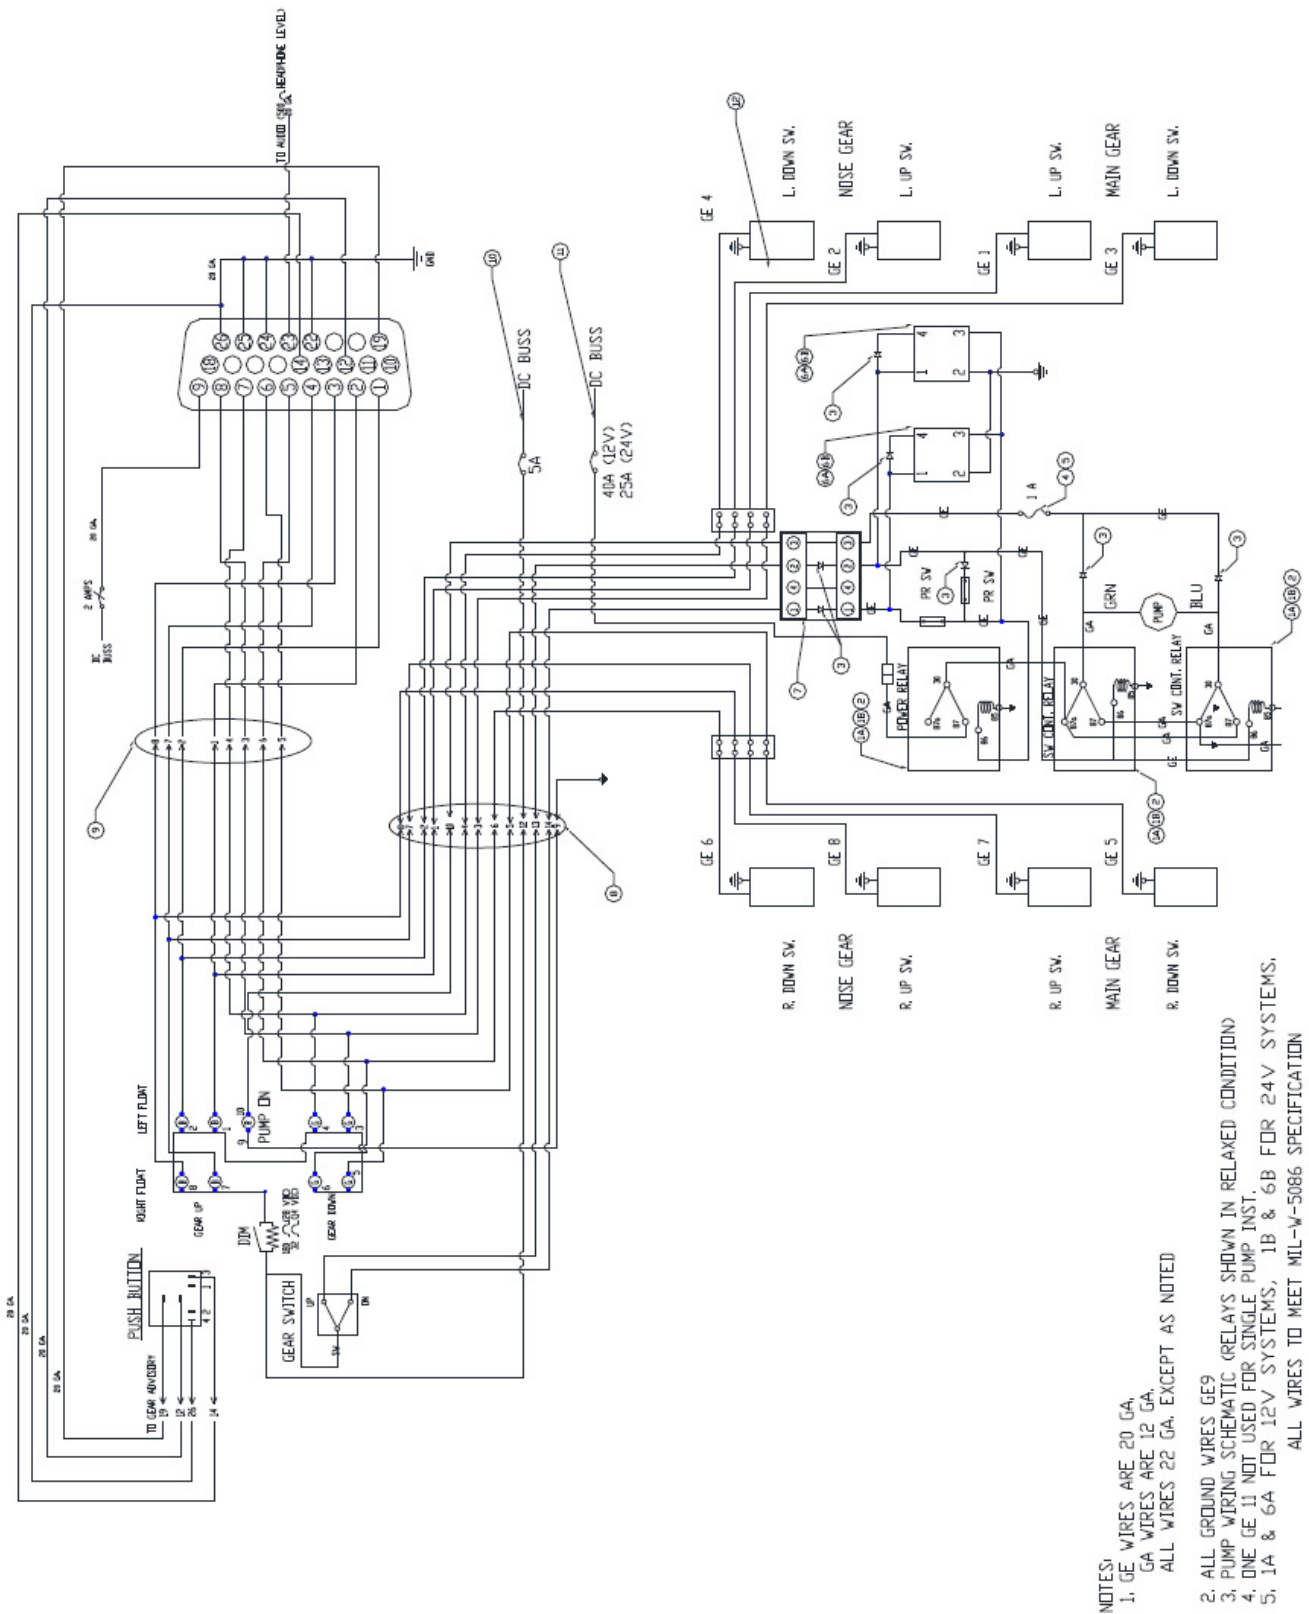

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
1A	3	0-332-209-211	RELAY 12V
1B	3	0-332-209-137	RELAY 24V
2	3	BR05FW	RELAY SOCKET
3	7	1N4004	DIODE
4	1	AGC-1	FUSE 1 AMP
5	1	3453LF2A	FUSE HOLDER
6A	1	1005042	ASSEMBLY, TIMER RELAY 12V
6B	2	1005043	ASSEMBLY, TIMER RELAY 24V
7	1	1004949	DIODE CABLE ADAPTOR
8	1	4A11000-014	WIRE HARNESS
9	1	4A11000-012	WIRE HARNESS
10	1	5 AMP	CIRCUIT BREAKER
11	1	40 AMP	CIRCUIT BREAKER (12V)
	1	25 AMP	CIRCUIT BREAKER (24V)
12	8	5801	SWITCH – PROXIMITY - MAGNETIC
	8	21A09005-262	CLIP – SWITCH HOLDER




GEAR CONTROL (ROUND)

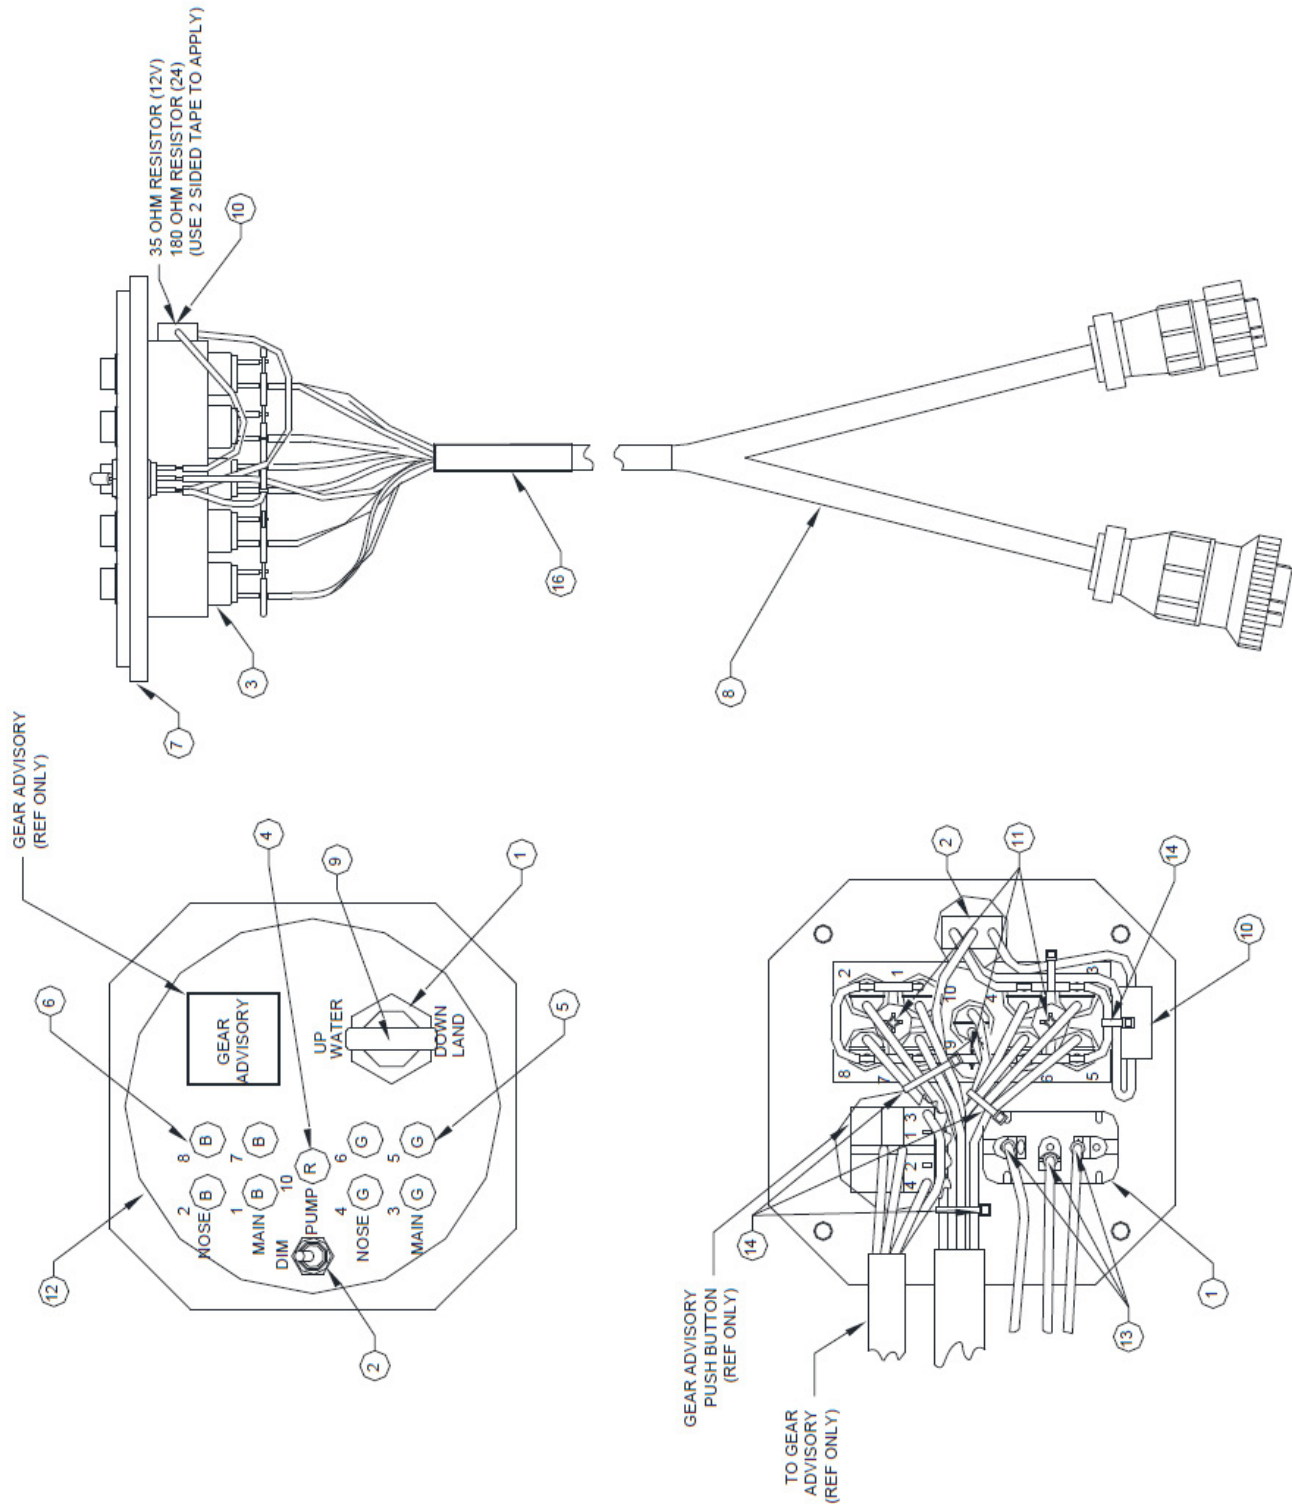

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	21A11000-009	GEAR SELECTOR ASSY. ROUND (12V)
-	1	21A11000-019	GEAR SELECTOR ASSY. ROUND (24V)
1	1	8857K44	SWITCH
2	1	A101SYCB	TOGGLE SWITCH, SPDT, ON-ON
3	9	515-0012	SOCKET
4	1	507-3914-1431-600F	INDICATOR LAMP, 14V, RED
	1	507-3918-1431-600F	INDICATOR LAMP, 28V, RED
5	4	507-3914-1432-600F	INICATOR LAMP, 14V, GREEN
	4	507-3918-1432-600F	INICATOR LAMP, 28V, GREEN
6	4	507-3914-1434-600F	INDICATOR LAMP, 14V, BLUE
	4	507-3918-1434-600F	INDICATOR LAMP, 28V, BLUE
7	1	21A11179-001	BLOCK, GEAR CONTROL
8	1	4A11000-008	HARNESS ASSEMBLY, GEAR SELECTOR
9	1	21A11259-003	GEAR SWITCH KNOB
10	1	RH-5-35	RESISTOR, 14V, DALE RH5 5W
	1	RH-5-180	RESISTOR, 28V, DALE RH5 5W
11	3	AN526-632R8	SCREW, TRUSS HEAD, 6-32
12	1	10B3-6202	PLACARD, ROUND2100 GEAR SELECTOR
13	3	R-3	RING CONNECTOR, #6, 20 AWG, RED
14	5	PLT1M-M	CABLE TIE
15	16 IN	HIXR-3/16	SHRINK WRAP, 3/16, WHITE
16	3 IN	HS105-1/2-0	HEAT SHRINK TUBING
17	6 IN	22759-16-20-9	WIRE, 20AWG, WHITE

GEAR CONTROL (RECTANGLE)

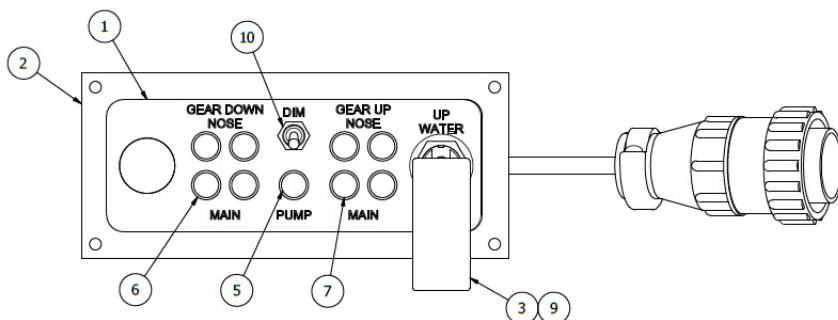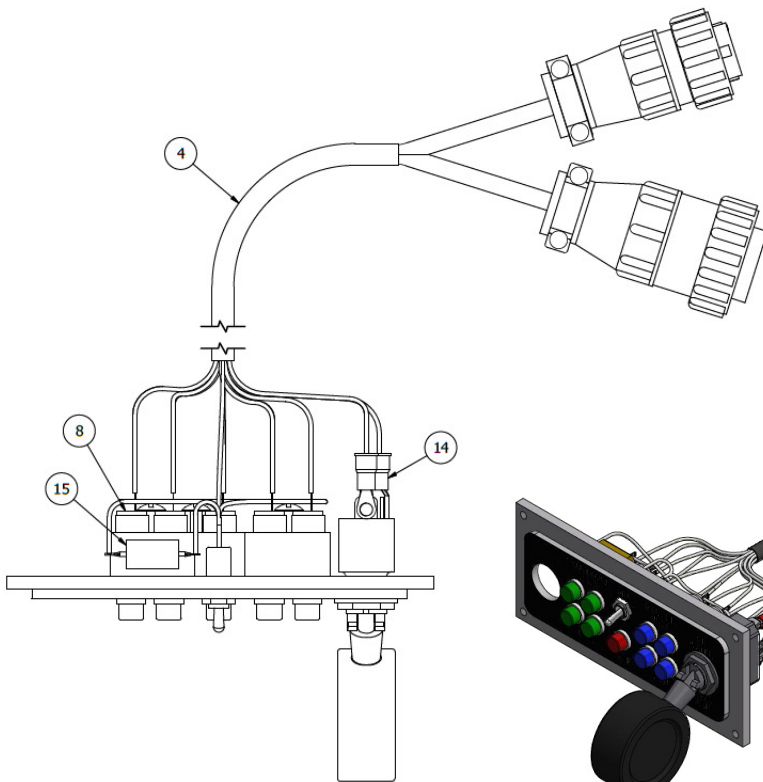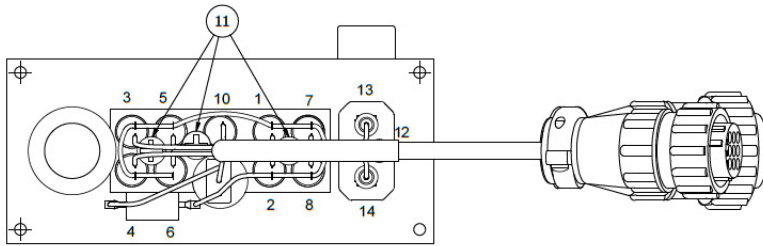

PARTS MANUAL
3000 FLOATS ON MAULE

ITEM	QTY	PART NO.	PART DESCRIPTION
-	1	21A11000-010	ASSEMBLY, INDICATOR, GEAR CONTROL, SQUARE, 12V
-	1	21A11000-018	ASSEMBLY, INDICATOR, GEAR CONTROL, SQUARE, 24V
1	1	10B3-6277	PLACARD, GEAR CONTROL SQUARE
2	1	21A11179-002	BLOCK GEAR CONTROL SQUARE
3	1	21A11259-003	GEAR SWITCH KNOB
4	1	4A11000-008	WIRING HARNESS ASSY. SELECTOR
5	1	507-3914-1431-600F	LAMP LIGHT, RED 14V
	1	507-3918-1431-600F	LAMP, LIGHT, RED, 28V
6	4	507-3914-1432-600F	LAMP LIGHT, GREEN 14V
	4	507-3918-1432-600F	LAMP, LIGHT, GREEN, 28V
7	4	507-3914-1434-600F	LAMP LIGHT, BLUE, 14V
	4	507-3918-1434-600F	LAMP, LIGHT, BLUE, 28V
8	9	515-0012	SOCKET
9	1	8857K44	SWITCH
10	1	A101SYCB	TOGGLE SWITCH
11	3	AN526C632R8	SCREW, TRUSS HEAD MACHINE, 6-32 THREAD, 1/2" LENGTH
12	12"	HS105-3/32-0	HEAT SHRINK, TUBING - BLACK
13	8	PLT1M-M	CABLE TIE, NYLON, WHITE, 4" (SMALL)
14	3	R-3	TERMINAL, RING #6 STUD, 16-22 AWG, RED
15	1	RH-5-35	RESISTOR, 14V, DALE RH5 5W
	1	RH-5-180	RESISTOR, 28V, DALE RH5 5W